

TAB R3

TAB R3 Carpet and Upholstery Spot Cleaner Instruction Manual

Model: R3

1. INTRODUCTION

Thank you for choosing the TAB R3 Carpet and Upholstery Spot Cleaner. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and retain it for future reference.

2. SAFETY INFORMATION

- Always ensure the power cord is undamaged and properly connected to a grounded outlet.
- Do not immerse the appliance in water or other liquids.
- Keep hands, hair, and loose clothing away from moving parts.
- Use only recommended cleaning solutions. Avoid non-neutral detergents.
- Do not inhale solid particles with the cleaner.
- Unplug the appliance before cleaning or performing maintenance.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.

3. PRODUCT OVERVIEW

The TAB R3 is a powerful spot cleaner designed for carpets, upholstery, stairs, and car interiors. It features a dual-tank system for clean and dirty water, ensuring effective cleaning.



Image 3.1: Main unit and included accessories.

Components:

- Main Unit with Motor
- Clean Water Tank (1600 ml / 54 oz capacity)
- Dirty Water Tank (1250 ml / 42.2 oz capacity)
- Flexible Hose (1.8 m / 5.9 ft length)
- Standard Multi-function Brush
- Wide Brush
- T-Brush
- Self-cleaning Brush
- Power Cord (5 m / 16.4 ft length)

Abnehmbarer großer Wassertank

Weniger Nachfüllen, mehr Reinigung!



Image 3.2: Overview of the clean and dirty water tanks with their capacities.

4. SETUP

1. **Unpack the Device:** Carefully remove all components from the packaging.
2. **Attach the Hose:** Connect the flexible hose to the main unit. Ensure it clicks securely into place. The hose is detachable for easy replacement if needed.
3. **Select and Attach Brush:** Choose the appropriate brush for your cleaning task (standard, wide, T-brush, or self-cleaning brush) and attach it to the end of the hose handle.
4. **Fill the Clean Water Tank:** Remove the clean water tank (located on the right side of the unit). Fill it with clean water up to the 'MAX' line. For stubborn stains, you may add a suitable, non-foaming cleaning solution according to the solution's instructions. Do not overfill.
5. **Replace the Clean Water Tank:** Securely place the filled clean water tank back onto the main unit.



Image 4.1: Connecting the detachable hose to the main unit.

5. OPERATING INSTRUCTIONS

General Cleaning Steps:

1. **Power On:** Plug the power cord into an electrical outlet. Press the power button on the main unit to turn on the device.
2. **Pre-treat (Optional):** For heavily soiled areas, pre-treat the stain with a suitable cleaning solution before using the machine.
3. **Spray Cleaning Solution:** Hold the nozzle over the stained area. Press the spray trigger on the hose handle to dispense cleaning solution onto the surface.
4. **Scrub and Extract:** Gently scrub the stained area with the brush while simultaneously moving the nozzle slowly over the area. Release the spray trigger and continue to move the nozzle over the wet area to extract the dirty water. Repeat as necessary until the stain is removed and the water extracted appears clean.
5. **Empty Dirty Water Tank:** When the dirty water tank reaches its 'MAX' line, or after each cleaning session, turn off the device and unplug it. Remove the dirty water tank (located on the left side of the unit) and empty its contents. Rinse the tank thoroughly before replacing it.
6. **Power Off:** After cleaning, turn off the device and unplug it from the power outlet.

Applications:

- **Carpets and Rugs:** Use the standard or wide brush for general carpet cleaning. The 18KPa suction penetrates up to 5 cm deep.
- **Upholstery and Sofas:** Use the standard or T-brush for delicate fabrics like velvet or general upholstery.
- **Car Interiors:** The 1.8m long hose and various brushes are ideal for cleaning car seats and floor mats.
- **Stairs:** The compact design and flexible hose make it suitable for cleaning carpeted stairs.

18Kpa Superstarke Saugleistung

Lassen Sie sich überraschen: Tiefenreinigung hartnäckiger Flecken in Minuten!



Image 5.1: Demonstrating the powerful 18KPa suction removing a stain from a carpet.

Multifunktionale austauschbare

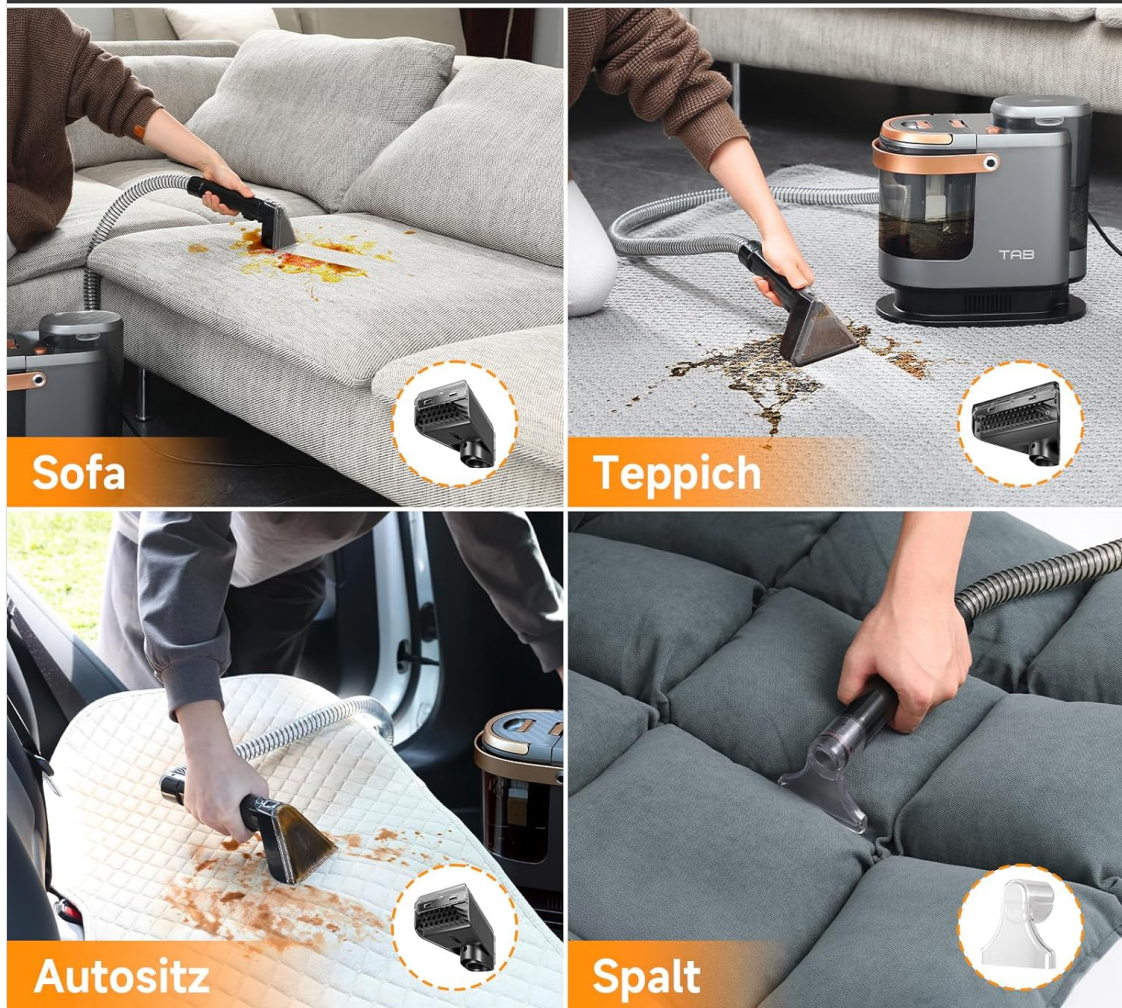


Image 5.2: Versatile cleaning applications for sofas, carpets, car seats, and crevices.

Keine Sorge wegen Haustier-Missgeschicke.



Image 5.3: Effective removal of pet-related stains and messes.

6. MAINTENANCE

After Each Use:

1. **Empty and Rinse Tanks:** Always empty and thoroughly rinse both the clean and dirty water tanks with fresh water. Allow them to air dry before reassembling.
2. **Clean the Hose:** Use the self-cleaning brush attachment. Fill the clean water tank with clean water, attach the self-cleaning brush, and run the device for a few seconds, spraying and sucking clean water through the hose to flush out any residue.
3. **Clean Brushes/Nozzles:** Detach and rinse all used brushes and nozzles under running water. Ensure no debris is lodged in the spray or suction openings.
4. **Wipe Down Unit:** Wipe the exterior of the main unit with a damp cloth.

Storage:

Store the TAB R3 in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure all tanks are empty and dry before storage.

Selbstreinigendes Schlauchwerkzeug



Image 6.1: The self-cleaning hose tool for easy maintenance.



Image 6.2: Proper storage of the TAB R3 unit.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power cord not plugged in; outlet not working; power button not pressed.	Ensure cord is securely plugged in. Test outlet with another device. Press power button firmly.
No spray	Clean water tank empty; spray nozzle clogged; tank not seated correctly.	Refill clean water tank. Clean spray nozzle. Re-seat clean water tank.
Poor suction	Dirty water tank full; hose/nozzle clogged; dirty water tank not seated correctly; hose damaged.	Empty dirty water tank. Clear any blockages in hose or nozzle. Re-seat dirty water tank. If hose is damaged, contact support for replacement.
Water leaking	Tanks not properly sealed; hose connection loose; hose damaged.	Ensure both tanks are securely in place and lids are tight. Check hose connection. If hose is damaged, contact support for replacement.
No steam function	The TAB R3 is a spot cleaner with spray and suction, it does not feature a steam function.	No action required. This model does not produce steam.

8. SPECIFICATIONS

- **Brand:** TAB
- **Model:** R3
- **Rated Voltage:** 230 V
- **Suction Power:** 18 KPa
- **Rated Power:** 600 W
- **Clean Water Tank Capacity:** 1600 ml (54 oz)
- **Dirty Water Tank Capacity:** 1250 ml (42.2 oz)
- **Power Cord Length:** 5 m (16.4 ft)
- **Hose Length:** 1.8 m (5.9 ft)
- **Noise Level:** ≤80 dB
- **Dimensions:** 42.6 x 34.9 x 20.5 cm
- **Item Weight:** 4.72 kg
- **Power Source:** Corded Electric

18KPa

Saugleistung

54 Unzen

Sauberer Wassertank

≤80dB

Geräuscharmer Betrieb

42 Unzen

Schmutziger Wassertank

600W

Nennleistung

5.6FT

langer Schlauch








9. WARRANTY AND SUPPORT

TAB is committed to providing quality products. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims. If you encounter any issues with your TAB R3 cleaner, such as a broken hose, please contact our customer support for assistance. We will be happy to send you a replacement for damaged components where applicable.

For further support or inquiries, please refer to the contact information provided with your purchase or visit the official TAB website.

© 2024 TAB. All rights reserved.

Related Documents - R3

	<p>TAB R6 Carpet Cleaner Machine User Manual</p> <p>User manual for the TAB R6 Carpet Cleaner Machine, providing comprehensive instructions for safe operation, maintenance, and troubleshooting.</p>
	<p>TAB R6 Carpet Cleaner Machine User Manual</p> <p>Comprehensive user manual for the TAB R6 Carpet Cleaner Machine, covering safety instructions, product introduction, preparation, operating instructions, maintenance, and troubleshooting.</p>
	<p>TAB T6-Pro Smart Cordless Wet Dry Vacuum Cleaner and Mop User Manual</p> <p>Comprehensive user manual for the TAB T6-Pro Smart Cordless Wet Dry Vacuum Cleaner and Mop, covering safety instructions, assembly, operation, maintenance, and troubleshooting.</p>
	<p>EG200/EG300 Series Product Information and Refurbished Item Guide</p> <p>Information regarding EG200 and EG300 series products, including notes on accessories, model variations, and guidelines for refurbished units. This document serves as an instruction or support guide.</p>
	<p>TAB EG200/EG300 Series Product Information and Notes</p> <p>Overview of TAB EG200, EG300 series products, including models EG201, EG351, and EG351A. This document provides general information and important notes regarding accessories, illustrative images, and the handling of refurbished units.</p>



[TAB e.module L5.1 Lithium-ion Energy Storage System Operation Manual](#)

This manual provides comprehensive instructions for the installation, operation, and safety precautions for the TAB e.module L5.1 Lithium-ion Energy Storage System. Learn about its features, specifications, front panel controls, and proper handling procedures.