

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hangrui](#) /

› [Hangrui Kids Instant Print Digital Camera C11 User Manual](#)

Hangrui C11

Hangrui Kids Instant Print Digital Camera C11 User Manual

Model: C11 | Brand: Hangrui

INTRODUCTION

Welcome to the Hangrui Kids Instant Print Digital Camera C11. This manual provides essential information for setting up, operating, and maintaining your camera. Please read it thoroughly to ensure proper use and longevity of the device.

PACKAGE CONTENTS

- 1 x Hangrui Kids Instant Print Digital Camera
- 1 x 32 GB Micro SD Card
- 3 x Print Paper Rolls
- 5 x Color Pencils
- 1 x Lanyard
- 1 x USB Charging Cable
- 1 x Cartoon Sticker Sheet
- 1 x User Manual (this document)



Figure 1: All items included in the Hangrui Kids Instant Print Digital Camera C11 package.

PRODUCT OVERVIEW

The Hangrui C11 is designed for children aged 3-12, offering instant black and white photo printing without ink. It features a 2.4-inch IPS screen, 12MP photo resolution, 1080P HD video recording, and various creative functions.

Key Features

- Instant Black and White Photo Printing (Ink-free)
- 12 Megapixel (MP) Photo Resolution
- 1080P High-Definition (HD) Video Recording
- 2.4-inch IPS Color Screen
- Multiple Shooting Modes: Original Photo, Video, Timed Photo, Continuous Shooting
- 10x Optical Zoom
- Variety of Filters and Cartoon Photo Frames
- Built-in Music Player (MP3)
- 3 Pre-installed Puzzle Games
- Integrated 1000 mAh Rechargeable Lithium Battery
- Includes 32 GB Micro SD Card for Storage

- Creative DIY Options: Color printed photos with included pencils and stickers



Figure 2: Visual representation of the camera's main features.

SETUP

1. Charging the Camera

Connect the provided USB cable to the camera's charging port and a compatible USB power adapter. The charging indicator will illuminate. A full charge typically takes approximately 2-3 hours.

2. Inserting the Micro SD Card

Locate the micro SD card slot on the side of the camera. Gently insert the 32GB micro SD card (included) until it clicks into place. Ensure the camera is powered off before inserting or removing the SD card.

3. Installing Print Paper

1. Pull open the film door on the front of the camera.
2. Insert a roll of print paper, ensuring about 1-2 inches of paper extends out.
3. Close the film door securely.
4. Enter the camera function and press the "Print" button (usually indicated by a printer icon) on the screen to switch to print mode.



Figure 3: Step-by-step guide for installing print paper.

OPERATING INSTRUCTIONS

Power On/Off

Press and hold the power button (usually located on the back or top) for a few seconds to turn the camera on or off.

Taking Photos

Navigate to the photo mode using the directional buttons. Frame your shot on the 2.4-inch IPS screen. Press the shutter button (usually on top) to capture a photo.

Your browser does not support the video tag.

Video: This video demonstrates the process of taking a photo and instantly printing it from the camera. It highlights the ease of use for children and the immediate gratification of a physical print.

Instant Printing

After taking a photo, the camera can instantly print a black and white version. You can adjust print density (0-4) in the settings menu to improve print quality for different situations.

2 Print Modes & 5 Print Density

Press the print button, photo will be printing fast in a few seconds



Figure 4: Adjusting print density for optimal photo quality.

Video Recording

Select video mode from the main menu. Press the shutter button to start and stop recording 1080P HD videos.



Figure 5: Video recording and advanced shooting options.

Special Features

Photo Frames and Filters

The camera includes various cartoon photo frames and filters to enhance creativity. Navigate through options using directional buttons.



Figure 6: Creative photo frames and filters.

Zoom Function

Utilize the 10x optical zoom to capture distant subjects. The camera also supports up to 16x digital zoom.

Timed Photo & Continuous Shooting

Set a timer for delayed photos (3s/5s/10s options) or enable continuous shooting for action sequences.

Games and Music Player

The camera includes 3 puzzle games for entertainment. An MP3 player function allows for music playback (requires music files on the SD card).



Figure 7: Games and music player interface.

Maintenance

Replacing Print Paper

Follow the paper installation steps outlined in the Setup section when the current roll is depleted.

Transferring Files

Connect the camera to a computer using the USB cable to transfer photos and videos. Alternatively, remove the micro SD card and use a card reader (not included) to access files.

Cleaning

Use a soft, dry cloth to clean the camera body and screen. Avoid abrasive cleaners or liquids.

Troubleshooting

- Camera not turning on:** Ensure the battery is charged. Connect to a power source using the USB cable.
- Photos not printing:** Check if print paper is installed correctly and if there is enough paper. Verify print mode is active.
- Poor print quality:** Adjust print density in the camera settings. Ensure the paper is correctly loaded.
- SD card error:** Reinsert the SD card. If the issue persists, try formatting the card (this will erase all data) or use a different SD card.

Specifications

Feature	Detail
Model	C11
Brand	Hangrui

Photo Resolution	12 MP
Video Resolution	1080p
Screen Size	2.4 Inches
Optical Zoom	10x
Battery Capacity	1000 Milliamp Hours
Memory	32 GB (Micro SD Card included)
Connectivity	USB
Material	Plastic
Color	White Green
Image Stabilization	Digital
Supported File Format	JPEG, MP4
Age Range Description	Kid

SAFETY INFORMATION


- This product contains small parts and is not suitable for children under 3 years of age due to choking hazard.
- Do not put the product near fire.
- This is a camera toy and not a high-end professional camera.
- The camera is not water resistant. Avoid exposure to water or excessive moisture.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Hangrui website. Keep your proof of purchase for any warranty claims.

Related Documents - C11

	C11 Wireless Earbuds User Manual Comprehensive user manual for C11 Wireless Earbuds, covering setup, pairing, usage, troubleshooting, and specifications. Learn how to connect, control music and calls, and maintain your earbuds for optimal performance.
---	--

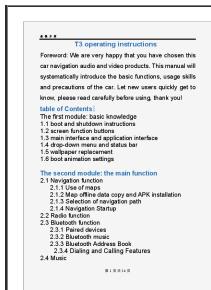

[T3 Operating Instructions: Your Guide to Car Navigation and Audio](#)

Comprehensive operating instructions for the T3 car navigation and audio system. Learn about basic functions, navigation, radio, Bluetooth, music, video, and settings.



[C11 Headset User Manual and FCC Compliance](#)

User manual and FCC compliance information for the C11 Headset by Dongguan Xinboyue Intelligent Technology Co., Ltd. Includes operational guidelines and regulatory statements.



[MG-C11 True Wireless Earphones User Manual](#)

User manual for the MG-C11 True Wireless Earphones by Shanghai Weihonghang Culture Communication Co., Ltd. Includes instructions, specifications, and troubleshooting.



[BAFANG DP C11.CAN User Manual - E-bike Display Operations and Settings](#)

Comprehensive user manual for the BAFANG DP C11.CAN LCD display for e-bikes. Covers important notices, product description, display functions, settings, information, and error code definitions.



[C11 True Wireless Earbuds User Manual](#)

User manual for the C11 True Wireless Earbuds by DONG GUAN BINSHI ELECTRONIC TECHNOLOGY CO., LTD. Includes product specifications, pairing instructions, controls, charging information, and safety guidelines.