

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› **VOLISUN /**

› VOLISUN 44-inch Low Profile Ceiling Fan with Light (Model 21378ZM) Instruction Manual

VOLISUN 21378ZM

VOLISUN 44-inch Low Profile Ceiling Fan with Light (Model 21378ZM) Instruction Manual

Model: 21378ZM | Brand: VOLISUN

1. INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your VOLISUN 44-inch Low Profile Ceiling Fan with Light. Please read all instructions carefully before beginning installation and retain this manual for future reference.



Image 1: VOLISUN 44-inch Low Profile Ceiling Fan with Light, showcasing its sleek black design with five blades and an integrated LED light. A remote control and two blade color options (black and wood grain) are also visible.

2. SAFETY INFORMATION

Always follow basic safety precautions when installing and operating electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure power is disconnected at the circuit breaker before installation or servicing.
- All wiring must be in accordance with national and local electrical codes.
- Consult a qualified electrician if you are unsure about wiring procedures.
- Mount the fan to a ceiling outlet box marked 'Acceptable for Fan Support of 35 lbs (15.9 kg) or less'.
- Do not bend blade holders during installation or cleaning.
- Keep hands clear of fan blades when the fan is operating.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Motor Housing
- Fan Blades (5)

- Blade Brackets (5)
- Downrod
- Canopy
- Mounting Bracket
- LED Light Kit
- Remote Control
- Hardware Pack (screws, washers, wire nuts, etc.)

4. INSTALLATION

4.1 Pre-Installation

- Turn off power at the circuit breaker.
- Ensure the mounting location is suitable for a ceiling fan.
- Unpack all components and lay them out for easy access.

4.2 Assembly Steps

1. Attach the fan blades to the blade brackets using the provided screws.
2. Secure the assembled blade and bracket units to the motor housing.
3. Connect the LED light kit wiring and attach the light kit to the motor housing.
4. Assemble the downrod with the canopy and secure it to the motor housing.
5. Install the mounting bracket to the ceiling outlet box.
6. Hang the fan assembly onto the mounting bracket, ensuring the groove in the downrod ball aligns with the ridge on the hanger bracket.
7. Connect the fan's electrical wires to the household wiring (Live, Neutral, Ground).
8. Secure the canopy to the mounting bracket.

For a visual guide, please refer to the official installation video:

Video 1: Official VOLISUN guide demonstrating the assembly and installation process of the ceiling fan, including attaching blades, connecting the light kit, and mounting the fan to the ceiling.

5. OPERATING INSTRUCTIONS

Your VOLISUN ceiling fan is operated via the included remote control.

5.1 Remote Control Functions

- **Power On/Off:** Turns the fan and light on or off.
- **Fan Speed:** Adjusts between 6 wind speed options (gentle breeze to strong airflow).
- **Light On/Off:** Toggles the LED light.
- **Light Brightness:** Dims the light from 10% to 100%.
- **Color Temperature (3CCT):** Cycles through 3000K (warm white), 4000K (neutral white), and 6000K (cool white).
- **Reversible Function:** Changes the direction of fan rotation for summer (downward airflow) or winter (upward airflow).
- **Timer:** Sets the fan to turn off automatically after 1, 2, 4, or 8 hours.
- **Nature Mode:** Simulates natural wind by varying fan speeds.

Volisun

CUSTOMIZABLE LIGHT

Meet your lighting needs 



10%-100% Dimmable

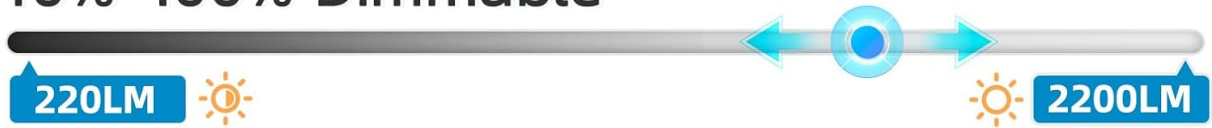


Image 2: Illustration of the fan's customizable light feature, showing three color temperature options (3000K, 4000K, 6000K) and a dimmable range from 10% to 100% (220LM to 2200LM).

Volisun

6 Speeds Adjustable



- Level 1-2**
LOW Comfortable wind
- Level 3-4**
Medium Natural wind
- Level 5-6**
High Cooling wind

Image 3: Visual representation of the fan's 6 adjustable wind speeds, categorized into low (Level 1-2), medium (Level 3-4), and high (Level 5-6) settings for various comfort levels.

SUITABLE FOR ALL SEASONS

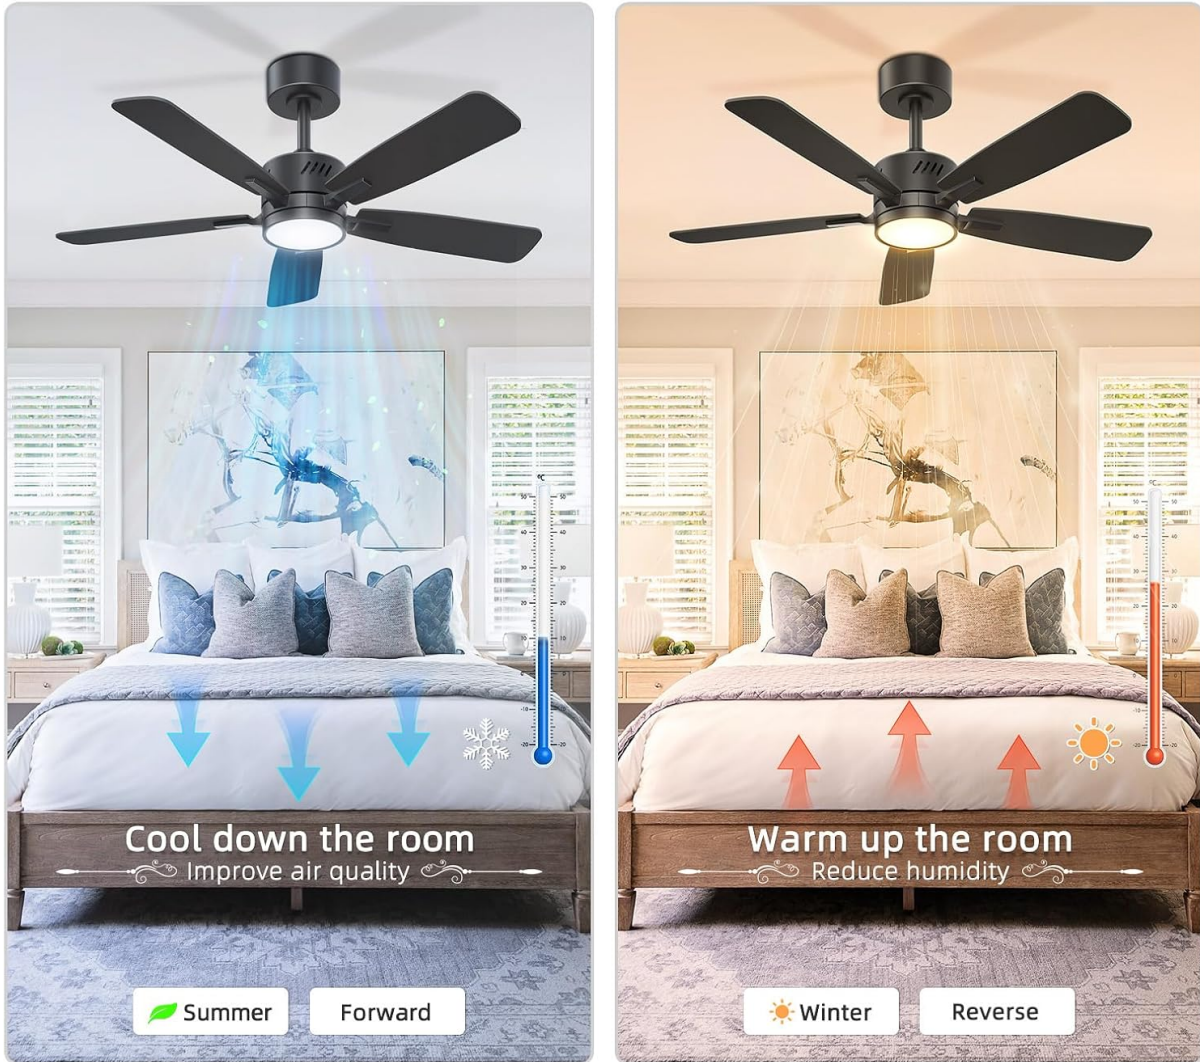


Image 4: Diagram illustrating the reversible function for year-round use, showing downward airflow for cooling in summer and upward airflow for warming in winter.

5.2 Memory Function

The fan features a memory function that recalls your last used fan speed and light settings (color temperature and brightness). To ensure settings are remembered, keep the light off for more than 7 seconds before turning it back on. If the light is turned on again within 7 seconds, the color temperature will cycle to the next setting.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Use a soft, damp cloth to clean the fan blades and motor housing. Do not use abrasive cleaners or solvents.
- **Blade Inspection:** Periodically check that all blade screws are tight. Loose screws can cause wobbling and noise.
- **Light Kit:** The integrated LED light is designed for long-term use and does not require bulb replacement.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; loose wire connections; remote control battery low.	Check circuit breaker; ensure all wire connections are secure; replace remote control battery.
Fan wobbles	Loose blade screws; improper blade balance; fan not securely mounted.	Tighten all blade screws; use a balancing kit (not included) to balance blades; ensure mounting bracket is securely fastened.
Light does not work	Loose wire connection to light kit; LED light failure.	Check light kit wiring connections; contact customer support if LED light is faulty.
Remote control not working	Battery low or incorrectly inserted; remote not paired.	Replace battery; ensure correct polarity; refer to remote pairing instructions (usually involves pressing a button within a few seconds of turning on power).

8. SPECIFICATIONS

Feature	Detail
Brand	VOLISUN
Model Name	44in Ceiling Fan with light (21378ZM)
Size	44 inches
Color	Black
Material	Acrylonitrile Butadiene Styrene, Aluminum
Room Type	Bedroom, Kids Room, Kitchen, Living Room, Outdoor Patio
Product Dimensions	42"L x 42"W x 17.3"H
Power Source	DC
Voltage	110 Volts
Wattage	32 watts
Light Source Type	LED
Brightness	2200 Lumens
Light Color	Warm white, Cool white (3CCT)
Control Method	Remote Control
Special Features	6 wind speeds, Reversible fan, Dimmable, Dual memory function, Low profile
Item Weight	8.4 Pounds

VotSun


SHOWROOM



ROOM SIZE

10ft.x10ft – 18ft.x18ft

 Image 5: Diagram illustrating the recommended room size for optimal fan performance, suggesting 10ft x 10ft to 18ft x 18ft rooms with ceiling heights of 9-12ft.

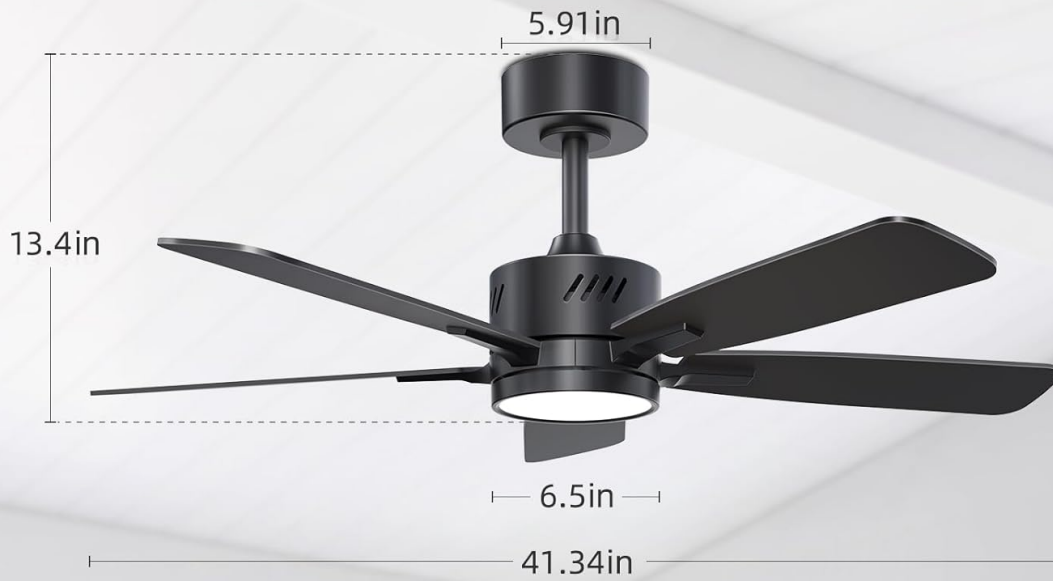

Two Colors Available

Choose the color that suits your home style



Image 6: Detailed dimensions of the ceiling fan (e.g., 41.34 inches width, 13.4 inches height) and a visual of the two available blade colors: black and wood grain.

9. WARRANTY & SUPPORT

VOLISUN provides a 2-year service warranty for this ceiling fan light fixture. This warranty covers defects in materials and workmanship under normal use. For warranty claims or technical support, please contact VOLISUN customer service.