

## Homdox 250W

# Homdox 250W Electric Cheese Grater and Slicer Shredder Instruction Manual

Model: 250W

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always ensure the appliance is unplugged before assembling, disassembling, or cleaning.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Do not immerse the motor base in water or any other liquid. Clean with a damp cloth only.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only attachments recommended or sold by the manufacturer.
- Avoid processing excessively hard foods that may damage the blades or motor.
- This appliance is not suitable for moist and soft items such as dried mangoes, raisins, or other dried fruits, as these can clog the blades.

## 2. PACKAGE CONTENTS

---

Verify that all items are included in your package:

- Electric Grater Motor Base
- Feeding Tube Assembly
- Food Pusher
- 5 Interchangeable Stainless Steel Cones:
  - Fine Shredder Cone

- Coarse Shredder Cone
- Thin Slicer Cone
- Thick Slicer Cone
- Chopped Blade Cone (Grinding Cone)

### 3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Homdox Electric Cheese Grater.



**Figure 3.1:** Main components of the electric grater, highlighting the safe operation features, detachable design for easy cleaning, and the one-touch control button.

The unit features a robust motor base, a transparent feeding tube with a food pusher, and a selection of five specialized cones for various food preparation tasks. The design prioritizes ease of use and safety with a simple one-touch control and detachable parts for cleaning.

### 4. SETUP AND ASSEMBLY

Follow these steps to correctly assemble your electric grater before use:



**1** Tilt the feeding tube 30° to the right and insert it into the machine.



**2** Turn counterclockwise to tighten the feeding tube.



**3** Insert the cutting accessory and fix it.



**4** Press the power button, put the food into the feeding tube and push it.

Figure 4.1: Step-by-step assembly process.

- 1. Attach the Feeding Tube:** Tilt the feeding tube assembly 30 degrees to the right and insert it into the machine's main body.
- 2. Secure the Tube:** Turn the feeding tube counter-clockwise until it locks securely into place.
- 3. Insert Cutting Cone:** Select the desired cutting cone and insert it into the feeding tube, ensuring it is properly seated.
- 4. Prepare for Operation:** Place a bowl or plate under the output chute. Insert food into the feeding tube and use the food pusher to guide it. Press the power button to begin operation.

## 5. OPERATING INSTRUCTIONS

The Homdox Electric Grater is designed for efficient slicing, shredding, and grinding of various foods. Ensure the appliance is properly assembled and plugged into a suitable power outlet before use.

### General Operation:

- Prepare food by cutting it into pieces that fit comfortably into the feeding tube (2.8 inches diameter).
- Select the appropriate cone for your desired task and insert it into the feeding tube.
- Place a container beneath the output chute to collect processed food.
- Turn on the appliance using the one-touch control button.
- Gently push the food down the feeding tube using the food pusher. Do not force food into the tube.
- Once finished, turn off the appliance and unplug it from the power source.

### Using the Interchangeable Cones:



Figure 5.1: Thick Slicer Cone for carrots, eggplant, and loofah.

- **Thick Slicer Cone:** Ideal for creating thicker slices of vegetables such as carrots, eggplant, and loofah.



Figure 5.2: Thin Slicer Cone for cucumbers, potatoes, and lotus root.

- **Thin Slicer Cone:** Perfect for producing delicate, thin slices of items like cucumbers, potatoes, and lotus root.



Figure 5.3: Coarse Shredder Cone for potatoes, cheese, and carrots.

- **Coarse Shredder Cone:** Suitable for coarse shredding of vegetables like potatoes and carrots, or hard cheeses.

# Thickslices / Thin Slicing Blade

Suitable for cucumber, potato, cheese, carrot, onion, etc.



Figure 5.4: Fine Shredder Cone for finely shredded potatoes, carrots, and onions.

- **Fine Shredder Cone:** For finely shredded ingredients such as potatoes, carrots, and onions.



Figure 5.5: Chopped Blade Cone for grinding nuts, peanuts, and chocolate.

- **Chopped Blade Cone (Grinding Cone):** Best for grinding hard ingredients like nuts, peanuts, and chocolate. Not suitable for moist or soft items.

## 6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your appliance.

### Cleaning Steps:

1. **Unplug:** Always ensure the appliance is unplugged from the power outlet before cleaning.
2. **Disassemble:** Carefully remove the food pusher, feeding tube, and the cutting cone from the motor base.
3. **Wash Removable Parts:** Rinse the removable parts (feeding tube, food pusher, and cutting cones) under running water. Use a mild dish soap and a brush if necessary to remove any food residue.
4. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing.
5. **Clean Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water.

**Note: The appliance is NOT dishwasher safe. Hand washing is recommended for all removable parts.**

---

## 7. STORAGE

The compact design of the Homdox Electric Grater allows for easy storage.

- Ensure the appliance is clean and dry before storing.
- Store the unit and its accessories in a cool, dry place, away from direct sunlight and moisture.
- The interchangeable cones can be stored together for convenience.

---

## 8. TROUBLESHOOTING

If you encounter any issues with your Homdox Electric Grater, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; unit not assembled correctly.	Check power cord connection. Test outlet with another appliance. Ensure feeding tube is securely locked.
Food is not processing efficiently or gets stuck.	Incorrect cone used; food pieces too large; food is too soft/moist.	Ensure the correct cone is selected for the food type. Cut food into smaller, manageable pieces. Avoid processing soft or moist foods that can clog the blades. Do not force the food pusher.
Unusual noise during operation.	Cone not properly seated; foreign object inside.	Turn off and unplug the unit. Check that the cone is correctly installed. Inspect for any foreign objects.

If the problem persists after attempting these solutions, please contact customer support.

---

## 9. SPECIFICATIONS



Figure 9.1: Product dimensions and cone sizes.

- **Brand:** Homdox
- **Model:** 250W Electric Cheese Grater
- **Power:** 250W
- **Color:** Ivory
- **Material:** Stainless Steel (blades), Plastic (housing)
- **Product Dimensions:** Approximately 40"L x 4.5"W x 11"H (Note: This dimension seems unusually large for a grater, likely a typo in source data. Actual product image suggests smaller dimensions.)
- **Item Weight:** 4.88 pounds
- **Dishwasher Safe:** No (Hand wash recommended)

## 10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact the retailer/manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Homdox

© 2024 Homdox. All rights reserved.