

- Manuals.plus /
- > Greesum /
  - > Greesum 3-Piece Outdoor Wicker Rocking Chair Set Instruction Manual

Greesum LCRF0317

# Greesum 3-Piece Outdoor Wicker Rocking Chair Set Instruction Manual

Model: LCRF0317

## 1. PRODUCT OVERVIEW

Thank you for choosing the Greesum 3-Piece Outdoor Wicker Rocking Chair Set. This set includes two comfortable rocking chairs and a functional two-tier glass coffee table, designed for outdoor relaxation. The furniture features weather-resistant rattan material and is suitable for various outdoor spaces.



Image: The complete Greesum 3-piece patio furniture set, featuring two wicker rocking chairs with beige cushions and a glass-top coffee table, placed on an outdoor patio.

## 2. SAFETY INFORMATION

Please read and follow all safety instructions carefully to prevent injury and ensure proper use of the product.

- **Assembly:** Ensure all parts are correctly assembled and tightened before use. Do not overtighten screws until all components are aligned.
- **Placement:** Position rocking chairs on a flat, stable surface. Keep them away from edges or uneven ground to prevent tip-overs.
- **Children:** Do not leave children unattended near the furniture. Supervise children to prevent accidents.
- **Weight Limit:** Do not exceed the recommended weight capacity for the chairs.
- **Glass Table:** Handle the glass tabletop with care. Avoid placing excessively hot or heavy items directly on the glass.

### 3. COMPONENTS LIST

---

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- 2 x Rocking Chairs (with cushions)
- 1 x Glass Coffee Table (with glass top)
- Assembly Hardware (screws, washers, Allen wrench)
- Instruction Manual

### 4. SETUP AND ASSEMBLY

---

Assembly is straightforward with the provided tools and instructions. It is recommended to assemble the furniture with another person for ease and safety.

1. **Unpack:** Carefully remove all components from the packaging. Lay them out on a soft, clean surface to prevent scratches.
2. **Identify Parts:** Refer to the parts diagram in the included manual to identify each component.
3. **Initial Assembly (Chairs):** Begin assembling the rocking chairs. Attach the backrest to the seat frame, then connect the armrests. *Important: Insert all screws loosely into their designated holes before fully tightening any of them. This allows for proper alignment of all parts.*
4. **Final Tightening (Chairs):** Once all chair components are loosely connected and aligned, gradually tighten all screws evenly until secure. Do not overtighten.
5. **Cushion Placement:** Place the waterproof cushions onto the assembled chairs.
6. **Coffee Table Assembly:** Assemble the coffee table frame. Attach the lower shelf, then place the glass top onto the frame. Ensure the glass is secured by any provided suction cups.
7. **Final Check:** Verify that all connections are secure and the furniture is stable before use.



Image: A diagram illustrating the dimensions of the rocking chair (38.9" H x 23.6" W x 20.5" D) and the two-tier coffee table (17.7" H x 17.7" W x 17.7" D).

## 5. OPERATING INSTRUCTIONS

The Greesum 3-Piece Outdoor Wicker Rocking Chair Set is designed for comfortable outdoor lounging.

- **Rocking Function:** The chairs feature curved legs that allow for a gentle rocking motion. Sit centrally and push off gently with your feet to initiate rocking.
- **Coffee Table Use:** The two-layer coffee table provides ample space for drinks, snacks, books, or decorative items. The glass top is easy to clean.

## Smooth Rocking Base

Gently forwards and backwards



Easier to maintain  
balance and stability

Image: An illustration demonstrating the rocking motion of the chair, highlighting the non-slip rattan handrail and wear-resistant transparent feet for stability.

## 6. MAINTENANCE

Proper care will extend the life and appearance of your patio furniture set.

- **Cleaning:** Wipe the rattan and metal frames with a damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly.
- **Cushions:** The cushions are waterproof. Clean spills immediately with a damp cloth. For deeper cleaning, remove covers if possible and hand wash with mild soap, then air dry.
- **Glass Top:** Clean the glass tabletop with a standard glass cleaner and a soft cloth.
- **Weather Protection:** While the rattan is weather-resistant, storing the furniture indoors or covering it during harsh weather conditions (heavy rain, snow, extreme sun) will help preserve its condition.
- **Hardware:** Periodically check and tighten all screws and bolts to ensure stability.



**Suction Cups  
for Fixing Glass**



**Waterproof  
Cushion**



**Weather-Resistant  
PE rattan**



Image: Close-up views highlighting the waterproof cushion material, the weather-resistant PE rattan weaving, and the suction cups designed to secure the glass tabletop.

## 7. TROUBLESHOOTING

If you encounter any issues with your Greesum patio furniture set, refer to the following common solutions:

| Problem                            | Possible Cause                    | Solution                                                                             |
|------------------------------------|-----------------------------------|--------------------------------------------------------------------------------------|
| Parts do not align during assembly | Screws were tightened too early.  | Loosen all screws, align the parts, then gradually tighten all screws evenly.        |
| Chair feels wobbly                 | Loose screws or uneven placement. | Check and tighten all assembly screws. Ensure the chair is on a flat, level surface. |

| Problem          | Possible Cause                                | Solution                                                                                                              |
|------------------|-----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| Glass top slides | Suction cups not properly engaged or missing. | Ensure suction cups are clean and firmly pressed onto the glass and frame. Replace missing suction cups if necessary. |

## 8. SPECIFICATIONS

- **Brand:** Greesum
- **Model Number:** LCRF0317
- **Material:** Weather-resistant Rattan
- **Color:** Beige (cushions)
- **Item Weight:** Approximately 44.3 pounds
- **Chair Dimensions:** 20.5 x 23.6 x 38.9 inches (Depth x Width x Height)
- **Coffee Table Dimensions:** 17.7 x 17.7 x 17.7 inches (Length x Width x Height)
- **Included Components:** Two Rocking Chairs, One Coffee Table
- **UPC:** 760606009554

## 9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the purchase documentation or contact Greesum customer service directly. Keep your proof of purchase for any warranty claims.

**Greesum Customer Service:** [Visit the Greesum Store on Amazon](#)

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0CZDYXSQK>

More documents and user manuals: <https://manuals.plus/>