

Anchilly IH-1500

Anchilly IH-1500 Portable Electric Quartz Infrared Space Heater User Manual

1. SAFETY INFORMATION

Please read and understand all safety instructions before using this heater. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **WARNING:** Risk of Electric Shock. Do not open the heater casing. No user-serviceable parts inside.
- **WARNING:** Risk of Fire. Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 meters) from the front of the heater and away from the sides and rear.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped, or damaged in any manner.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater is intended for indoor use only. Do not use outdoors.

2. PRODUCT OVERVIEW

The Anchilly IH-1500 is a portable electric quartz infrared space heater designed for indoor use. It features a rocker switch for simple operation and utilizes infrared technology to provide efficient heating.



Image 1: Front view of the Anchilly IH-1500 Portable Electric Quartz Infrared Space Heater. The heater features a compact design with a protective grille over the heating elements and a control switch on the front or side.

Components:

- **Heating Elements:** Quartz infrared tubes.
- **Control Switch:** Rocker switch for power ON/OFF.
- **Protective Grille:** Covers the heating elements.
- **Power Cord:** For connecting to an electrical outlet.
- **Housing:** Outer casing of the heater.

3. SETUP

1. **Unpack the Heater:** Carefully remove the heater from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the heater on a firm, level surface. Ensure there is at least 3 feet (0.9 meters) of clear space around the front, sides, and rear of the heater to any combustible materials. Do not place the heater directly under a power outlet.
3. **Power Connection:** Ensure the rocker switch is in the 'OFF' position. Plug the power cord directly into a grounded 120V AC, 60Hz electrical outlet. Do not use extension cords or power strips.

4. OPERATING INSTRUCTIONS

- Power On:** With the heater properly plugged into a suitable outlet, locate the rocker switch. Press the rocker switch to the 'ON' position. The heating elements will begin to glow, indicating the heater is active.
- Power Off:** To turn off the heater, press the rocker switch to the 'OFF' position. The heating elements will cease to glow.
- Unplugging:** Always unplug the heater when not in use or when leaving the area for an extended period. Grasp the plug firmly and pull it from the outlet. Never pull on the cord.

5. MAINTENANCE

Regular maintenance helps ensure the longevity and safe operation of your heater.

- Cleaning:** Always unplug the heater and allow it to cool completely before cleaning. Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners or solvents. Do not immerse the heater in water.
- Dust Removal:** Use a vacuum cleaner with a brush attachment to remove dust from the grille and ventilation openings.
- Cord Inspection:** Periodically inspect the power cord and plug for any signs of damage. If the cord or plug is damaged, do not use the heater.
- Storage:** When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	No power to the unit.	Ensure the power cord is securely plugged into a working electrical outlet. Check the household circuit breaker or fuse.
Heater emits a burning smell.	Dust accumulation on heating elements.	Unplug the heater and allow it to cool. Clean the heating elements and grille as described in the Maintenance section. A slight odor may occur during initial use.
Heater turns off unexpectedly.	Overheating safety feature activated.	Unplug the heater and allow it to cool for at least 30 minutes. Check for any obstructions to air intake or exhaust. Ensure proper clearance around the heater.

7. SPECIFICATIONS

Feature	Detail
Brand	Anchilly
Model Number	IH-1500

Feature	Detail
Special Feature	Portable
Form Factor	Pedestal
Indoor/Outdoor Usage	Indoor
Product Dimensions	1.57"D x 0.59"W x 1.26"H
Room Type	Bedroom, Home Office, Study Room
Burner Type	Radiant
Fuel Type	Electric
Power Source	Corded Electric
UPC	639394142616
ASIN	B0CZF5BCSD

8. WARRANTY AND SUPPORT

Specific warranty information for the Anchilly IH-1500 heater may vary. Please refer to the warranty card included with your product or contact the retailer or manufacturer directly for details regarding warranty coverage and terms.

For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact Anchilly customer service or the authorized seller from whom you purchased the product.