

## Rohl MB2046AG

# Rohl Graceline Multi Function Hand Shower Package

## USER MANUAL

Model: MB2046AG

### Product Overview

The Rohl Graceline Multi Function Hand Shower Package, model MB2046AG, is inspired by the streamline age of the 1930s, featuring sleek aerodynamic lines and cylindrical forms. This package includes a multi-function hand shower, a compatible shower hose, a slide bar, and a matching wall supply, all designed to bring American Moderne elegance into contemporary and transitional-style bathrooms.

Constructed from durable brass, this product undergoes a premier finishing process to ensure resistance against corrosion and tarnishing through everyday use. The hand shower is equipped with 5 distinct functions, providing a versatile showering experience. All necessary hardware for installation is included.

### Components Included

Your Rohl Graceline Multi Function Hand Shower Package contains the following items:

- Multi-function hand shower with 5 spray settings
- 59-inch compatible shower hose
- 29-11/16-inch slide bar
- Matching wall supply

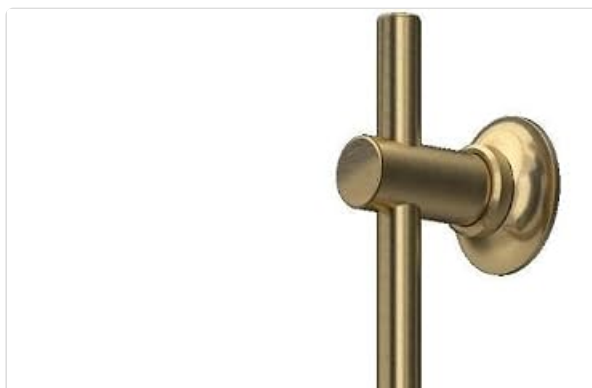




Image: The Rohl Graceline Multi Function Hand Shower Package, showcasing the hand shower, slide bar, hose, and wall supply in

## Setup and Installation

---

While the Rohl Graceline Hand Shower Package is designed for straightforward installation, professional installation is recommended to ensure proper function and adherence to local plumbing codes. All required hardware for installation is included with your package.

1. **Unpack Components:** Carefully remove all items from the packaging and verify that all components listed in the 'Components Included' section are present and undamaged.
2. **Identify Mounting Locations:** Determine the desired height and position for the slide bar and wall supply on your shower wall. Ensure the location allows for comfortable use and proper hose reach.
3. **Secure Slide Bar:** Following the provided instructions, securely mount the 29-11/16-inch slide bar to the wall using the included hardware. Ensure it is level and firmly attached.
4. **Connect Wall Supply:** Connect the matching wall supply to your existing 1/2-inch water supply line. Use appropriate plumbing sealant or tape to ensure a watertight connection.
5. **Attach Hose and Hand Shower:** Connect one end of the 59-inch shower hose to the wall supply and the other end to the multi-function hand shower. Hand-tighten connections first, then use a wrench if necessary, being careful not to overtighten.
6. **Test for Leaks:** Slowly turn on the water supply and check all connections for any signs of leaks. Address any leaks immediately by tightening connections or reapplying sealant if needed.

## Operating Instructions

---

The Rohl Graceline Multi Function Hand Shower is designed for ease of use and versatility.

- **Activating Water Flow:** Turn on your shower's main water control to begin water flow to the hand shower. The hand shower has a flow rate of 1.8 gallons-per-minute (GPM).
- **Changing Spray Settings:** The hand shower features 5 distinct spray functions. To change the spray pattern, rotate the spray face or a designated selector on the hand shower head. Experiment with each setting to find your preferred spray.
- **Adjusting Hand Shower Height:** The hand shower can be easily adjusted up or down along the slide bar. Typically, there is a release button or lever on the hand shower holder that allows it to slide freely. Press or lift this mechanism, slide the hand shower to the desired height, and release to secure it in place.

## Maintenance and Care

---

Proper care and maintenance will help preserve the beauty and functionality of your Rohl Graceline Hand Shower Package for years to come.

- **Regular Cleaning:** Clean your hand shower and fixtures regularly with a soft, damp cloth and a mild, non-abrasive soap. Rinse thoroughly with clean water and dry with a soft cloth to prevent water spots.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, harsh chemicals, ammonia-based products, or scouring pads, as these can damage the finish and void the warranty.
- **Prevent Mineral Buildup:** In areas with hard water, regularly wipe down the spray nozzles to prevent mineral buildup, which can affect spray performance.
- **Inspect Connections:** Periodically check all connections for tightness to prevent leaks.

## Troubleshooting

If you encounter any issues with your Rohl Graceline Hand Shower Package, refer to the following common problems and solutions:

| Problem                        | Possible Cause / Solution                                                                                                                             |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| Low Water Flow                 | Check the main water supply pressure. Ensure the hose is not kinked. Clean any mineral buildup from the hand shower nozzles.                          |
| Leaks at Connections           | Ensure all connections (wall supply, hose, hand shower) are securely tightened. Check for worn or improperly seated washers and replace if necessary. |
| Inconsistent Spray Pattern     | Mineral deposits or debris may be blocking some of the spray nozzles. Clean the nozzles thoroughly.                                                   |
| Hand Shower Slips on Slide Bar | Ensure the hand shower holder's locking mechanism is fully engaged after adjusting the height. Check if the mechanism is dirty or worn.               |

## Specifications

Key specifications for the Rohl Graceline Multi Function Hand Shower Package:

| Feature                         | Detail                       |
|---------------------------------|------------------------------|
| Brand                           | Rohl                         |
| Model Number                    | MB2046AG                     |
| Color                           | Antique Gold                 |
| Finish Type                     | Antique Gold                 |
| Item Weight                     | 7 Pounds                     |
| UPC                             | 824438649491                 |
| Hand Shower Height              | 7-3/4 inches (top to bottom) |
| Hand Shower Width               | 3 inches (left to right)     |
| Flow Rate                       | 1.8 gallons-per-minute (GPM) |
| Hose Length                     | 59 inches                    |
| Connection Size                 | 1/2 inch                     |
| Slide Bar Height                | 29-11/16 inches              |
| Construction Material           | Brass                        |
| Number of Hand Shower Functions | 5                            |

## Warranty Information

The Rohl Graceline Multi Function Hand Shower Package is covered under Rohl's 2-year limited warranty. This

warranty covers defects in material and workmanship under normal use and service.  
For complete details regarding warranty coverage, terms, and conditions, please refer to the official warranty documentation provided with your product or visit the Rohl official website.

## Customer Support

Should you require further assistance, have questions not covered in this manual, or need to report an issue, please contact Rohl customer service. You can typically find contact information on the Rohl official website or through your product's purchase documentation.

When contacting support, please have your product model number (MB2046AG) and purchase details readily available to expedite the process.

© 2024 Rohl. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question