

[manuals.plus](#) /

› [Accutime](#) /

› [Accutime Nickelodeon Spongebob Squarepants Kids LCD Watch with LED Lights Instruction Manual SGB4161AZ](#)

Accutime SGB4161AZ

Accutime Nickelodeon SpongeBob SquarePants Kids LCD Watch with LED Lights - Model SGB4161AZ

User Instruction Manual

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Accutime Nickelodeon SpongeBob SquarePants Kids LCD Watch with LED Lights, model SGB4161AZ. Please read this manual thoroughly to ensure proper use and longevity of the product.



Image: Front view of the Accutime Nickelodeon SpongeBob SquarePants Kids LCD Watch, displaying the time 10:10 and featuring SpongeBob on the watch face and characters on the strap.

SETUP

Unboxing

Your watch comes packaged in a collectible tin box. Carefully open the tin box and remove the watch. Inspect the watch for any visible damage.



Image: The Accutime Nickelodeon SpongeBob SquarePants Kids LCD Watch presented within its yellow collectible tin box, featuring SpongeBob artwork.

Initial Battery Activation

The watch is powered by 1 Lithium Ion battery (included). In most cases, the watch will be ready for immediate use. If the display is not active, gently press any button to activate it. If the watch does not turn on, refer to the Troubleshooting section.

OPERATING INSTRUCTIONS

Identifying Buttons

The watch typically features three or four buttons around the watch face. These are generally used for setting the time and activating the LED lights.



Image: Side profile of the watch, highlighting the yellow buttons on the casing.

Setting the Time

1. **Enter Setting Mode:** Locate the 'SET' or 'MODE' button (often on the side or bottom right). Press and hold this button for approximately 3-5 seconds until the time display begins to flash.
2. **Adjust Hours:** While the hours are flashing, press the 'ADJUST' or 'HOUR' button (often on the top right) repeatedly to advance the hour. Pay attention to AM/PM indicators if present.
3. **Adjust Minutes:** Press the 'SET' or 'MODE' button once more to switch to minute adjustment. The minutes display will flash. Press the 'ADJUST' or 'MINUTE' button repeatedly to set the correct minutes.
4. **Confirm Settings:** Press the 'SET' or 'MODE' button again to exit the setting mode. The time will stop flashing and be set.

Note: Button functions may vary slightly. If these instructions do not match your watch's behavior, try different button combinations or refer to the manufacturer's specific instructions if available.

Activating LED Lights

To activate the interactive LED lights, press the designated light button (often on the top left or a prominent button on the watch face). The lights will flash in various patterns for a short duration.



Image: Close-up of the watch face with LED lights glowing around the display, showing SpongeBob and the digital time.

MAINTENANCE

Cleaning

To clean your watch, gently wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch face or strap. Ensure the watch is dry before wearing.

Water Resistance

This watch is designed to be water-resistant, suitable for splashes during hand washing or light rain. It is **not waterproof** and should not be submerged in water, used for swimming, bathing, or showering. Prolonged exposure to water can cause damage.

Battery Replacement

The watch uses 1 Lithium Ion battery (type CR41, 1.5V). Battery replacement should ideally be performed by a qualified

technician to ensure proper sealing and water resistance. If replacing yourself, carefully open the back casing, replace the battery with the correct type, and ensure the casing is securely closed.



Image: Rear view of the watch, showing the metal back casing with product information and battery compartment details.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch display is blank.	Battery is depleted or not properly seated.	Press any button to activate. If still blank, consider battery replacement.
Time is incorrect.	Time needs to be reset.	Follow the "Setting the Time" instructions in the Operating section.
LED lights are not working.	Light button not pressed correctly or battery low.	Ensure the light button is pressed firmly. If still not working, battery may be low.
Watchband broke.	Wear and tear or excessive force.	Contact customer support for replacement options.

SPECIFICATIONS

- **Model Number:** SGB4161AZ
- **Brand:** Accutime
- **Display Type:** LCD Digital
- **Features:** LED Lights, Character Strap
- **Battery:** 1 x Lithium Ion (CR41, 1.5V) (included)
- **Water Resistance:** Splash resistant (not suitable for submersion)
- **Department:** Boys
- **Package Dimensions:** 3.07 x 3.07 x 2.95 inches
- **Item Weight:** 1 ounce

WARRANTY INFORMATION

Specific warranty details for Accutime products are typically provided with the product packaging or can be obtained by contacting Accutime customer support directly. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Accutime Nickelodeon SpongeBob SquarePants Kids LCD Watch, please contact Accutime customer service. You can often find contact information on the product packaging or by visiting the official Accutime website.

Manufacturer: Accutime Watch Corp


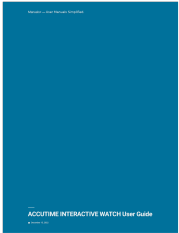

Online Store: [Accutime Store on Amazon](#)



© 2024 Accutime Watch Corp. All rights reserved. Nickelodeon, SpongeBob SquarePants and all related titles, logos and characters are trademarks of Viacom International Inc.

Related Documents - SGB4161AZ

	Accutime Interactive Watch User Manual - Features, Settings, and Safety Comprehensive user guide for the Accutime Interactive Watch, detailing how to use its features including camera, video, stopwatch, timer, voice recorder, calculator, and settings. Includes important safety warnings and recycling instructions.
	Accutime Interactive Watch User Manual - Features, Settings, and Troubleshooting Comprehensive user manual for the Accutime interactive watch. Learn how to set up, use features like camera, video, stopwatch, timer, alarms, and customize settings. Includes troubleshooting tips and safety warnings.
	Accutime Interactive Watch for Kids - User Manual Comprehensive user manual for the Accutime interactive smartwatch for children, covering features, instructions, specifications, and troubleshooting. Learn how to use your child's interactive watch.

	<p>Accutime Watch User Manual and Product Information</p> <p>A concise overview of Accutime Watches, including details inferred from metadata and the limited text content 'I'm not a robot'. This document serves as a product overview and potential user manual guide.</p>
	<p>ACCUTIME INTERACTIVE WATCH User Guide</p> <p>Comprehensive user guide for the ACCUTIME INTERACTIVE WATCH, detailing its features, operation, settings, and troubleshooting. Learn how to power on/off, recharge the battery, use games, time tools, camera, video, pedometer, and manage storage.</p>
	<p>Interactive Watch User Guide</p> <p>A user guide for the Interactive Watch, covering features such as powering on/off, clock faces, status bar icons, battery recharging, splash-proofing, games, camera, video recording, pedometer, album viewer, time tools (alarm, stopwatch, timer), voice recorder, calculator, and settings.</p>