

Accutime SGB4134AZ

Accutime Spongebob Squarepants Kids LED Watch Instruction Manual

Model: SGB4134AZ

1. INTRODUCTION

Welcome to the instruction manual for your Accutime Spongebob Squarepants Kids LED Watch. This manual provides essential information on how to set up, operate, and maintain your watch. Please read these instructions carefully to ensure proper use and longevity of the product.

2. SAFETY INFORMATION

- This watch is designed for children. Adult supervision is recommended during initial setup and use.
- The watch contains a small battery. Keep out of reach of small children to prevent accidental ingestion.
- Avoid exposing the watch to extreme temperatures, direct sunlight for prolonged periods, or strong magnetic fields.
- While splash-resistant, this watch is not suitable for swimming or showering. Avoid submerging the watch in water.
- Do not attempt to open the watch case or replace the battery yourself, as this may void the warranty and damage the watch.

3. PACKAGE CONTENTS

Your Accutime Spongebob Squarepants Kids LED Watch package should contain the following items:

- Accutime Spongebob Squarepants Kids LED Watch
- Collectible Spongebob Squarepants Tin Box



Image: The Accutime Spongebob Squarepants Kids LED Watch is presented within its themed tin box, ready for gifting or storage.

4. PRODUCT OVERVIEW

The Accutime Spongebob Squarepants Kids LED Watch features a vibrant design and a clear digital display. Familiarize yourself with the main components:

- **LED Display:** Shows time in bright red digits.
- **Control Button:** Located on the side of the watch case, used to display and set the time.
- **Silicone Strap:** Durable and comfortable yellow strap with Spongebob character designs.
- **Buckle Clasp:** Standard buckle for secure fastening.



Image: Front view of the watch, displaying the bright red LED time and the Spongebob Squarepants logo.



Image: A close-up of the watch face, showing the clear digital time display and the Spongebob character at the bottom.





Image: Detailed view of the watch's yellow silicone strap, adorned with various Spongebob character expressions and green bubbles.



Image: Side view of the watch, highlighting the single button used for time display and setting.



Image: The back of the watch, showing the stainless steel case with product details and branding.



Image: The watch being worn on a child's wrist, illustrating its comfortable fit and clear display during use.

5. SETUP: SETTING THE TIME

To set the time on your Accutime Spongebob Squarepants Kids LED Watch, follow these steps:

1. **Display Time:** Press the control button once to display the current time. The LED display will light up.
2. **Enter Setting Mode:** While the time is displayed, press and hold the control button for approximately 3 seconds. The hour digits will begin to flash, indicating you are in setting mode.
3. **Set Hour:** With the hour digits flashing, press the control button repeatedly to advance the hour. Each short press will increase the hour by one. The watch uses a 12-hour format with AM/PM indication (if applicable, otherwise it cycles 1-12).
4. **Set Minute:** Once the correct hour is set, press and hold the control button again for approximately 3 seconds. The minute digits will begin to flash.
5. **Adjust Minute:** With the minute digits flashing, press the control button repeatedly to advance the minutes. Each short press will increase the minute by one.
6. **Exit Setting Mode:** After setting the minutes, press and hold the control button one more time for approximately 3 seconds to exit the setting mode. The time will stop flashing and the watch will return to normal operation. If no button is pressed for a few seconds, the watch will automatically exit setting mode.

6. OPERATING INSTRUCTIONS

Using your Accutime Spongebob Squarepants Kids LED Watch is simple:

- **Check Time:** Press the control button once to illuminate the LED display and show the current time. The display will automatically turn off after a few seconds to conserve battery life.

7. MAINTENANCE

To keep your watch in good condition, follow these maintenance guidelines:

- **Cleaning:** Wipe the watch case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use for extended periods, store the watch in its original tin box in a cool, dry place away from direct sunlight.
- **Battery:** The watch uses 1 Lithium Ion battery (CR2032, 3V). Battery replacement should be performed by a qualified

technician to ensure water resistance is maintained.

- **Water Resistance:** This watch is splash-resistant. It can withstand minor splashes but should not be submerged in water. Remove before swimming, bathing, or engaging in water sports.

8. TROUBLESHOOTING

If you encounter issues with your watch, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Display does not light up.	Low or depleted battery.	The battery may need replacement. Contact customer support for assistance.
Time is incorrect or not advancing.	Time was not set correctly or battery is low.	Re-set the time following the 'Setting the Time' instructions. If the problem persists, the battery may be low.
Watch feels loose on wrist.	Strap not adjusted properly.	Adjust the buckle clasp to a tighter hole on the strap for a snug fit.

If these solutions do not resolve the issue, please contact Accutime customer support.

9. SPECIFICATIONS

- **Model Number:** SGB4134AZ
- **Display Type:** LED Digital
- **Strap Material:** Silicone
- **Case Material:** Plastic with metal accents
- **Battery Type:** 1 x CR2032 (3V) Lithium Ion (included)
- **Water Resistance:** Splash-resistant (not suitable for submersion)
- **Manufacturer:** Accutime Watch Corp
- **Package Dimensions:** 3.94 x 3.54 x 2.87 inches
- **Item Weight:** 1 ounce

10. WARRANTY INFORMATION

Accutime products are manufactured with quality in mind. This watch typically comes with a limited manufacturer's warranty covering defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific warranty terms and conditions, refer to the documentation included with your purchase or contact Accutime customer support.

11. SUPPORT

For further assistance, questions, or to report an issue with your Accutime Spongebob Squarepants Kids LED Watch, please contact Accutime customer support through their official website or the retailer where the product was purchased. Thank you for choosing Accutime.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question