

[Manuals.plus](#) /

› [Juboos](#) /

› Juboos Kid's Digital Watch for Boys and Girls, Waterproof LCD Digital Sports Child Wristwatch with 7 Color LED Lights, Stopwatch, Alarm purple

## Juboos MR-2206

# Juboos Kid's Digital Watch User Manual

Model: MR-2206

## PRODUCT OVERVIEW

The Juboos Kid's Digital Watch is designed for children, featuring a durable and comfortable design with a clear LCD display. It incorporates a seven-color LED light for visibility in low-light conditions and is built with a Japanese movement for reliability. This watch is suitable for daily wear and various activities.



Figure 1: Front view of the Juboos Kid's Digital Watch, highlighting its purple color and cat-ear design.

## Key Features

- **Cat Shape & Printed Design:** Features a unique cat-shaped watch face and printed bracelet, appealing to children.
- **Colorful Lights:** Equipped with seven-color LED lights for illuminating the dial, ensuring clear time visibility even in the dark.
- **30M Waterproof:** Designed to be waterproof up to 30 meters, suitable for daily activities like hand washing, face washing, and rainy days.

- **Comfortable to Wear:** Soft bracelet with a stainless steel clasp, adjustable to wrist sizes from 14.3 cm (5.6 inches) to 19.5 cm (7.67 inches).
- **Multifunctional:** Includes EL Light, Stopwatch, 12/24 Hour display, Alarm, and Date functions.



Figure 2: Visual representation of the watch's multifunctional capabilities.

## SETUP

Your Juboos Kid's Digital Watch comes with a pre-installed lithium metal battery. Before first use, you may need to set the current time and date.

### Initial Time and Date Setting

The watch features four buttons: **LIGHT**, **MODE**, **START**, and **RESET**. Refer to Figure 3 for button locations.

# 30M Waterproof



Hand washing



Face washing



Rainy days



Figure 3: Watch face with button labels for reference.

1. From the normal time display, press the **MODE** button three times to enter the time setting mode. The seconds will start flashing.
2. Press the **RESET** button to reset the seconds to zero.
3. Press the **MODE** button once to move to the hour setting. Press the **START** button to adjust the hour. Pay attention to AM/PM indicators if in 12-hour format.
4. Press the **MODE** button again to move to the minute setting. Press the **START** button to adjust the minutes.
5. Continue pressing **MODE** to cycle through month, date, and day of the week settings. Use the **START** button to adjust each value.
6. Once all settings are adjusted, press the **MODE** button one last time to return to the normal time display.

## OPERATING INSTRUCTIONS

### Using the LED Light

To illuminate the watch face, press the **LIGHT** button (top left). The seven-color LED light will activate, making the display visible in dark conditions. The light will automatically turn off after a few seconds.

## Stopwatch Function

1. From the normal time display, press the **MODE** button once to enter stopwatch mode. The display will show "00:00:00".
2. Press the **START** button (top right) to begin timing.
3. Press the **START** button again to pause the stopwatch.
4. To resume timing, press the **START** button.
5. To reset the stopwatch to zero, press the **RESET** button (bottom right) while the stopwatch is paused.
6. Press the **MODE** button to return to the normal time display.

## Alarm Function

1. From the normal time display, press the **MODE** button twice to enter alarm setting mode. The hour digits will flash.
2. Press the **START** button to adjust the alarm hour.
3. Press the **MODE** button to move to the minute setting. Press the **START** button to adjust the alarm minutes.
4. To activate or deactivate the alarm, press the **RESET** button while in alarm setting mode. An alarm icon will appear/disappear on the display.
5. Press the **MODE** button to return to the normal time display.

## 12/24 Hour Format

While in the time setting mode (after pressing **MODE** three times), press the **RESET** button to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

## MAINTENANCE

---

### Water Resistance

The Juboos Kid's Digital Watch is rated 30M waterproof. This means it is suitable for daily use, such as hand washing, face washing, and exposure to rain. It is **not** recommended for swimming, diving, or prolonged submersion in water.



Figure 4: The watch is suitable for everyday water exposure.

## Cleaning

To clean your watch, wipe it gently with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or internal components.

## Battery Information

The watch uses 1 Lithium Metal battery, which is included and pre-installed. The battery is designed for long-lasting performance. If the display becomes dim or the watch stops functioning, the battery may need replacement by a qualified technician.

## TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                        | Possible Cause                                                  | Solution                                                                                                |
|--------------------------------|-----------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| Watch display is blank or dim. | Low battery.                                                    | The battery may need replacement. Contact customer support if the watch is new.                         |
| Time is incorrect.             | Time not set correctly or accidentally changed.                 | Refer to the "Initial Time and Date Setting" section to reset the time.                                 |
| Buttons are unresponsive.      | Temporary software glitch or physical damage.                   | Try pressing all buttons firmly. If unresponsive, the watch may require service. Avoid excessive force. |
| Water inside the watch.        | Exceeded water resistance limits (e.g., swimming, hot showers). | Immediately stop using the watch. Do not attempt to open it. Contact customer support for assistance.   |

## SPECIFICATIONS

| Feature             | Detail                             |
|---------------------|------------------------------------|
| Model Number        | MR-2206                            |
| Brand               | Juboos                             |
| Movement Type       | Automatic (Digital Quartz)         |
| Water Resistance    | 30 Meters (3 ATM)                  |
| Case Diameter       | 3.5 Centimetres                    |
| Case Thickness      | 1.3 Centimetres                    |
| Band Material Type  | Acrylonitrile Butadiene Styrene    |
| Band Color          | Purple                             |
| Item Weight         | 26 Grams                           |
| Battery             | 1 Lithium Metal battery (included) |
| Included Components | User manual, children's watch      |
| Country of Origin   | China                              |



Figure 5: Detailed dimensions of the watch.

## WARRANTY INFORMATION

Specific warranty details for the Juboos Kid's Digital Watch are typically provided with the product packaging or can be found on the manufacturer's official website. Please retain your proof of purchase for any warranty claims.

For information regarding extended protection plans, please refer to the options available at the point of purchase, such as the "1 Year Fire Protection Plan" mentioned in some retail listings.

## CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact Juboos customer support through their official website or the retailer from whom you purchased the product. When contacting support, please have your watch model number (MR-2206) and purchase details ready.

For general inquiries, you may also refer to the [Juboos brand page on Amazon](#).

© 2024 Juboos. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.