

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [JTEYINH](#) /

› [JTEYINH 128LD Trimmer Head Instruction Manual](#)

JTEYINH 128LD

JTEYINH 128LD Trimmer Head Instruction Manual

Model: 128LD

1. PRODUCT OVERVIEW

The JTEYINH 128LD Trimmer Head is a replacement tap advance string trimmer head designed for various Husqvarna models. This package includes two trimmer heads, providing a convenient solution for maintaining your string trimmer. It is engineered to hold different gauges of trimmer line and features a specific thread size for secure attachment.



Image 1.1: Front and bottom view of the JTEYINH 128LD Trimmer Head, showing the blue tap button and line exits.

Key features include:

- Tap Advance String Trimmer Head mechanism for easy line feeding.
- Compatible with 0.065-inch, 0.080-inch, or 0.095-inch gauge trimmer line.
- M10 x 1.25 Left Hand thread size for secure attachment.
- Replaces original part numbers: 537338306, 537338310, 966674401, 537338302.

2. COMPATIBILITY

This trimmer head is designed to fit a wide range of Husqvarna string trimmer models. Please verify your model number against the list below to ensure compatibility.

Compatible Husqvarna Models:

- 122LDX
- 123L
- 123LD
- 125L
- 128L
- 128LD
- 128LDX
- 129L
- 129LDX
- 129DJX
- 223L
- 224L
- 225L
- 225LD
- 225R
- 225RJ
- 232L
- 232R
- 235RJX
- 240L
- 322L
- 322R
- 323L
- 323LD
- 323R
- 323RJ
- 324LX
- 324LDX
- 324RX
- 325LX
- 325RX
- 325RDX
- 325RJX
- 325L
- 343F
- 343R
- 345FX
- 345RX
- 345FXT
- 326L
- 326LS
- 326LX

- 326LDX
- 326RX
- 326RJX
- 327LS
- 327RJX
- 329LDX
- 336FR
- 426LST
- 430LS
- 525LS
- 525 Weed Eater

128LD Tap Trimmer Advance Head

Fit for:

Husqvarna 122LDX 123L 123LD 125L 128L 128LD
 128LDX 129L 129LDX 129DJX 223L 224L 225L 225LD
 225R 225RJ 232L 232R 235RJX 240L 322L 322R 323L
 323LD 323R 323RJ 324LX 324LDX 324RX 325LX 325RX
 325RDX 325RJX 325L 343F 343R 345FX 345RX 345FXT
 326L 326LS 326LX 326LDX 326LDX 326RX 326RX
 326RJX 327LS 327RJX 329LDX 336FR 426LST 430LS
 525LS 525 Weed Eater



Image 2.1: Visual representation of compatible Husqvarna models and the specific thread size (M10 x 1.25 LHF) for the trimmer head.

3. SPECIFICATIONS

Detailed specifications for the JTEYINH 128LD Trimmer Head are provided below:

Feature	Detail
Product Dimensions	4.2 x 4 x 2.3 inches (approximate)
Item Weight	1.22 pounds
Model Number	128LD
Thread Size	M10 x 1.25 Left Hand
Compatible Line Gauge	0.065-inch, 0.080-inch, or 0.095-inch
Replaces Part Numbers	537338306, 537338310, 966674401, 537338302
Country of Origin	China



Image 3.1: Dimensional overview of the 128LD Trimmer Head, including width, height, and button diameter, along with compatible line gauges.

4. INSTALLATION

Follow these steps to properly install the JTEYINH 128LD Trimmer Head onto your compatible Husqvarna string trimmer.

Installation Steps:

1. **Safety First:** Before beginning, ensure your string trimmer's engine is off and cool. Disconnect the spark plug wire to prevent accidental starting. Wear appropriate safety gear, including gloves and eye protection.
2. **Remove Old Trimmer Head:** If replacing an existing head, you may need to use a wrench or a locking pin (often provided with your trimmer) to hold the shaft in place while unscrewing the old head. Most trimmer heads have a left-hand thread, meaning you turn clockwise to loosen and counter-clockwise to tighten.
3. **Inspect Shaft:** Clean any debris from the trimmer shaft's threads. Ensure the shaft is not damaged.
4. **Attach New Trimmer Head:** Align the JTEYINH 128LD Trimmer Head with the trimmer shaft. The head features an M10 x 1.25 Left Hand thread. Turn the new trimmer head counter-clockwise onto the shaft until it is hand-tight.
5. **Secure Tightening:** Use a wrench or the locking pin method to fully tighten the trimmer head. Ensure it is securely fastened to prevent it from loosening during operation. Do not overtighten.
6. **Re-engage Spark Plug:** Once the head is securely installed, re-connect the spark plug wire.

128LD Tap Trimmer Advance Head

Fit for:

Husqvarna 122LDX 123L 123LD 125L 128L 128LD
128LDX 129L 129LDX 129DJX 223L 224L 225L 225LD
225R 225RJ 232L 232R 235RJX 240L 322L 322R 323L
323LD 323R 323RJ 324LX 324LDX 324RX 325LX 325RX
325RDX 325RJX 325L 343F 343R 345FX 345RX 345FXT
326L 326LS 326LX 326LDX 326LX 326RX 326RX
326RJX 327LS 327RJX 329LDX 336FR 426LST 430LS
525LS 525 Weed Eater



Image 4.1: Detail of the M10 x 1.25 Left Hand thread inside the trimmer head, crucial for proper installation.

5. OPERATION

The JTEYINH 128LD Trimmer Head utilizes a tap advance mechanism for convenient line feeding during operation.

Line Feeding (Tap Advance):

- To advance the trimmer line, start the trimmer engine and bring it to full operating speed.
- Lightly tap the bottom of the trimmer head on a firm, flat surface (such as the ground). The centrifugal force will cause the line to extend.
- Avoid tapping too hard or repeatedly, as this can over-feed the line or damage the head.
- The trimmer's line cutting blade (if equipped) will automatically trim the line to the correct length.

Loading New Trimmer Line:

Refer to your trimmer's specific manual for detailed instructions on how to open the trimmer head and load new line.

Generally, this involves pressing tabs on the side of the head to remove the spool, winding new line onto the spool, and reassembling. Ensure you use line within the recommended gauges (0.065-inch, 0.080-inch, or 0.095-inch).



Image 5.1: Example of the trimmer head in use, demonstrating its function in a typical lawn care scenario.

6. MAINTENANCE

Regular maintenance of your trimmer head will extend its lifespan and ensure optimal performance.

- **Clean Regularly:** After each use, clean grass clippings, dirt, and debris from the trimmer head. This prevents buildup that can impede line feeding or cause imbalance.
- **Inspect for Wear:** Periodically inspect the trimmer head for cracks, excessive wear, or damage to the tap button and eyelets. Replace the head if significant wear or damage is observed.
- **Check Line:** Ensure the trimmer line is not fused together inside the spool. If it is, remove the spool and untangle or replace the line.
- **Storage:** Store the trimmer head in a clean, dry place when not in use.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your trimmer head.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Line does not advance when tapped.	<ul style="list-style-type: none"> Line is fused or tangled inside the spool. Not enough line on the spool. Trimmer not at full RPM. Debris obstructing the line exit eyelets. 	<ul style="list-style-type: none"> Remove spool, untangle or replace line. Reload spool with sufficient line. Ensure trimmer is at full throttle when tapping. Clean eyelets and inside of head.
Trimmer head vibrates excessively.	<ul style="list-style-type: none"> Uneven line length. Debris buildup on the head. Damaged or worn trimmer head. 	<ul style="list-style-type: none"> Ensure both lines are of equal length. Clean the head thoroughly. Inspect for damage; replace if necessary.
Tap button breaks or becomes unresponsive.	<ul style="list-style-type: none"> Excessive force when tapping. Impact with hard surfaces. Material fatigue. 	<ul style="list-style-type: none"> Tap gently on appropriate surfaces. Avoid hitting concrete or rocks directly. Replace the trimmer head if the button is broken.

8. WARRANTY AND SUPPORT

For specific warranty information regarding your JTEYINH 128LD Trimmer Head, please refer to the product packaging or contact the seller directly. Keep your proof of purchase for any warranty claims.

For further assistance or technical support, please reach out to the manufacturer or the retailer from whom you purchased the product. Provide them with your product model number (128LD) and any relevant purchase details.