

[Manuals.plus](#) /

> [Joaxswe](#) /

> Joaxswe Farmhouse End Table with Charging Station (Model: Set 1) - Instruction Manual

Joaxswe Set 1

Joaxswe Farmhouse End Table with Charging Station (Model: Set 1)

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Joaxswe Farmhouse End Table with Charging Station. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions thoroughly before beginning assembly and retain them for future reference.



Image 1.1: Joaxswe Farmhouse End Table with Charging Station.

2. SAFETY INFORMATION

WARNING: This product requires assembly. Use appropriate safety gear and follow the instructions carefully to avoid injury. Be cautious when handling the glass doors to prevent breakage. Do not overload the shelves to maintain the stability of the product. Keep the product away from heat sources and moisture to prevent damage.

- Ensure all parts are present and undamaged before assembly.
- Assemble on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly.
- Keep small parts away from children during assembly.
- Always unplug the charging station before cleaning or moving the table.

3. PACKAGE CONTENTS

Verify that all components listed below are included in your package:

- Farmhouse end table components

- Accessory Kit (screws, dowels, etc.)
- Instructions manual
- Assembly tools (mini screwdriver, Allen key)



Image 3.1: Product dimensions and key features.

4. SETUP AND ASSEMBLY

Follow these steps for proper assembly of your Joaxswe Farmhouse End Table. It is recommended that two people assemble this product.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a soft, clean surface to prevent damage.
2. **Identify Parts:** Refer to the included parts list and diagrams to identify each component. All parts are labeled.
3. **Assemble Frame:** Connect the side panels and back panel using the provided screws and dowels. Ensure all connections are secure.
4. **Install Adjustable Shelf:** Insert the adjustable shelf into the desired height level. The shelf can be adjusted to three levels.

5. **Attach Doors:** Secure the glass barn doors to the front frame using the provided hinges. Ensure the doors open and close smoothly.
6. **Install Handles:** Attach the door handles to the glass doors.
7. **Place Top Panel:** Secure the top panel to the assembled frame.
8. **Connect Power Cord:** Route the 4.9-foot power cord from the charging station through the designated opening at the back of the table.

Assembly Video:

Your browser does not support the video tag.

Video 4.1: A seller-provided video demonstrating the assembly process of the Farmhouse End Table.

5. OPERATING INSTRUCTIONS

5.1. Using the Charging Station

The end table is equipped with a built-in charging station for your convenience.

- Plug the table's power cord into a standard 120V AC wall outlet.
- The charging station features 2 AC outlets (125V/12A) and 2 USB ports (5V/2A).
- Connect your electronic devices (e.g., phones, tablets, lamps) to the appropriate outlets or USB ports for charging.



Image 5.1: End table with open doors, showcasing the interior and charging station.

5.2. Utilizing Storage with Adjustable Shelf

The interior storage space includes an adjustable shelf to accommodate various items.

- Open the glass barn doors to access the storage compartment.
- The shelf can be moved to one of three different height settings to fit taller or shorter items.
- Store books, blankets, remote controls, or other household items.



Image 5.2: Detail of the adjustable shelf and magnetic door closure.

6. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your end table.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners. For glass doors, use a glass cleaner.
- **Dusting:** Dust regularly with a dry, soft cloth.
- **Spills:** Clean spills immediately to prevent staining.
- **Hardware:** Periodically check and tighten all screws and fasteners to ensure stability.
- **Electrical Components:** Ensure the charging station and power cord are free from damage. Do not attempt to repair electrical components yourself.

7. TROUBLESHOOTING

If you encounter any issues with your end table, refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Table is wobbly	Loose fasteners	Tighten all screws and bolts. Ensure the table is on a level surface.
Charging station not working	Power cord unplugged or faulty device	Check if the power cord is securely plugged into a working outlet. Test with a different device or cable.
Doors do not close properly	Misaligned hinges or obstruction	Adjust hinges if necessary. Ensure no items are blocking the door's path.
Shelf is unstable	Incorrectly installed shelf pins	Ensure shelf pins are fully inserted into the designated holes and the shelf rests securely on them.

8. SPECIFICATIONS

Feature	Detail
Brand	Joaxswe
Model	Set 1
Product Dimensions	24"D x 24"W x 25.6"H
Item Weight	20 Kilograms
Frame Material	Glass, Wood
Color	Black
Charging Station	2 AC Outlets (125V/12A), 2 USB Ports (5V/2A)
Power Cord Length	4.9 feet
Adjustable Shelves	3 levels
Assembly Required	Yes (Tools included)
UPC	780748611163

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Joaxswe customer service through the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.

For additional assistance, visit the [Joaxswe Store on Amazon](#).