

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Evenflo](#) /
- › [Evenflo 4-in-1 Eat & Grow Convertible High Chair User Manual](#)

Evenflo 4-in-1 Eat & Grow Convertible High Chair

Evenflo 4-in-1 Eat & Grow Convertible High Chair User Manual

Comprehensive guide for assembly, use, and maintenance.

PRODUCT OVERVIEW

The Evenflo 4-in-1 Eat & Grow Convertible High Chair is designed to adapt to your child's growth from infancy through the toddler years, supporting up to 50 pounds. This versatile chair transitions through four distinct stages, providing a safe and comfortable feeding and activity solution for various developmental phases.



Image: The Evenflo 4-in-1 Eat & Grow Convertible High Chair in its primary high chair configuration, featuring a white frame and a black and white star-patterned seat pad. The chair includes a full-size tray and a secure harness system.

KEY FEATURES

- **4-in-1 Convertible Design:** Grows with your child through 4 stages from infant to big kid up to 50 lbs.
- **Multi-Stage Adaptability:** Stage 1 is a full-size high chair, Stage 2 is a floor seat, Stage 3 is a toddler chair, and Stage 4 converts to a playtime table and chair.
- **Enhanced Safety:** Features a 5-point safety harness for secure seating.
- **Easy Cleaning:** Includes a machine washable seat pad and a removable, dishwasher-safe tray.
- **Versatile Use:** Conveniently converts for eating, playing, reading books, and other activities.

SETUP AND ASSEMBLY

Before first use, ensure all components are present and undamaged. Assembly is required and should be performed by an adult. Follow these general steps for initial setup:

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list in your product manual.
2. **Assemble Base:** Connect the leg extensions to the main base structure, ensuring they click securely into

place.

3. **Attach Seat Unit:** Secure the seat unit to the assembled base. Ensure all locking mechanisms are engaged.
4. **Install Tray:** Slide the tray onto the designated slots on the seat unit until it locks securely.
5. **Insert Seat Pad:** Place the seat pad into the seat, ensuring the harness straps are correctly threaded through the designated openings.

Always refer to the detailed assembly instructions provided in your product's physical manual for specific diagrams and safety warnings.

OPERATING MODES

The Evenflo 4-in-1 High Chair offers four versatile modes to accommodate your child's developmental stages:



Image: A composite image illustrating the four adaptable configurations of the Evenflo high chair, demonstrating its transition from an infant high chair to a toddler dining chair, a standalone toddler chair, and finally, a separate table and chair set for older children.

Stage 1: Infant High Chair

This is the full-size high chair configuration, ideal for infants who can sit upright unassisted. It includes the full-size tray and the 5-point harness for secure feeding.

Stage 2: Mini Meal Chair (Floor Seat)

In this stage, the chair is lowered to the floor, allowing your child to join family mealtimes at a lower height. The tray and harness remain in use for continued safety and convenience.

Stage 3: Toddler Stand-Alone Chair

For this stage, the tray is removed, transforming the unit into a standalone chair suitable for toddlers. This allows for reading, socializing, or other activities at a comfortable height.

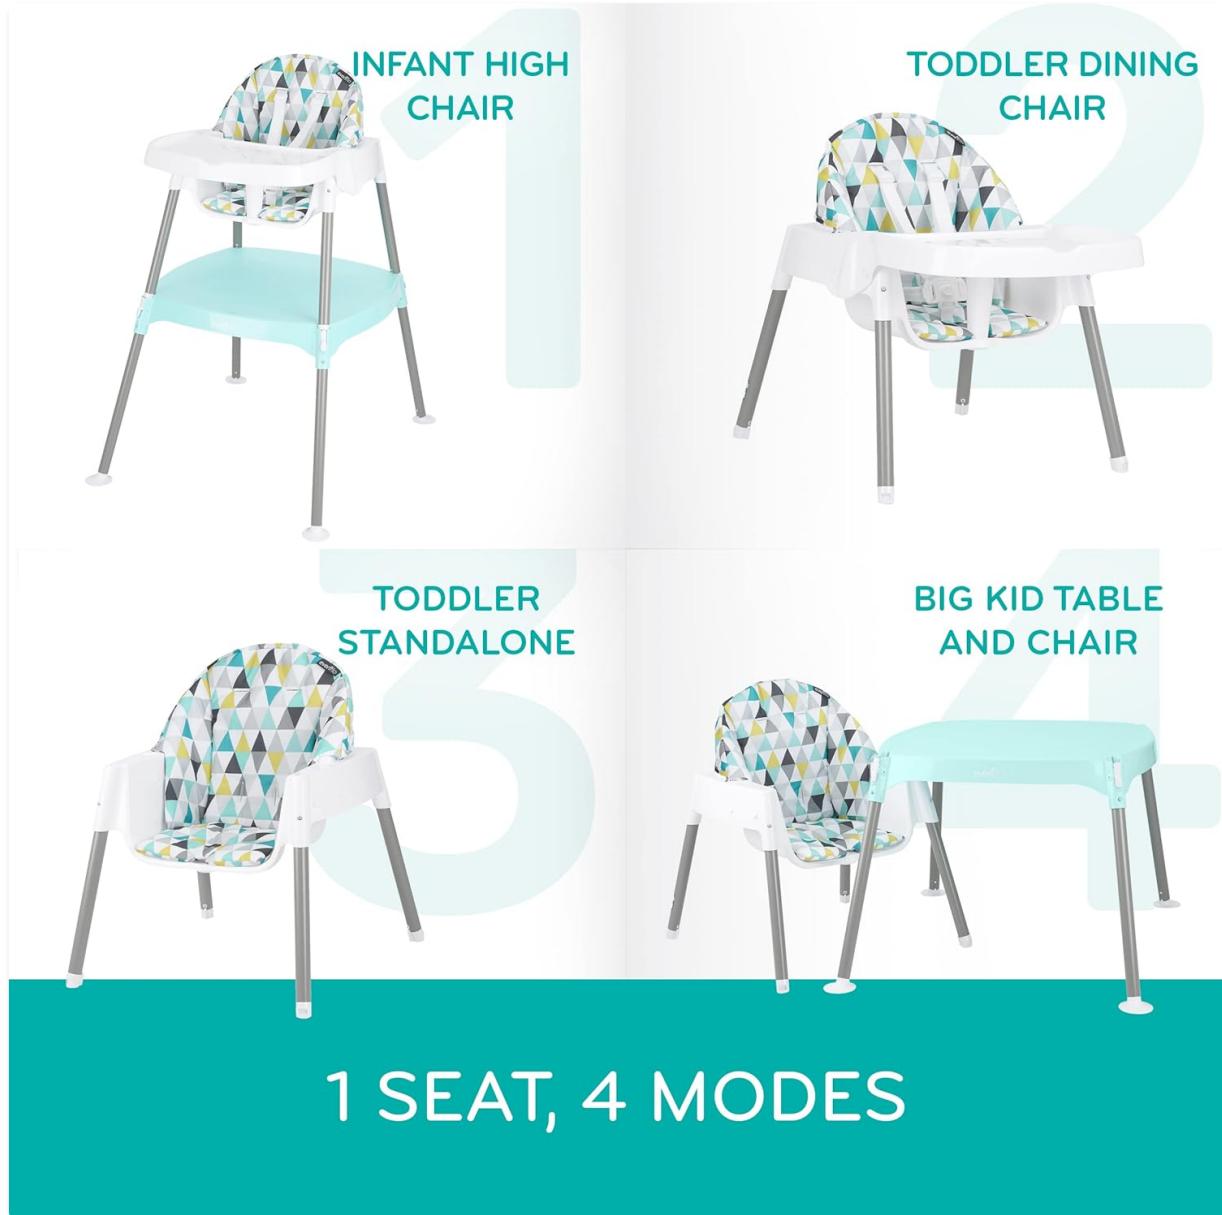


Image: A detailed view of the high chair's tray, highlighting its easy-to-remove design. The tray can be detached by pressing the side release buttons, facilitating cleaning and conversion to other modes.

Stage 4: Playtable and Chair Set

The final stage converts the high chair into a separate playtable and chair set. This is perfect for snacks, crafts, and independent play for older toddlers and big kids.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and hygiene of your Evenflo high chair. The design prioritizes ease of cleaning.

- **Tray Cleaning:** The full-size tray is removable and dishwasher-safe. For daily cleaning, wipe with a damp

cloth and mild soap.

- **Seat Pad:** The seat pad is machine washable. Refer to the care label on the pad for specific washing instructions (typically cold water, gentle cycle, air dry).
- **Frame and Legs:** Wipe down the plastic and metal components with a damp cloth and mild soap. Avoid abrasive cleaners or solvents.
- **Harness Straps:** Clean harness straps with a damp cloth and mild soap. Allow to air dry completely before re-use.
- **Regular Inspection:** Periodically check all screws, bolts, and fasteners to ensure they are tight and secure. Inspect for any signs of wear or damage.



Image: A close-up view emphasizing the ease of removing the high chair's tray for cleaning. The image highlights the tray's washable and dishwasher-safe properties, simplifying post-meal cleanup.

SAFETY INFORMATION

Your child's safety is paramount. Always adhere to these safety guidelines when using the Evenflo 4-in-1 High Chair:

- **Always Use Harness:** Secure your child with the 5-point harness at all times when they are in the high chair.
- **Never Leave Unattended:** Do not leave your child unattended in the high chair.

- **Check Weight Limits:** Ensure your child's weight does not exceed the maximum recommended weight of 50 lbs.
- **Secure Placement:** Always place the high chair on a flat, stable surface away from edges of tables, counters, or stairs.
- **Avoid Hazards:** Keep the high chair away from windows, cords, and other potential hazards.
- **Inspect Before Use:** Before each use, check for loose parts, damaged components, or signs of wear. Discontinue use if any damage is found.

TROUBLESHOOTING

If you encounter any issues with your Evenflo 4-in-1 High Chair, consider the following common solutions:

- **Tray Not Attaching Securely:** Ensure the tray is aligned correctly with the grooves on both sides of the seat. Apply firm, even pressure until you hear a click. Check for any food debris obstructing the mechanism.
- **Harness Difficult to Adjust:** Verify that the straps are not twisted. Refer to the manual for proper threading and adjustment techniques. Ensure the buckle is free of debris.
- **Chair Feels Unstable:** Confirm that all leg extensions are fully inserted and locked into place. Ensure the chair is on a flat, level surface.
- **Difficulty Converting Modes:** Make sure all release buttons or levers are fully depressed when attempting to change configurations. Do not force components.

If problems persist, contact Evenflo customer support for assistance.

SPECIFICATIONS

Brand	Evenflo
Model Name	4-in-1 Eat & Grow Convertible High Chair
ASIN	B0CZKYXJMV
Material Type	Polyester
Color	Pop Star White
Portable	Yes
Assembly Required	Yes
Weight Limit	Up to 50 lbs
Recommended Age	4 months up to 5 years

WARRANTY AND SUPPORT

Evenflo products are manufactured with quality and safety in mind. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your product or visit the official Evenflo website.

For customer support, replacement parts, or further assistance, please contact Evenflo directly through their official channels. You can find contact information on their website or in your product's packaging.

© 2025 Evenflo. All rights reserved.

Visit the [Evenflo Store](#) for more products and information.