

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [JoyGeek](#) /

› [JoyGeek CA32 7D 5-in-1 Electric Bald Razor User Manual](#)

JoyGeek CA32

JoyGeek CA32 7D 5-in-1 Electric Bald Razor User Manual

Model: CA32

1. INTRODUCTION

Thank you for choosing the JoyGeek CA32 7D 5-in-1 Electric Bald Razor. This versatile grooming device is designed to provide a comfortable and efficient shaving experience for your head and face, along with additional grooming functions. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.



Image 1.1: JoyGeek CA32 7D 5-in-1 Electric Bald Razor with included accessories.

2. PRODUCT OVERVIEW

The JoyGeek CA32 is a multi-functional grooming tool featuring a 7D floating shaving head and several interchangeable attachments for comprehensive personal care.

Key Features:

- **7D Floating Shaving Head:** Designed with 7 flexible rotary blades that adapt to the contours of your face, neck, and head for a close and comfortable shave.
- **5-in-1 Grooming Kit:** Includes the main razor body and five interchangeable heads:
 - 7D Electric Razor Head
 - Facial Cleansing Brush
 - Face Massage Brush
 - Nose Hair Trimmer
 - Hair Trimmer (with 3 combs: 3mm, 5mm, 7mm)
- **Wet & Dry Use:** Fully waterproof (IPX6 rated) for convenient dry shaving or refreshing wet shaving with

foam or gel, even in the shower.

- **USB Fast Charging:** Provides over 90 minutes of cordless operation after a 1.5-hour charge.
- **Smart LED Display:** Shows remaining battery life, lock status, and cleaning reminders.

5 IN1 Multifunktions-Rasierer für Männer



Image 2.1: Demonstrating the various functions of the 5-in-1 grooming kit.

Upgrade 7D Schwebender Scherkopf

1. 360° schwebende Rasur
2. Der Rasierbereich ist viel größer



Image 2.2: Detailed view of the upgraded 7D floating shaving head.

Produkt-Packliste



Image 2.3: All components included in the JoyGeek CA32 package.

3. SAFETY INFORMATION

- This appliance is waterproof and suitable for use in showers. However, always ensure the charging port is completely dry before connecting the USB cable.
- Clean the razor head thoroughly after each use to prevent skin irritation and maintain hygiene.
- Keep the appliance out of reach of children.
- Do not disassemble or attempt to repair the appliance yourself. Contact customer support for assistance.
- Avoid using the appliance if the blades are damaged, as this may cause injury.
- Store the appliance in a cool, dry place when not in use.

4. SETUP

Attaching/Detaching Heads:

1. To attach a head, align the head with the main body and gently push until it clicks into place.
2. To detach a head, firmly grasp the head and pull it away from the main body.

Ensure the device is turned off before changing attachments.

5. OPERATING INSTRUCTIONS

Power On/Off:

- Press the power button once to turn the device on or off.

Travel Lock Function:

- To activate the travel lock, press and hold the power button for 3 seconds. The LED display will show a lock icon.
- To deactivate, press and hold the power button for 3 seconds again. The lock icon will disappear.

Using the 7D Electric Razor Head:

- **Dry Shave:** For a quick shave, ensure your skin is clean and dry. Move the razor in small, circular motions over the desired area.
- **Wet Shave:** Apply shaving foam or gel to your skin. Move the razor in small, circular motions. Rinse the razor head frequently under running water during the shave.



Nass-Rasierer

IPX6 Wasserdicht und abwaschbar

Trocken-Rasierer

Using Other Attachments:

- **Facial Cleansing Brush:** Attach the brush head. Apply your preferred facial cleanser to your face or the brush. Gently move the brush in circular motions across your face.
- **Face Massage Brush:** Attach the massage brush head. Use it to gently massage your face, promoting circulation.
- **Nose Hair Trimmer:** Attach the nose hair trimmer head. Carefully insert the trimmer tip into your nostril or ear and move it gently to trim unwanted hair.
- **Hair Trimmer:** Attach the hair trimmer head. Select and attach one of the comb guides (3mm, 5mm, 7mm) for desired hair length. Move the trimmer against the direction of hair growth.

LED Display:

The LED display provides important information:

- **Battery Percentage:** Shows the remaining usage time in minutes.
- **Travel Lock Indicator:** A lock icon appears when the device is locked.
- **Cleaning Reminder:** An icon may appear to indicate when the razor head needs cleaning.



6. CHARGING

- Ensure the device is turned off before charging.
- Connect the provided USB Type-C cable to the charging port on the razor and plug the other end into a compatible USB power source (e.g., computer, power bank, wall adapter).
- The LED display will indicate charging status.
- A full charge takes approximately 1.5 hours and provides over 90 minutes of cordless use.
- Do not charge the device in wet conditions.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene.

Cleaning the Razor Head:

1. Turn off the razor.
2. Gently open the razor head by pressing the release button or lifting the top cover (refer to the specific design of your razor head).
3. Rinse the razor head directly under running tap water to remove hair clippings and debris. For a more thorough clean, use the included cleaning brush.
4. Shake off excess water and allow the head to air dry completely before reattaching or storing.

Cleaning Other Attachments:

- All attachments are washable. Rinse them under running water after each use.
- For the facial cleansing brush, you can use a mild soap to clean it.
- Ensure all attachments are completely dry before storing.

8. TROUBLESHOOTING

- **Device not turning on:** Ensure the battery is charged. Check if the travel lock is activated (press and hold power button for 3 seconds to unlock).
- **Poor shaving performance:** Clean the razor head thoroughly. The blades may be dull and require replacement (replacement heads sold separately).
- **Charging issues:** Ensure the USB cable is properly connected and the power source is functional. Check if the charging port is dry.
- **Skin irritation:** Ensure the razor head is clean. Try a wet shave with shaving cream. If irritation persists, discontinue use.

9. SPECIFICATIONS

Feature	Detail
Model Name	CA32

Brand	JoyGeek
Power Source	Battery Powered
Special Features	Dry Shave, Lightweight, Rechargeable, Waterproof, Wet
Recommended Uses	Face, Head
Blade Material	Stainless Steel
Battery Life	1.5 Hours (approx. 90+ minutes usage)
Charging Time	1.5 Hours
Item Weight	0.44 Kilograms
Color	Silver

10. WARRANTY AND SUPPORT

JoyGeek products are manufactured to high-quality standards. For warranty information or technical support, please refer to the product packaging or contact your retailer. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the official JoyGeek website or contact their customer service department.

© 2024 JoyGeek. All rights reserved.

Related Documents - CA32

 <p>Wireless Charger User Manual</p> <p><small>Thank you for choosing the Wireless Charger. Please read the user manual carefully before use and keep it for reference in a safe place for future reference.</small></p>	<p>JoyGeek 3-in-1 Wireless Charger User Manual</p> <p>Comprehensive user manual for the JoyGeek 3-in-1 Wireless Charger, detailing product overview, specifications, package contents, compatible devices, safety precautions, indicator light functions, troubleshooting, and warranty information.</p>
 <p>Onity OnPortal™ Lock Management System</p> <p><small>Onity OnPortal™ Lock Management System is a scalable solution for hotels and properties. It provides a secure and convenient way to manage access to your property. The system is easy to install and use, and it offers a wide range of features and options to meet your needs. For more information, please visit our website or contact your local distributor.</small></p>	<p>Onity OnPortal Lock Management System: Features, Requirements, and Specifications</p> <p>Explore the Onity OnPortal™ Lock Management System, a scalable solution for hotels and properties. Learn about its features, encoder options, DirectKey™ mobile access integration, system requirements, and lock compatibility.</p>

Model	Screen Size	Resolution	Processor	OS	Connectivity	Weight	Power	Tuner
CG32-P3	32"	4K	Android TV	Android TV	Wi-Fi, Bluetooth	15.5kg	150W	3+2+1
CG40-P3	40"	4K	Android TV	Android TV	Wi-Fi, Bluetooth	21.5kg	200W	3+2+1
CG43-P3	43"	4K	Android TV	Android TV	Wi-Fi, Bluetooth	24.5kg	230W	3+2+1
CA32-P3	32"	4K	Android TV	Android TV	Wi-Fi, Bluetooth	15.5kg	150W	3+2+1
CA43-P3	43"	4K	Android TV	Android TV	Wi-Fi, Bluetooth	24.5kg	230W	3+2+1

[Smart TV Specifications: Palette and CA Series](#)

Detailed specifications for various Smart TV models including the Palette Series (CG32-P3, CG40-P3, CG43-P3) and CA Series (CA32-P3, CA43-P3). Covers display, picture, sound, processor, software, connectivity, dimensions, weight, power, and tuner details.



[Sony CLIÉ PEG-SJ33 Personal Entertainment Organizer: Features, Specifications, and Bundled Software](#)

Detailed overview of the Sony CLIÉ PEG-SJ33 Personal Entertainment Organizer, including its high-resolution display, MP3 player, Memory Stick support, hardware specifications, system requirements, and bundled software.

Code	Name	Price (AUD)
1234	Cattleya orchid	120
1235	Cattleya orchid	140
1236	Cattleya orchid	130
1237	Cattleya orchid	110
1238	Cattleya orchid	125
1239	Cattleya orchid	135

[The Orchid Patio - Spring 2025 Cattleya Flask List](#)

A catalog from The Orchid Patio featuring Cattleya orchids available in flasks for Spring 2025 in Taiwan. Lists orchid codes, names, and prices in Australian Dollars (AUD).