

GPX TBDV1093BDLTQ

GPX Entertainment+ 10-inch Tablet and Portable DVD Player User Manual

Model: TBDV1093BDLTQ

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your GPX Entertainment+ 10-inch Tablet and Portable DVD Player. Please read this manual thoroughly before using the device and retain it for future reference.



Figure 1: The GPX Entertainment+ 10-inch Tablet and Portable DVD Player shown with its complete set of accessories, including a black carrying bag, teal over-ear headphones, a USB charging cable, a wall power adapter, and a car charger. The tablet itself is teal with a black screen displaying a green background.

PACKAGE CONTENTS

- GPX Entertainment+ 10-inch Tablet and Portable DVD Player
- Carrying Bag
- Headphones
- USB Charging Cable
- Wall Power Adapter
- Car Charger

SETUP

Charging the Device

Before first use, fully charge the device. Connect the USB charging cable to the tablet's USB-C Charging Port and the other end to the wall power adapter or car charger. The charging indicator light will illuminate. A full charge provides up to 3 hours of battery life.



Figure 2: Detailed view of the side ports on the GPX Entertainment+ tablet, indicating the locations for the MicroSD Card Slot, Reset button, Headphone Jack, USB-C Charging Port, and HDMI output.

Inserting a DVD

1. Gently open the DVD player lid located on the top of the device.
2. Place the DVD disc onto the spindle with the label side facing up.
3. Gently press the disc down until it clicks into place.
4. Close the DVD player lid securely.

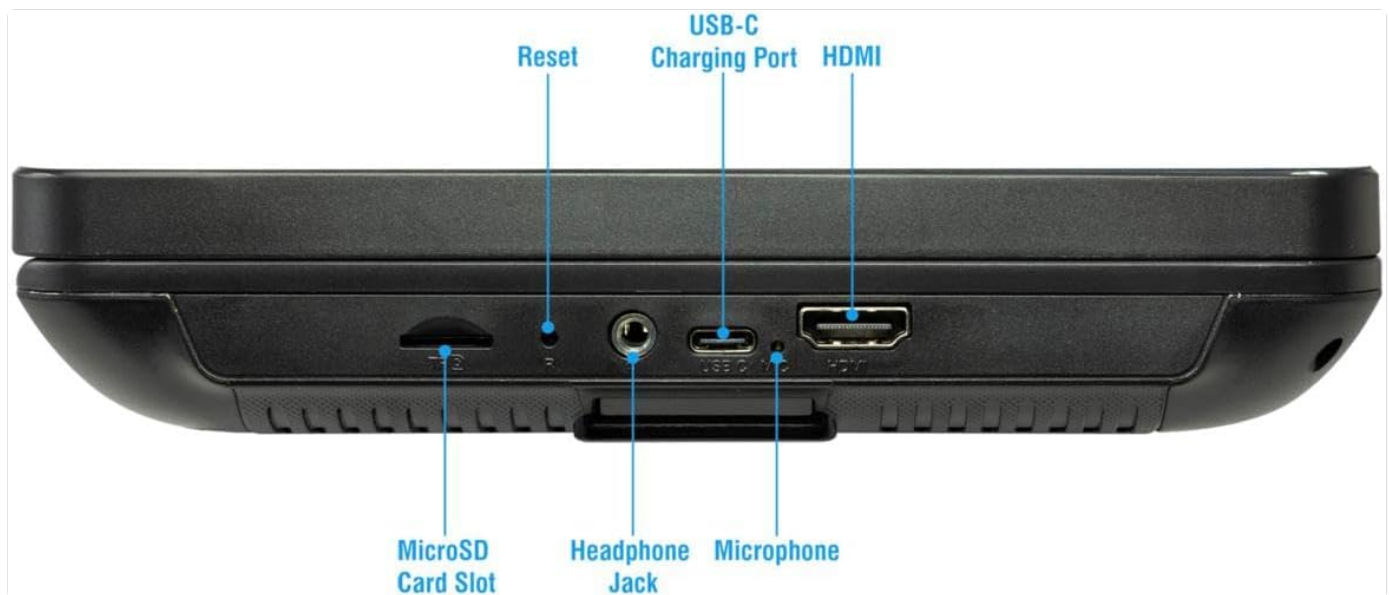


Figure 3: The GPX Entertainment+ portable DVD player with its lid open, revealing a DVD disc correctly placed on the central spindle, ready for playback.

Inserting a Micro SD Card

Locate the Micro SD card slot on the side of the device. Insert the Micro SD card with the gold contacts facing down until it clicks into place. This allows for expanded storage for media files.

OPERATING THE DEVICE

Power On/Off

Press and hold the power button (usually located on the side or front panel) for a few seconds to turn the device on or off. A short press will put the device into sleep mode or wake it up.

Navigating the Interface

The device features a full-color touch LCD display. Navigate by tapping icons, swiping across the screen, and using pinch-to-zoom gestures where applicable. The home screen displays preloaded applications such as Google, Google Play Store, YouTube, Google Chrome, and Google Maps, along with basic apps like Music Player, Movie Player, Photo Viewer, Web Browser, Email, and Camera.



Figure 4: The home screen of the GPX Entertainment+ tablet, showing a grid of application icons against a vibrant green background. Visible apps include Google, Google Go, DVD Player, Gmail, Play Store, Chrome, Gallery, Settings, QR Reader, and YouTube.

Playing DVDs

After inserting a DVD, the device should automatically detect and begin playback. If not, tap the "DVD Player" icon on the home screen to launch the DVD application. Use the on-screen controls or physical buttons (if available) for playback functions like Play, Pause, Stop, Fast Forward, and Rewind.

Connecting to Wi-Fi

To access online content and the Google Play Store, connect the device to a Wi-Fi network:

1. Go to *Settings* from the home screen.
2. Select *Network & Internet* or *Wi-Fi*.
3. Turn on Wi-Fi and select your desired network from the list.
4. Enter the password if prompted and tap *Connect*.

Using HDMI Output

Connect an HDMI cable (not included) from the device's HDMI output port to an HDMI input on an external display (e.g., TV, monitor) to mirror or extend the device's screen.

MAINTENANCE

Cleaning the Device

- Use a soft, lint-free cloth to clean the screen and exterior surfaces.
- Do not use abrasive cleaners, alcohol, or solvents.
- Ensure the device is powered off and unplugged before cleaning.

Battery Care

- Avoid exposing the device to extreme temperatures.
- Charge the battery regularly, even if not in use, to maintain battery health.
- Do not attempt to replace the built-in rechargeable battery yourself.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low or no battery charge.	Connect to power adapter and charge for at least 30 minutes before attempting to power on.
DVD does not play.	Disc is dirty, scratched, or incorrectly inserted.	Clean the disc with a soft cloth. Ensure the disc is inserted correctly with the label side up. Try a different DVD.
Touchscreen is unresponsive.	Temporary software glitch.	Perform a soft reset by pressing the reset button (requires a thin object like a paperclip).
Cannot connect to Wi-Fi.	Incorrect password or out of range.	Verify Wi-Fi password. Move closer to the Wi-Fi router. Restart the device and router.

SPECIFICATIONS

- **Model:** TBDV1093BDLTQ
- **Display:** 10-inch Full Color Touch LCD (1200 x 800 resolution)
- **DVD Player:** Supports DVD, DVD±R/RW
- **Connectivity:** Wi-Fi, HDMI Output, Micro SD Card Slot, Headphone Jack, USB-C Charging Port
- **Battery:** Built-in Rechargeable Battery
- **Battery Life:** Up to 3 hours
- **Dimensions:** 10.24 x 7.48 x 1.65 inches (26.01 x 19 x 4.19 cm)
- **Weight:** Approximately 31 ounces (878.84 g)
- **Preloaded Apps:** Google, Google Play Store, YouTube, Google Chrome, Google Maps

- **Basic Apps:** Music Player, Movie Player, Photo Viewer, Web Browser, Email, Camera

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official GPX website or contact their customer service. Keep your purchase receipt as proof of purchase for warranty claims.

GPX Customer Support: www.gpx.com/support

© 2025 GPX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question