

SOKANY 08034

SOKANY Electric Pizza Oven Model 08034 Instruction Manual

Model: 08034

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before operating the appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

2. PRODUCT OVERVIEW

The SOKANY Electric Pizza Oven Model 08034 is designed for efficient and convenient cooking of pizzas and other flat-bread dishes. It features a powerful heating system and a non-stick cooking surface.

SOKANY® PIZZA MAKER



Easy
to clean



High
power



LED Lamp



Double
side heating



A banner image for the SOKANY Pizza Maker, visually representing its key features: ease of cleaning, 2000W high power, LED indicator lamp, and double-sided heating for efficient cooking.

Key Features:

- **Powerful Heating:** 2000W for rapid heating and cooking.
- **Adjustable Temperature:** Dial control with multiple settings, up to 220°C.
- **Double-Layer Heating:** Ensures even heat distribution for consistent results.
- **Non-Stick Cooking Surface:** Facilitates easy food release and cleaning.
- **Compact Design:** Easy to store in kitchen cabinets or drawers.
- **Indicator Lights:** 'Power' (red) and 'Ready' (green) lights for operational status.



The SOKANY Electric Pizza Oven in its closed position, showcasing its compact design and black finish on a clean white kitchen counter.

3. SETUP AND FIRST USE

Unpacking:

1. Carefully remove the pizza oven from its packaging.

2. Remove all packaging materials, stickers, and labels.
3. Wipe the cooking plates with a damp cloth or sponge and dry thoroughly. Do not immerse the appliance in water.

Initial Heat-Up:

Before first use, it is recommended to perform an initial heat-up cycle to burn off any manufacturing residues.

1. Place the pizza oven on a stable, heat-resistant surface.
2. Plug the power cord into a suitable electrical outlet. The red 'Power' indicator light will illuminate.
3. Turn the temperature control dial to the maximum setting.
4. Allow the appliance to heat for approximately 5-10 minutes. A slight odor or smoke may be present during this initial heating; this is normal.
5. Unplug the appliance and allow it to cool completely.

4. OPERATING INSTRUCTIONS

Cooking a Pizza:

1. Ensure the pizza oven is clean and dry.
2. Plug the power cord into an electrical outlet. The red 'Power' light will turn on.
3. Turn the temperature control dial to your desired setting. The green 'Ready' light will illuminate when the oven reaches the set temperature.
4. Carefully open the lid using the handle.
5. Place your pizza (up to 31cm in diameter) onto the lower cooking plate.
6. Close the lid. The double-layer heating system will cook the pizza from both top and bottom.
7. Cook for approximately 5-10 minutes, or until the pizza is golden brown and the cheese is melted and bubbly. Cooking times may vary based on pizza thickness, toppings, and desired crispness.
8. Once cooked, carefully open the lid and remove the pizza using a non-metallic utensil to avoid scratching the non-stick surface.
9. Unplug the appliance after use and allow it to cool before cleaning.



An overhead view of the SOKANY Electric Pizza Oven open, revealing a freshly cooked pizza cut into slices. Dimensions of 35cm and 32cm are indicated, highlighting the cooking surface size.

Temperature Control:

The appliance features a rotary dial for temperature adjustment. Settings range from minimum to maximum (up to 220°C). Adjust the dial to achieve the desired cooking temperature for your specific recipe.



A close-up view of the control panel, featuring the adjustable temperature dial and the 'Power' (red) and 'Ready' (green) indicator lights.

Versatility:

Beyond pizzas, this appliance can be used to prepare other dishes such as flatbreads, quesadillas, and

even large cookies, thanks to its dual heating plates.

PIZZA AND MORE!



Steak



Nachos



Cinnamon buns




The SOKANY Electric Pizza Oven with a pizza being removed, demonstrating its use. Insets show other dishes like steak, nachos, and cinnamon buns, illustrating the appliance's multi-functionality.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your SOKANY Electric Pizza Oven.

Cleaning:

1. Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. Wipe the exterior of the appliance with a soft, damp cloth.
3. For the non-stick cooking plates, gently wipe with a damp cloth or sponge. For stubborn food residues, a small amount of mild dish soap can be used, followed by wiping with a clean damp cloth.
4. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the non-stick coating.
5. Never immerse the appliance, power cord, or plug in water or any other liquid.

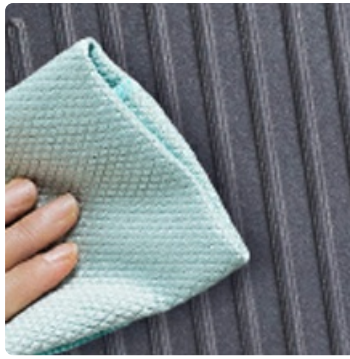

A hand gently wiping the non-stick cooking surface of the SOKANY Electric Pizza Oven with a soft cloth, demonstrating the ease of cleaning.

Storage:

Once the appliance is clean and completely cool, it can be stored in a dry place. Its compact design allows for convenient storage in most kitchen cabinets or drawers.

SUITABLE FOR GIFTS

The collage features four distinct scenes of gift-giving. In the top-left, a man in a red sweater and a woman in a pink sweater are smiling as they receive a gift from an older man in a blue shirt. In the top-right, a woman in a white top is opening a gift box while others look on with excitement. In the bottom-left, a man in a blue shirt and glasses is laughing as he receives a gift from a woman. In the bottom-right, a group of people wearing party hats are gathered around a gift box, looking surprised and happy. In the center, a circular inset shows the SOKANY Electric Pizza Oven with a pizza cooking inside.

The SOKANY Electric Pizza Oven neatly stored in a kitchen drawer, demonstrating its compact size for convenient storage.

6. TROUBLESHOOTING

If you encounter any issues with your SOKANY Electric Pizza Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
Appliance not heating up.	Temperature dial set too low; internal malfunction.	Increase the temperature setting. If the issue persists, contact customer support.
Food sticks to the cooking plates.	Insufficient preheating; damaged non-stick coating.	Ensure the appliance is fully preheated (green 'Ready' light is on). Use a small amount of cooking oil if necessary. Avoid using metal utensils.
Uneven cooking.	Lid not fully closed; uneven food placement.	Ensure the lid is properly closed during cooking. Distribute food evenly on the cooking plate.

If the problem persists after attempting these solutions, please contact SOKANY customer support.

7. SPECIFICATIONS

Feature	Specification
Model	08034
Brand	SOKANY
Power	2000W
Voltage	220-240V (Standard EU)
Maximum Temperature	220°C
Pizza Diameter Capacity	Up to 31 cm
Dimensions (L x W x H)	Approximately 36 x 19 x 43 cm
Weight	Approximately 1.9 kg
Material	Stainless Steel (exterior), Non-stick coating (cooking plates)
Control Type	Rotary Dial

8. PRODUCT DEMONSTRATION VIDEO

Watch this video for a visual guide on the SOKANY Electric Pizza Oven's features and operation.

Your browser does not support the video tag.

This video demonstrates the SOKANY Electric Pizza Oven's compact storage, quick preheating, and ease of use for cooking a pizza. It shows the appliance being taken out of a cabinet, plugged in, temperature set, and a pizza being cooked and removed.

9. WARRANTY AND SUPPORT

SOKANY products are manufactured to high-quality standards. For warranty information or technical support, please refer to the warranty card included with your purchase or contact SOKANY customer service through the retailer where the product was purchased.