

[Manuals.plus](#) /

› [GoolRC](#) /

› GoolRC Remote Control Dolphin Boat (Model 3738AD) User Manual

GoolRC 3738AD

GoolRC Remote Control Dolphin Boat User Manual

Model: 3738AD

1. INTRODUCTION

Thank you for purchasing the GoolRC Remote Control Dolphin Boat. This product features 2.4GHz remote control technology for precise operation, a high-simulation dolphin design with head ball rotation, and waterproof construction. It is designed for use in pools, lakes, and rivers, offering an engaging experience with its multi-directional control and one-click demo features.

2. SAFETY INFORMATION

- This product is suitable for individuals aged 14 years and older. Adult supervision is recommended for younger users.
- Do not operate the boat in saltwater or near marine life.
- Ensure all battery compartments are securely sealed before placing the boat in water.
- Avoid operating the boat in crowded swimming areas or where it may interfere with other water activities.
- Always remove the boat from water and turn off power when not in use or during battery changes.
- Do not attempt to modify or disassemble the product, as this may cause damage or injury.
- Keep small parts away from children to prevent choking hazards.

3. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- GoolRC Remote Control Dolphin Boat
- 2.4GHz Remote Control
- 3.7V Rechargeable Lithium Battery (for dolphin boat)
- USB Charging Cable
- Screwdriver
- User Manual

4. SETUP

4.1 Dolphin Boat Battery Installation

1. Loosen the screws on the main battery compartment cover located on the underside of the dolphin boat using the provided screwdriver.
2. Open the battery cover and connect the 3.7V rechargeable lithium battery to the connector socket, ensuring correct polarity.
3. Place the battery inside the compartment, ensuring the waterproof seal ring is properly seated.
4. Close the battery cover and tighten the screws securely to maintain waterproof integrity.

 
Note: The dolphin boat will only activate when its bottom touches the water, due to its water sensing switch. It will power off automatically when removed from water.

4.2 Remote Control Battery Installation


1. Loosen the screws on the remote control's battery cover using the provided screwdriver.
2. Insert two 1.5V AA alkaline batteries into the compartment, observing the correct polarity (+/-).
3. Close the battery cover and tighten the screws securely.

Battery Installation

Battery installation

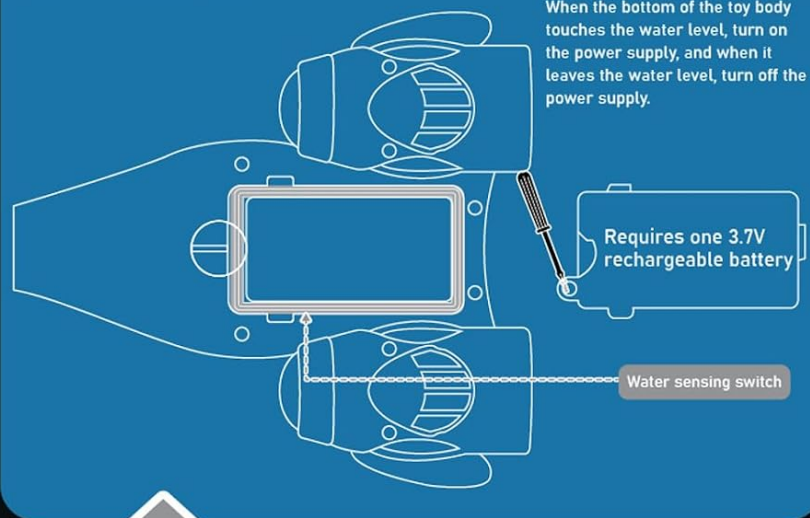

USB
CHARGING
CABLE
PROVIDED

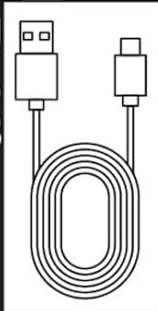 

Take out and install the rechargeable battery. Loosen the main battery compartment screws with screwdriver, open the battery cover, connect and pull out the battery connector socket in the correct direction, then close the battery cover, tighten the screws of the battery cover with screwdriver. The toy can only be used in water after it is installed in accordance with the instructions;

Remote control battery installation

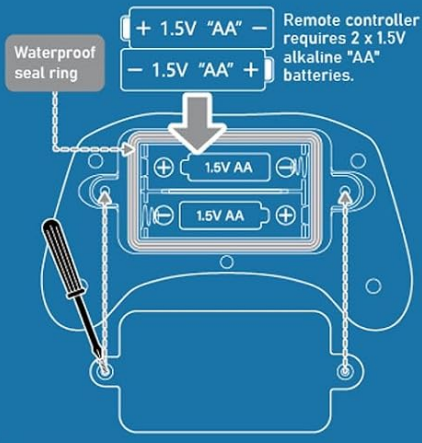 


Figure 1: Battery installation for the dolphin boat and remote control. The dolphin requires a 3.7V rechargeable battery, and the remote requires two 1.5V AA batteries. Ensure waterproof seals are correctly in place.

4.3 Charging the Dolphin Boat Battery

1. Connect the USB charging cable to the dolphin boat's battery.
2. Plug the other end of the USB cable into a standard USB power adapter (not included) or a computer USB port.
3. The charging indicator light will show the charging status (refer to the specific light behavior in your product's quick start guide if available). Charging typically takes [X] hours (refer to product packaging for exact time).
4. Disconnect the charger once the battery is fully charged.

5. OPERATING INSTRUCTIONS

5.1 Power On and Pairing

1. Ensure both the dolphin boat and the remote control have fresh or fully charged batteries installed.
2. Place the dolphin boat into the water. The boat will activate automatically due to its water sensing switch.

3. Turn on the remote control. The remote and boat should automatically pair. If pairing fails, turn both off and repeat the process.

5.2 Basic Controls

The 2.4GHz remote control allows for precise, interference-free operation.

- **Forward:** Push the left joystick forward.
- **Backward:** Pull the left joystick backward.
- **Turn Left:** Push the right joystick left.
- **Turn Right:** Push the right joystick right.
- **Automatic Demonstration:** Press the designated demo button on the remote control to activate a pre-programmed movement sequence.
- **Dolphin Head Ball Rotation:** Use the specific button or joystick combination (refer to remote control diagram) to initiate the ball rotation feature on the dolphin's head.




Figure 2: The GoolRC RC Dolphin Boat and its remote control, highlighting features like all-directional control, one-click demonstration, and waterproof construction.

5.3 Special Features

- **Waterproof Design:** The boat is fully waterproof, preventing water from entering internal components. The remote control is also designed for use near water.
- **Double Propeller Drive:** Equipped with a double propeller system for efficient movement and multi-directional control.
- **Simulated Tail Movement:** The segmented tail design allows for realistic dolphin-like swaying movements in the water. The tail can also be removed by pressing the dorsal fin for maintenance or storage.


Simulation model

 The animal tail can swing at will, just like a real dolphin

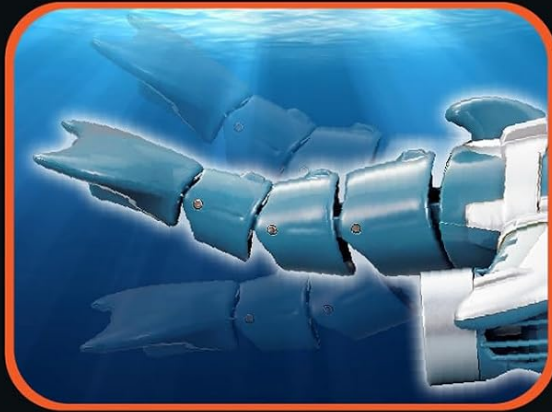

Tail can be removed

 The tail can be removed by pressing the dorsal fin

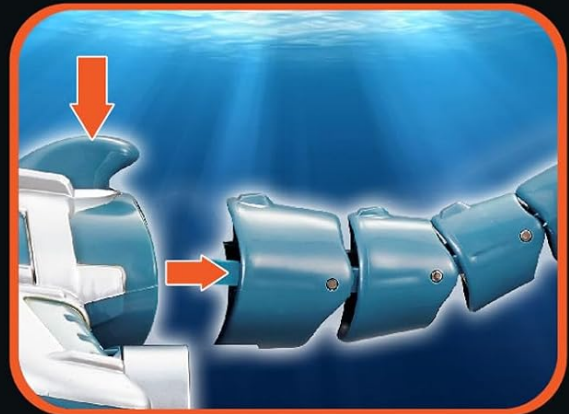

DOUBLE PROPELLER

Double propeller drive
Full power and multi-directional control.



Figure 3: Detailed view of the dolphin boat's simulated tail movement, the mechanism for detaching the tail, and the double propeller drive system.

5.4 Demonstration Video

Your browser does not support the video tag.

Video 1: Official product video demonstrating the GoolRC Remote Control Dolphin Boat's movement, ball spinning feature, and multi-directional control in water.

6. MAINTENANCE

- After each use, gently wipe the dolphin boat and remote control with a soft, dry cloth.
- Ensure all water is drained from the boat's interior before storage.
- Store the product in a cool, dry place away from direct sunlight and extreme temperatures.
- Remove batteries from both the boat and remote control if storing for extended periods to prevent leakage.
- Regularly check the propellers for any debris or entanglement and clean as necessary.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Boat does not move.	Low battery in boat or remote; not in water; not paired.	Charge boat battery, replace remote batteries, ensure boat is in water, re-pair remote.
Poor control or short range.	Low remote battery; interference; too far from boat.	Replace remote batteries, move away from other 2.4GHz devices, operate within recommended range.
Dolphin head ball does not rotate.	Feature not activated; obstruction.	Ensure correct button is pressed, check for any debris obstructing rotation.
Water inside battery compartment.	Battery cover not sealed properly.	Immediately remove batteries, dry compartment thoroughly, ensure waterproof seal is correctly seated and cover is tightened before next use.

8. SPECIFICATIONS

Feature	Detail
Brand	GoolRC
Model Number	3738AD
Control Frequency	2.4GHz
Dolphin Boat Battery	3.7V Rechargeable Lithium Battery
Remote Control Batteries	2 x 1.5V AA Alkaline Batteries (not rechargeable)
Material	Plastics
Item Dimensions (L x W x H)	14.96 x 3.54 x 5.91 inches (38 x 9 x 15 cm)
Color	Blue
Operation Mode	Automatic (water sensing)



Figure 4: Product dimensions for the GoolIRC RC Dolphin Boat and its remote control, including packaging size.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CZLFKYS8>

More documents and user manuals: <https://manuals.plus/>