

[Manuals.plus](#) /

› [Secura](#) /

› Secura Stainless Steel Conical Burr Coffee Grinder Instruction Manual

Secura CG9702-UL

Secura Stainless Steel Conical Burr Coffee Grinder

MODEL: CG9702-UL

Brand: Secura

Introduction

This instruction manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Secura Stainless Steel Conical Burr Coffee Grinder. Please read this manual thoroughly before first use and retain it for future reference.





Figure 1: Secura Stainless Steel Conical Burr Coffee Grinder, showcasing its sleek black design and transparent bean hopper.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or grinder in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped

or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the bean hopper lid and grounds container are properly in place before operating the grinder.

Parts and Features

Your Secura Coffee Grinder consists of several key components designed for optimal performance and ease of use.

- **Bean Hopper:** Transparent container for holding whole coffee beans (8.8 oz capacity).
- **Grind Setting Selector:** Dial with 35 settings for adjusting grind fineness.
- **Power Button/Quantity Selector:** Controls operation and selects desired coffee amount (2-12 cups).
- **Grounds Container:** Removable container for collecting ground coffee.
- **Conical Burrs:** High-quality stainless steel burrs for consistent grinding.
- **Cleaning Brush:** Included for easy maintenance.

Large Capacity

8.8 Ounce Bean Hopper Capacity



Figure 2: Close-up view of the large 8.8 ounce bean hopper, designed to hold ample coffee beans for multiple grinding sessions.

Premium Conical Burr Grinder

Minimizes grinding heat for even grinding, retaining the best flavor and texture of coffee beans



Figure 3: Internal view of the conical burrs, which minimize grinding heat to preserve coffee flavor and texture.

Setup

1. **Unpack:** Carefully remove all packaging materials and components from the box.
2. **Clean:** Before first use, wash the bean hopper lid, grounds container, and removable top burr with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the grinder with a damp cloth.
3. **Assemble:** Ensure the top burr is securely in place. Position the grounds container correctly in its slot.
4. **Place:** Place the grinder on a stable, flat, and dry surface.

Operating Instructions

Follow these steps to grind your coffee beans to perfection:

1. **Add Beans:** Open the bean hopper lid and pour whole coffee beans into the hopper. The maximum capacity is 8.8 ounces (250g). Close the lid securely.



Figure 4: The transparent bean hopper filled with coffee beans, indicating its generous capacity.

2. **Select Grind Setting:** Rotate the grind setting selector to choose your desired fineness. The grinder offers 35 settings, ranging from fine (for espresso) to coarse (for French press). Refer to the markings on the dial for guidance (e.g., Espresso: 1-10, Drip/Pour Over: 11-25, French Press: 26-35).

35 PRECISE GRINDING SETTINGS

Perfect for All kinds of Coffee Maker



Figure 5: The grind setting dial, showing the range from Espresso (fine) to French Press (coarse) with 35 precise options.

3. **Select Coffee Amount:** Rotate the quantity selector dial to choose the number of cups you wish to grind, from 2 to 12 cups.



Figure 6: A hand adjusting the quantity selector dial, which allows users to choose between 2 and 12 cups of coffee.

4. **Start Grinding:** Press the power button (located in the center of the quantity selector) to begin grinding. The grinder will automatically stop once the selected amount of coffee has been ground.
5. **Remove Grounds:** Once grinding is complete, carefully remove the grounds container from the unit. The container has a lid to help keep grounds fresh.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your grinder.

1. **Unplug:** Always unplug the grinder from the power outlet before cleaning.
2. **Remove Grounds Container:** Empty any remaining coffee grounds from the container. Wash the container and its lid with warm, soapy water, rinse, and dry thoroughly.
3. **Remove Top Burr:** Twist and lift the top burr to remove it from the grinder. Use the included cleaning brush to remove any trapped coffee particles from both the top burr and the lower burr.



Figure 7: A hand demonstrating the removal of the top burr for easy cleaning with the included brush.

4. **Clean Grinding Chamber:** Use the cleaning brush to carefully sweep out any coffee grounds from the grinding chamber. Do not use water or liquids inside the grinding chamber.
5. **Wipe Exterior:** Wipe the exterior of the grinder with a soft, damp cloth. Do not immerse the main unit in water.
6. **Reassemble:** Once all parts are dry, reassemble the top burr and grounds container.

Troubleshooting

Problem	Possible Cause	Solution
Grinder does not start.	Not plugged in; Hopper/container not correctly placed.	Ensure power cord is securely plugged in; Check that the bean hopper and grounds container are properly seated.
Grinding is inconsistent.	Burrs are dirty or clogged; Incorrect grind setting.	Clean the burrs and grinding chamber thoroughly; Adjust to a finer or coarser setting as needed.

Problem	Possible Cause	Solution
Grinder is unusually loud.	Foreign object in burrs; Overloaded hopper.	Unplug and inspect burrs for foreign objects; Reduce the amount of beans in the hopper.
Grounds are static and messy.	Low humidity; Type of coffee beans.	Try adding a tiny drop of water to the beans before grinding (Ross Droplet Technique); Use a different type of coffee bean.

Specifications

- **Model Number:** CG9702-UL
- **Brand:** Secura
- **Color:** Black
- **Product Dimensions:** 8"L x 5.4"W x 11.7"H
- **Bean Hopper Capacity:** 8.8 ounces (250g)
- **Grind Settings:** 35 (from Espresso to French Press)
- **Cup Capacity:** 2-12 cups
- **Voltage:** 230 Volts (AC)
- **Item Weight:** 5.02 pounds
- **Manufacturer:** Secura



Figure 8: The grinder's compact design with key dimensions (11.7 inches height, 7.6 inches length, 4.8 inches width).

Warranty and Support

For warranty information or product support, please refer to the warranty card included with your purchase or visit the official Secura website. You may also contact Secura customer service for assistance with any issues or questions regarding your coffee grinder.

This product is from a small business brand. Support small businesses.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CZLJP7CG>

More documents and user manuals: **<https://manuals.plus/>**