

49S305

Instruction Manual for OEM Part - Remote Control Compatible with TCL Roku TV Model 49S305

Model: 49S305

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your new replacement remote control for TCL Roku TVs. This remote is designed to be a direct replacement, offering seamless compatibility and ease of use.

1.1. Product Overview



Image: Front view of the remote control, showing its ergonomic design and button layout.

The remote control features a standard layout with dedicated buttons for power, navigation, playback, and popular streaming services. It is designed for intuitive control of your compatible TCL Roku TV.

1.2. Compatibility

This remote control is compatible with a wide range of TCL Roku TV models. It is specifically designed to work with TCL Roku TV Smart 4K Ultra HDTVs. Please ensure your television is a Roku TV for proper functionality.



Image: A visual reminder that the remote is exclusively for Roku TVs, shown on a TV screen.

For a comprehensive list of compatible models, refer to the product description on the original purchase platform or contact customer support.

2. SETUP

2.1. Battery Installation

This remote control requires two (2) AAA alkaline batteries (not included). No programming or pairing is needed for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Step-by-step visual guide for battery insertion.

Once batteries are installed, the remote is ready for immediate use with your compatible TCL Roku TV.

3. OPERATING INSTRUCTIONS

3.1. Button Functions

Familiarize yourself with the remote control's buttons and their corresponding functions:



Image: Labeled diagram of the remote control buttons.

Button	Function
Power ()	Turns the TV on or off.
Back (←)	Returns to the previous screen or menu.
Home (⌂)	Navigates to the Roku TV Home screen.
Directional Pad (Up, Down, Left, Right)	Navigates through menus and content.
OK	Selects an item or confirms an action.
Instant Replay (↶)	Jumps back a few seconds in video playback.

Button	Function
Options (*)	Accesses additional options for selected content or app.
Rewind (◀◀)	Rewinds video playback.
Play/Pause (▶)	Plays or pauses video playback.
Fast Forward (▶▶)	Fast forwards video playback.
Channel Shortcut Buttons (Netflix, Disney+, Apple TV+, HBO Max)	Directly launches the corresponding streaming application.



Image: Close-up of the dedicated streaming service buttons.

4. MAINTENANCE

4.1. Cleaning the Remote

To maintain the remote control's appearance and functionality, follow these cleaning guidelines:

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.
- Ensure the remote is completely dry before re-inserting batteries or using it.

4.2. Battery Care

- Replace batteries when the remote's response becomes sluggish or stops working.
- Remove batteries if the remote will not be used for an extended period to prevent leakage and potential damage.
- Dispose of used batteries responsibly according to local regulations.

5. TROUBLESHOOTING

If you experience issues with your remote control, try the following solutions:

Problem	Possible Solution
Remote is not responding.	<ul style="list-style-type: none">• Check if the batteries are inserted correctly with the correct polarity (+/-).• Replace old batteries with new AAA alkaline batteries.• Ensure there are no obstructions between the remote and the TV's IR receiver.• Confirm the TV is a TCL Roku TV model.
Buttons are sticky or unresponsive.	<ul style="list-style-type: none">• Clean the remote control as described in the Maintenance section.• Ensure no liquid has spilled into the remote.
Remote works intermittently.	<ul style="list-style-type: none">• Replace batteries with new ones.• Ensure you are within the effective range of the TV's IR receiver.• Check for strong light sources (e.g., direct sunlight, fluorescent lights) that might interfere with the IR signal.

6. SPECIFICATIONS

Feature	Detail
Model	Replacement Remote Control for TCL Roku TV
Compatibility	TCL Roku TV Smart 4K Ultra HDTVs (various models, refer to product description for full list)
Power Source	2 x AAA Alkaline Batteries (not included)
Connectivity	Infrared (IR)

Feature	Detail
Special Feature	Ergonomic design, 4 Shortcut APP Keys
Color	Black
Max Number of Supported Devices	1 (TCL Roku TV)

7. WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the seller's policy on the platform where the product was purchased. Keep your purchase receipt as proof of purchase.

If you encounter issues not covered in this manual, please contact the seller or manufacturer directly for assistance.