

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

### CANDY CSO276TWMBZ-19

## CANDY 7KG Front Load SmartPro Inverter Automatic Washing Machine User Manual

Model: CSO276TWMBZ-19

### INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new CANDY 7KG Front Load SmartPro Inverter Automatic Washing Machine. Please read these instructions carefully before using the appliance and keep them for future reference.

Your CANDY washing machine is designed with advanced Italian technology, offering 16 versatile programs, smart connectivity, and efficient cleaning performance. It features a 7kg capacity, 1200 RPM inverter motor, and a stainless steel drum, ensuring optimal care for your garments.



Figure 1: Front view of the CANDY 7KG Front Load SmartPro Inverter Automatic Washing Machine.

### SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Keep flammable materials and vapors away from the appliance.
- Ensure the appliance is properly grounded.
- Supervise children when the appliance is in use.
- Do not overload the washing machine.
- Always unplug the appliance before cleaning or performing maintenance.

## SETUP AND INSTALLATION

### Unpacking

Carefully remove all packaging materials from the washing machine. Check for any damage during transit. Keep packaging materials out of reach of children.

### Location

Place the washing machine on a firm, level floor. Ensure there is adequate space around the appliance for ventilation and maintenance. Avoid direct sunlight or extreme temperatures.

### Water Connection

Connect the supplied water hose to a cold water tap. Ensure all connections are tight to prevent leaks. The appliance requires a 220 Volts power supply.

*Included components: Water Hose.*

### Drainage

Position the drain hose into a suitable drain pipe or sink, ensuring it is securely fastened to prevent displacement during operation.

### Leveling

Adjust the leveling feet at the bottom of the washing machine to ensure it is perfectly stable and level. This minimizes vibration and noise during operation.

## OPERATING INSTRUCTIONS

### Control Panel Overview

The washing machine features a 6-digit digital display and a program selection dial for intuitive control.



Figure 2: Detailed view of the control panel with program options and digital display.



Figure 3: Close-up of the program selection dial, showing various wash cycles.

### Loading Laundry

Open the front load door and place laundry inside the stainless steel drum. Do not overload the machine; the maximum capacity is 7kg. Ensure no items are caught in the door seal before closing.



Figure 4: The washing machine with its front door open, revealing the stainless steel drum.



Figure 5: A detailed view of the perforated stainless steel drum inside the washing machine.

#### Adding Detergent

Pull out the detergent drawer located on the top left of the machine. Add appropriate amounts of detergent and fabric softener to the designated compartments.



Figure 6: The detergent drawer of the washing machine, shown in the open position.

#### Program Selection

Turn the program selection dial to choose one of the 16 available programs. The digital display will show the selected program and estimated time.

- **Common Programs:** Cottons, Mixed & Coloured, Synthetics & Coloured, Delicates, Wool, Hand Wash.
- **Special Programs:** Special49', Rapid 14/30'/44', Steam Hygiene Plus, Easy Iron Plus 39'.
- **Utility Programs:** Rinse, Drain + Spin.
- **Smart Programs:** Smart Wash, ECO.

### Starting a Wash Cycle

Press the "Start/Pause" button to begin the selected wash cycle. The door lock feature will engage for safety during operation.

### Delay Start Function

Utilize the 24-hour delay start timer to schedule your wash cycle to begin at a more convenient time.

### Smart Connectivity (WiFi + Bluetooth)

Connect your washing machine to your home WiFi network and pair it via Bluetooth to control and monitor cycles using the dedicated smartphone app. Refer to the app's instructions for detailed setup.

## MAINTENANCE

### Cleaning the Exterior

Wipe the exterior of the washing machine with a soft, damp cloth. Avoid abrasive cleaners or solvents.

### Cleaning the Detergent Drawer

Regularly remove and clean the detergent drawer to prevent residue buildup. Rinse it under running water and dry thoroughly before reinserting.

### Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a washing machine cleaner) periodically to clean the drum and remove any odors or residue.

### Door Seal Care

After each wash, wipe the door seal dry to prevent mold and mildew growth. Periodically check for any trapped debris.

### Filter Cleaning

Consult the full product manual for instructions on how to access and clean the drain pump filter, which should be done regularly to ensure optimal performance.

## TROUBLESHOOTING

This section provides solutions to common issues you might encounter. For more complex problems, please contact customer support.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, "Start/Pause" not pressed.	Check power connection, ensure door is securely latched, press "Start/Pause" button.
Excessive vibration/noise	Machine not level, transit bolts not removed, overloaded drum.	Adjust leveling feet, ensure transit bolts are removed (during installation), reduce laundry load.
Water not draining	Drain hose kinked or blocked, drain pump filter clogged.	Check drain hose for kinks, clean the drain pump filter.
Detergent residue in drawer	Insufficient water pressure, drawer not cleaned regularly, too much detergent.	Check water supply, clean detergent drawer, use recommended detergent amount.
Unpleasant odors	Mold/mildew buildup, detergent residue.	Run a maintenance wash, clean door seal and detergent drawer.

## SPECIFICATIONS

Feature	Detail
Brand	CANDY
Model Number	CS0276TWMBZ-19
Capacity	7 Kilograms
Access Location	Front Load
Spin Speed	1200 RPM
Motor Type	Inverter
Connectivity	WiFi, Bluetooth, App Control
Number of Programs	16
Display Style	6 Digit Display
Special Features	Delay Start, Easy Iron Plus 39', Hygiene Steam, Smart Connectivity

Feature	Detail
Material	ABS (Body), Stainless Steel (Drum)
Color	White
Product Dimensions (D x W x H)	49 x 60 x 85 cm
Item Weight	62 Kilograms
Voltage	220 Volts
Noise Level	79 dB
Installation Method	Freestanding
Included Components	Water Hose

## WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or contact your local CANDY service center. Keep your proof of purchase for warranty claims.

For technical support, troubleshooting assistance beyond this manual, or to schedule service, please contact CANDY customer support. Contact details can typically be found on the manufacturer's official website or on your purchase documentation.

**Online Resources:** For the most up-to-date information, FAQs, and additional support, visit the official CANDY website.

© 2024 CANDY. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Documents - CANDY – CSO276TWMBZ-19




[\[pdf\] Dimension Guide](#)

productdetails lan EN sku 31019173 mkt ae docgenerator candy it |||

Smart Pro Inverter **CSO276TWMBZ-19** Easy Iron Plus 39 MAIN FEATURES Product name / Commercial code Product code EAN C Electronics Spin speed rpm Connectivity IoT App **CSO276TWMBZ-19** 31019173 8059019056746 Candy H...

lang:en score:24 filesize: 113.35 K page\_count: 3 document date: 2025-08-02

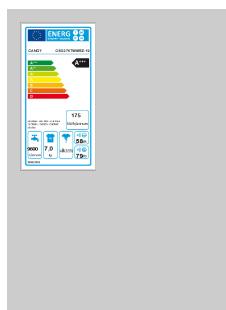


[\[pdf\] Label](#)

energylabel lan EN mkt EU sku 31019173 docgenerator candy it |||

CANDY **CSO276TWMBZ-19** 175 58 9600 7,0 79 ...


lang:en score:22 filesize: 173.49 K page\_count: 1 document date: 2025-08-02

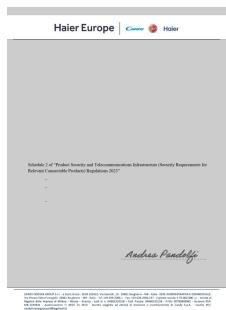

[Candy Front Load Washing Machine F3E1 Statement of Compliance](#)


Official Statement of Compliance for Candy Front Load Washing Machine, Model F3E1, manufactured by Candy Hoover Group S.r.l. 2023.

lang:en score:19 filesize: 280.58 K page\_count: 7 document date: 2024-04-17

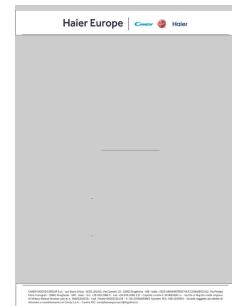

[\[pdf\] Specifications Declaration of Conformity](#)


PN TYPE CHG EU DoC Domenico Crippa Fiche produit UE RP586BWMBCB1S Lave Linge Frontal Noir 8 Kg CANDY RP586BWMBCB 1 S RP586BWMBC1 pror EU DECLARATION OF CONFORMITY No. WSH230669 rev.B Radio equipment Description: Brand: Model: Type: P ... C/1-S CSO € 19 CSO276TWMRZ-19 **CSO276TWMRZ-19** CSO4 066TWM-07 CSO4 076TWM-07 CSO4 266TWM-07 CSO4 266TWM-07 CSO lang:en **score:19** filesize: 398.34 K page\_count: 7 document date: 2024-01-25

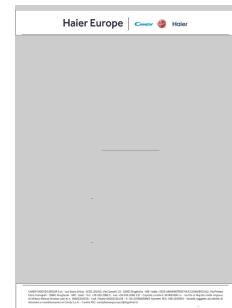

[EU Declaration of Conformity - Candy Hoover Group Washing Machines](#)

Official EU Declaration of Conformity for Candy Hoover Group front-loading washing machines with Wi-Fi & BT, detailing compliance comprehensive list of models.

lang:en **score:19** filesize: 305.75 K page\_count: 7 document date: 2025-01-20

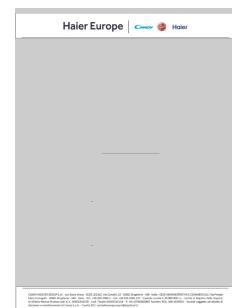

[\[pdf\] Specifications Declaration of Conformity](#)

PN TYPE CHG EU DoC Domenico Crippa Technopolis washing machine and washer dryer EN 60456 2016 A11 2020 WM Any Candy China 31019208 CSO 596T bWFzdGVyfHJvb3R8MzA5OTI3fGFwcGxpY2F0aW9uL3BkZnxhR1UyTDJnNVpTODBOelEyTlRnMk1EYzVNak0xTUM5RFR6UWdNamMwVkJTk5pNXdaR18ND attachment true |||

EU DECLARATION OF CONFORMITY No. WSH250026 rev.B Radio equipment Description: Brand: Model: Type: P ... WMT/1-S RF CSO496TWMRZ-ZA CSO496TWMRZ-19 **CSO276TWMRZ-19** RP586BWMBCB/1-S CSO276TWMRZ-ZA CSO 596TWMC/1-S RF lang:en **score:19** filesize: 302.66 K page\_count: 7 document date: 2025-05-06