

## DAYTEE CC02-CB01-01W 2-1

# Daytech Emergency Call Button System User Manual

Model: CC02-CB01-01W 2-1

Brand: DAYTEE

## 1. INTRODUCTION

---

Welcome to the user manual for the Daytech Emergency Call Button System. This system is designed to provide quick and reliable assistance for individuals who may need immediate help, such as the elderly, children, disabled persons, pregnant women, or those who are ill. It offers a simple and effective way to alert caregivers or family members without needing to shout or move.

The system includes a receiver unit and multiple transmitters (call buttons and a call bracelet) to ensure help is always within reach. Its long wireless range and adjustable settings make it suitable for various home environments.

## 2. PRODUCT COMPONENTS

---

The Daytech Emergency Call Button System typically includes the following components:

- 1 x Receiver Unit
- 1 x Call Button (Transmitter)
- 1 x Emergency Call Bracelet (Transmitter)
- 3 x AAA Batteries (for the receiver)

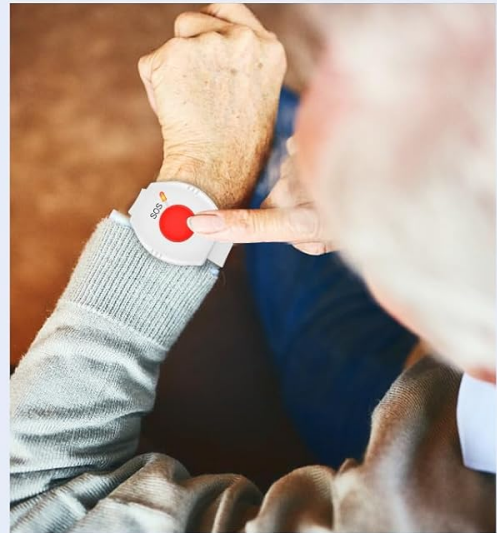


*Image: Overview of the Daytech Emergency Call Button System components, including the receiver, a portable call button, and a wearable wristband transmitter.*

### 3. KEY FEATURES

- **Low Battery Warning:** The receiver emits a silent sound and a flashing LED light when its battery level drops below 20%, ensuring you are alerted to replace batteries before an emergency.

## Einfache Bedienung, für mehr Sicherheit

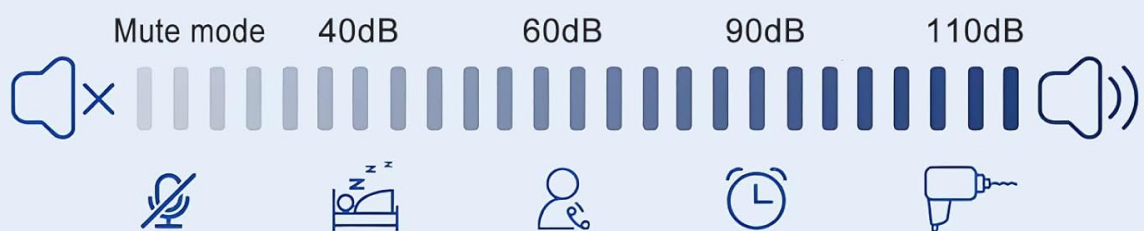


*Image: Visual representation of the low battery warning feature on the receiver unit.*

- **Long Wireless Range:** The call bracelet has a range of up to 150 feet (approximately 45 meters), and the push button has a range of up to 300 meters (approximately 984 feet). This allows for reliable communication across different rooms and floors within a home.

# 55 Klingeltöne & 5 einstellbare Lautstärkestufen

Unterschiedliche Klingeltöne für verschiedene Notruftasten einstellen



*Image: Depiction of the system's extensive wireless range, covering multiple rooms and floors.*

- **Easy to Expand:** The system supports connecting multiple receivers and transmitters. One receiver can be paired with up to 55 transmitters, and each transmitter can be set with different ringtones. A single transmitter can also be connected to numerous receivers.
- **Emergency Call Bracelet:** An ideal solution for individuals requiring quick assistance, such as the elderly, children, disabled, pregnant women, or sick patients. Simply press the call button to alert caregivers.

**Drücken Sie den Notrufknopf,  
wenn Hilfe benötigt wird.**



**anstatt zu  
schreien**



**Der Empfänger macht Töne,  
um Sie zu erinnern**

*Image: An elderly person demonstrating the use of the emergency call bracelet, with the receiver unit shown in a home setting.*

- **Convenient and Reliable:** The receiver can be placed in common areas like the living room or bedroom. The transmitter is IP55 waterproof, meaning it is protected against dust and low-pressure water jets, making it suitable for use in bathrooms or near beds.

# Wer braucht einen Notrufknopf?



Image: Examples of the system's versatile application in different care scenarios.

- **Adjustable Ringtone Volume:** Choose from 55 popular ringtones and adjust the volume across 5 levels, from 0 dB (mute) to 110 dB, to suit your preference and environment.

# Erinnerung an schwache Batterien

Wenn die Batterie des Empfängers schwach ist, ertönt ein "Low Battery"-Ton, um Sie zu warnen.

Gibt alle zwei Minuten einen "Low Battery"-Ton aus



Gibt alle zehn Sekunden einen "Low Battery"-Ton aus



Image: Display of the 55 ringtone options and 5 adjustable volume levels.

## 4. SETUP GUIDE

### 4.1. Installing Batteries in the Receiver

1. Locate the battery compartment on the back of the receiver unit.
2. Open the battery cover.
3. Insert 3 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery cover securely.

# Hausnotruf bis zu 150 Meter

Stabiles drahtloses Signal, verpassen Sie keinen Anruf



*Image: Detailed view of the receiver's battery compartment and battery installation.*

## 4.2. Transmitter Setup (Call Button & Bracelet)

The transmitters (call button and bracelet) are typically pre-paired with the receiver and ready for use out of the box. They usually come with pre-installed batteries.

## 4.3. Placement

- **Receiver:** Place the receiver unit in a central location where the sound can be easily heard, such as the living room, kitchen, or caregiver's bedroom.
- **Call Button:** The call button can be fixed to a wall near a bed, in a bathroom, or any other area where immediate assistance might be needed.
- **Call Bracelet:** The bracelet should be worn by the individual who may need assistance, typically on the wrist.

## 5. OPERATING INSTRUCTIONS

### 5.1. Initiating an Emergency Call

To initiate an emergency call, simply press the large red button on the call button or the SOS button on the call

bracelet. The signal will be sent wirelessly to the receiver unit.

## 5.2. Receiving an Alert

Upon receiving a signal from a transmitter, the receiver unit will:

- Emit the selected ringtone.
- Flash its LED indicator lights.

This dual alert system ensures that the call for help is noticed.

## 5.3. Adjusting Ringtone and Volume

The receiver unit has buttons on its side to adjust the ringtone and volume:

- Use the **Ringtone Selection Button** (often indicated by a music note or similar icon) to cycle through the 55 available melodies.
- Use the **Volume Adjustment Buttons** (often indicated by up/down arrows or speaker icons) to select one of the 5 volume levels, from mute (0 dB) to maximum (110 dB).

# 6. MAINTENANCE

## 6.1. Battery Replacement

When the receiver indicates a low battery warning (silent sound and flashing LED), replace the 3 AAA batteries promptly. Refer to section 4.1 for battery installation steps.

Transmitter batteries (call button and bracelet) are long-lasting. If a transmitter stops working, first check its battery. Consult the manufacturer's guidelines for specific battery types and replacement procedures for transmitters, as they may not be user-replaceable or may require specialized tools.

## 6.2. Cleaning

Clean the units with a soft, dry cloth. Do not use abrasive cleaners or immerse the receiver unit in water. The transmitters are IP55 waterproof, meaning they are protected against dust and low-pressure water jets, but should not be submerged.

# 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Receiver does not sound when button is pressed.	<ul style="list-style-type: none"><li>• Receiver batteries are low or depleted.</li><li>• Receiver is in mute mode.</li><li>• Transmitter battery is low or depleted.</li><li>• Out of wireless range.</li><li>• Interference from other devices.</li></ul>	<ul style="list-style-type: none"><li>• Replace receiver batteries (3 AAA).</li><li>• Adjust receiver volume using the volume buttons.</li><li>• Check and replace transmitter battery if possible, or contact support.</li><li>• Move receiver closer to the transmitter.</li><li>• Relocate the receiver or transmitter away from potential interference sources.</li></ul>

Problem	Possible Cause	Solution
Receiver sounds intermittently or weakly.	<ul style="list-style-type: none"> <li>• Low battery in receiver or transmitter.</li> <li>• Weak signal due to distance or obstacles.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace batteries in both units.</li> <li>• Ensure units are within optimal range and minimize obstructions like thick walls.</li> </ul>
Transmitter button feels unresponsive.	<ul style="list-style-type: none"> <li>• Transmitter battery depleted.</li> <li>• Physical damage to the button.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace transmitter battery if user-replaceable, or contact support.</li> <li>• If physically damaged, the unit may need replacement.</li> </ul>

## 8. SPECIFICATIONS

Feature	Detail
Model Number	CC02-CB01-01W 2-1
ASIN	B0CZMP5RK5
Brand	DAYTEE
Power Source	Battery Powered
Receiver Batteries	3 x AAA (included)
Voltage	4.5 Volts
Control Method	Tactile Button
Sound Level	Up to 110 dB
Max Wireless Range (Button)	300 Meters (approx. 984 feet)
Max Wireless Range (Bracelet)	150 Feet (approx. 45 meters)
Transmitter Water Resistance	IP55 (Protected against dust and low-pressure water jets)
Dimensions (L x W x H)	10 x 5 x 10 cm (approx. 3.94 x 1.97 x 3.94 inches)
Weight	253 grams (approx. 0.56 lbs)
Number of Ringtones	55
Volume Levels	5 (0 dB to 110 dB)

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the seller directly. Information regarding spare parts availability is not provided in this manual. For technical assistance or inquiries, please reach out to DAYTEE customer service through their official channels. Always ensure to purchase from authorized sellers to guarantee product authenticity and access to support.

services.