

TIATUA S10

TIATUA Kids Instant Print Camera User Manual

Model: S10

1. INTRODUCTION

Thank you for choosing the TIATUA Kids Instant Print Camera, Model S10. This camera is designed to provide a fun and interactive photographic experience for children aged 3-14. It combines digital photography with instant printing capabilities, allowing young users to capture and print memories immediately. This manual provides essential information for safe operation, setup, usage, and maintenance of your new camera.

Key Features:

- **Instant Print Technology:** Print photos instantly without ink or toner.
- **High-Resolution Capture:** 12MP lens for clear images and 1080P HD video recording.
- **Versatile Functions:** Includes photography, video recording, black and white printing, music playback, games, and playback modes.
- **Creative Tools:** Fun frames, filters, and DIY coloring options for printed photos.
- **Durable Design:** Covered with a protective silicone case to prevent damage from drops and bumps.
- **Long Battery Life:** Built-in 1000mAh battery provides up to 4 hours of continuous use.
- **Expandable Storage:** Comes with an extra 32GB memory card for ample photo and video storage.

2. SAFETY INFORMATION

Please read and understand all safety precautions before using the camera. Failure to follow these instructions may result in injury or damage to the device.

- **Adult Supervision:** This camera is designed for children, but adult supervision is recommended during use, especially for younger children.
- **Choking Hazard:** Keep small parts, such as the memory card, out of reach of very young children to prevent choking.
- **Battery Safety:** The camera contains a built-in lithium polymer battery. Do not attempt to replace the battery. Do not expose the camera to extreme temperatures, direct sunlight, or fire.
- **Charging:** Use only the provided USB charging cable. Ensure the charging port is dry before connecting the cable.
- **Water Exposure:** This camera is not waterproof. Avoid contact with water or other liquids.
- **Cleaning:** Clean the camera with a soft, dry cloth. Do not use liquid cleaners or solvents.
- **Disposal:** Do not dispose of the camera in household waste. Follow local regulations for electronic waste disposal.

3. PRODUCT COMPONENTS

The TIATUA Kids Instant Print Camera package includes the following items:

- TIATUA Kids Instant Print Camera (Pink)
- 3 Rolls of Thermal Print Paper
- 32GB Memory Card
- USB Charging Cable
- Lanyard
- Set of Color Pens



Image: The TIATUA Kids Instant Print Camera in pink, shown with included accessories: three rolls of thermal paper, a 32GB memory card, a USB charging cable, a lanyard, and a set of five color pens.

4. SETUP

4.1 Charging the Camera

Before first use, fully charge the camera. Connect the provided USB charging cable to the camera's charging port and the other end to a USB power adapter (not included), computer, or power bank. The charging indicator light will show the charging status. A full charge typically takes a few hours and provides up to 4 hours of usage time.



Image: The TIATUA Kids Instant Print Camera connected via USB cable to a power source, illustrating the charging process and highlighting the 1000mAh battery capacity and 32GB memory card slot.

4.2 Inserting the Memory Card

The camera comes with a 32GB memory card. Locate the memory card slot on the side of the camera. Insert the memory card with the gold contacts facing down until it clicks into place. To remove, gently push the card in until it springs out.

4.3 Loading Print Paper

The camera uses thermal print paper. Follow these steps to load the paper:

1. Open the paper slot cover on the front of the camera.
2. Insert a roll of thermal paper into the compartment, ensuring the paper feeds from the bottom and the leading edge is straight.

3. Pull a small length of paper (about 1-2 inches) out of the slot.
4. Close the paper slot cover firmly until it clicks.

5 Puzzle Games



Image: A three-step diagram illustrating how to open the paper slot, insert the thermal paper roll with the correct orientation, and close the cover to prepare for printing.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press and hold the power button (usually marked with a power symbol) for a few seconds to turn the camera on or off.

5.2 Taking Photos

In photo mode, frame your shot using the 2.4-inch display. Press the shutter button to capture an image. The camera supports continuous shooting and timer shooting.



Image: A child holding the TIATUA Kids Instant Print Camera, demonstrating the one-click print photo feature as a black and white photo emerges from the camera.

5.3 Recording Videos

Switch to video recording mode. Press the record button to start and stop recording. The camera supports 1080P HD video recording.

Oneclick Print Photo



Image: Three children posing for a video being recorded by the TIATUA Kids Instant Print Camera, highlighting its 1080P HD video recording capability and 16x zoom function.

5.4 Instant Printing

After taking a photo, you can choose to print it instantly. The camera uses inkless thermal printing technology. You can also adjust print density (Low, Middle, High) and choose between Grayscale Mode and Dot Matrix Mode for printing.



Image: An illustration showing the two printing modes (Grayscale and Dot Matrix) and three print density options (Low, Middle, High) available on the TIATUA Kids Instant Print Camera.

5.5 Creative Features

- **Photo Frames & Filters:** Apply various fun frames and filters to your photos before printing or saving.



Image: A child using the TIATUA Kids Instant Print Camera, with a display of various cute photo frames and color filters that can be applied to images.

- **DIY Coloring:** Use the included color pens to decorate your black and white printed photos.

Diy Color Pen & Stickers



Image: A young girl happily coloring a black and white photo printed from her TIATUA Kids Instant Print Camera, with color pens and stickers laid out.

- **Games:** The camera includes 5 puzzle games for entertainment.
- **MP3 Player:** The camera supports music playback. Transfer MP3 files to the memory card to use this feature.

5 Puzzle Games



1



2



3



4



5

Image: Two children engaged in playing one of the five built-in puzzle games on the TIATUA Kids Instant Print Camera.

5.6 Transferring Files

Connect the camera to a computer using the provided USB cable to transfer photos and videos. The camera will appear as a removable disk drive, allowing you to access its contents.

6. MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the camera body and screen. Do not use abrasive cleaners or solvents.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the camera regularly, even if not in use for extended periods.
- **Paper Storage:** Store thermal paper rolls in a cool, dark place to prevent degradation and ensure print quality.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is depleted.	Charge the camera fully using the provided USB cable.
Screen is white or black.	Software glitch or hardware issue.	Try restarting the camera. If the problem persists, contact customer support.
Photos are not printing or print quality is poor.	Paper loaded incorrectly, paper roll empty, or print head issue.	Ensure paper is loaded correctly and not empty. Check print density settings. If issues persist, contact support.
Cannot transfer files to computer.	USB cable connection issue or camera not recognized.	Ensure the USB cable is securely connected to both the camera and the computer. Try a different USB port.
Camera freezes or becomes unresponsive.	Temporary software error.	Press and hold the power button to force a shutdown, then restart the camera.

8. SPECIFICATIONS


Feature	Detail
Model Name	S10
Brand	TIATUA
Lens Resolution	12 Megapixels
Video Resolution	1080P HD
Screen Size	2.4-inch HD Eye-care Screen
Optical Zoom	16x Digital Zoom
Battery Capacity	1000mAh Lithium Polymer (included)
Usage Time	Up to 4 hours
Memory Card	32GB (included)
Printing Technology	Inkless Thermal Printing
Supported File Format	JPEG
Item Weight	14 ounces (approx. 397 grams)
Package Dimensions	8.27 x 5.63 x 2.2 inches

9. WARRANTY AND SUPPORT

The TIATUA Kids Instant Print Camera comes with a **one-year after-sales maintenance** period. For any product-related issues, technical support, or warranty claims, please contact TIATUA customer service through the retailer where you purchased the product or visit the official TIATUA store page on Amazon for further assistance.

For more information and support, you can visit the [TIATUA Store on Amazon](#).

Related Documents

	<p>S10 Bluetooth Earphones User Manual and Specifications</p> <p>Detailed specifications and operating instructions for the S10 Bluetooth earphones, including pairing, charging, and function controls. Features Bluetooth V5.4, HFP/HSP/A2DP/AVRCP support, and a 10m signal distance.</p>
---	--