

Dyson Supersonic r Hair Dryer Instruction Manual

Model: HD17 VLP

Brand: Dyson

1. INTRODUCTION

Thank you for purchasing the Dyson Supersonic r Hair Dryer. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new hair dryer. Please read this manual thoroughly before first use and keep it for future reference. The Dyson Supersonic r is engineered for fast drying and precision styling, featuring a lightweight design for comfortable handling.

2. SETUP

Before using your Dyson Supersonic r, ensure all packaging materials are removed and the product is free from any damage. The hair dryer comes with various magnetic attachments designed for different styling needs.



Image: The Dyson Supersonic r hair dryer shown with its main body and three distinct magnetic styling attachments: a wide-tooth comb, a flyaway attachment, and a diffuser. The main body is light pink with a rose gold curved top, and a dark grey filter at the base of the handle.

To attach an accessory, simply align the magnetic attachment with the nozzle of the hair dryer until it clicks into place. The magnetic connection ensures a secure fit and allows for easy rotation and removal.

- **Unboxing:** Carefully remove the hair dryer and all accessories from the packaging.
- **Power Connection:** Plug the power cord into a suitable electrical outlet (100V).
- **Attaching Accessories:** Select the desired magnetic attachment and firmly place it onto the front of the hair dryer until it magnetically secures.

3. OPERATING INSTRUCTIONS

The Dyson Supersonic r is designed for intuitive use with precise control over airflow and temperature.

Powering On/Off

- To turn the hair dryer on, slide the power button located on the handle upwards.
- To turn it off, slide the power button downwards.

Temperature and Airflow Settings

The hair dryer features multiple heat and speed settings to suit various hair types and styling needs.

- **Temperature Control:** Use the temperature button to cycle through different heat settings: cold shot, low, medium, and high.
- **Airflow Control:** Use the airflow button to adjust the fan speed: gentle, medium, and fast.
- **Cold Shot:** Press and hold the cold shot button for a burst of cool air to set your style.

Using Attachments

- **Diffuser:** For defining curls and waves, attach the diffuser and hold it close to your scalp.
- **Styling Concentrator:** For precise styling, use the styling concentrator to direct airflow to specific sections of hair.
- **Gentle Air Attachment:** For fine hair and sensitive scalps, this attachment diffuses the air to create a gentle, cooler airflow.

4. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your Dyson Supersonic r Hair Dryer.

Cleaning the Filter

The filter should be cleaned regularly to prevent dust and debris buildup, which can affect performance.

1. Unplug the hair dryer from the power outlet.
2. Twist the filter cage counter-clockwise and pull it down to remove it.
3. Wipe the filter mesh with a soft, dry cloth to remove any dust or lint. Do not use water.
4. Reinsert the filter cage and twist clockwise until it locks into place.

General Cleaning

- Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Clean the magnetic attachments with a damp cloth as needed. Ensure they are completely dry before reattaching.

5. TROUBLESHOOTING

If you encounter any issues with your Dyson Supersonic r, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Hair dryer not turning on	No power supply; power button not fully engaged.	Check if the plug is securely inserted into the outlet. Ensure the power button is fully slid to the 'on' position.
Low airflow or overheating	Blocked filter; air intake blocked.	Clean the filter as described in the Maintenance section. Ensure the air intake at the bottom of the handle is not obstructed.

Problem	Possible Cause	Solution
Unusual noise or vibration	Debris in the motor; loose attachment.	Unplug the device and check for any visible debris. Ensure attachments are securely fitted. If the problem persists, contact customer support.
Attachments not staying on	Magnets are dirty or damaged; attachment not aligned correctly.	Clean the magnetic surfaces on both the dryer and the attachment. Ensure proper alignment when attaching.

If the issue persists after attempting these solutions, please contact Dyson customer support for further assistance.

6. SPECIFICATIONS

Feature	Detail
Manufacturer	Dyson
Model Number	HD17 VLP
Color	Ceramic Pink
Material	Ceramic
Wattage	1200 W
Voltage	100 Volts
Power Source	Corded Electric
Product Weight	755 grams
Package Weight	2.11 kg
Package Dimensions	39.5 x 16.8 x 16.7 cm
Battery Use	No
Battery Included	No
Other Features	Lightweight

7. WARRANTY AND SUPPORT

Your Dyson Supersonic r Hair Dryer comes with a manufacturer's warranty.

Manufacturer Warranty

This product is covered by a **2-year manufacturer's warranty**. For detailed information regarding the terms and conditions of your warranty, please refer to the guide provided inside the product packaging.

Customer Support

For any questions, technical assistance, or warranty claims, please contact Dyson customer support. You can find contact information on the official Dyson website or within your product documentation.

It is recommended to register your product on the Dyson website to activate your warranty and receive important updates.

© 2024 Dyson. All rights reserved.