

Midea MDWPF1301F

Midea MDWPF1301F 13 Place Setting Freestanding Dishwasher User Manual

Model: MDWPF1301F

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Midea MDWPF1301F 13 Place Setting Freestanding Dishwasher. Please read these instructions thoroughly before using the appliance and retain them for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This dishwasher is designed for household use only.

- Ensure the appliance is properly grounded.
- Do not operate the dishwasher if the power cord is damaged.
- Keep children away from the dishwasher, especially when it is operating or when the door is open. The Child Lock feature should be activated to prevent accidental operation.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Do not touch the heating element during or immediately after use.
- Load sharp items so they are not likely to damage the door seal or interior.
- The dishwasher is equipped with a Self-Regulated Water Leak Protection System. However, always check for leaks during initial use.

3. PRODUCT OVERVIEW AND FEATURES

The Midea MDWPF1301F is a freestanding dishwasher designed for convenience and efficiency.



Figure 1: Freestanding design with key features including 70°C hot water wash, Child Lock, and Extra-Drying Function.

Key features include:

- **13 Place Setting Capacity:** Accommodates a large volume of dishes, suitable for families.
- **7 Wash Programs:** Offers versatile cleaning options for various dish types and soil levels.
- **Intensive 70°C Hot Water Wash:** Provides thorough cleaning and sanitization, eliminating up to 99.99% of germs.
- **Extra-Drying Function:** Ensures dishes are thoroughly dry after the wash cycle.
- **Child Lock Protection:** Prevents accidental operation by children.
- **Half Load Option:** Saves water and energy when washing smaller loads.
- **Adjustable Basket:** Allows flexibility in loading different sized items.
- **Delay Timer:** Schedule wash cycles at your convenience.
- **A++ Energy Efficiency:** Designed for reduced energy consumption.
- **Self-Regulated Water Leak Protection System:** Enhances safety by detecting and preventing water leaks.

Reasons To Buy Midea Dishwasher



**Self-Regulated Water
Leak Protection System**



**99.99%* Protection
from Germs**



Large Capacity



A++ Energy Efficiency

Figure 2: Interior view showing the 13 place setting capacity and adjustable racks.

4. SETUP AND INSTALLATION

The Midea MDWPF1301F is a freestanding dishwasher. Proper installation is crucial for optimal performance and safety.

4.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage. Keep packaging materials away from children.

4.2 Placement

Place the dishwasher on a level, stable surface. Ensure there is adequate space for the door to open fully. The product dimensions are 60D x 59.8W x 84.5H Centimeters.

4.3 Water Connection

Connect the inlet hose (included) to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa. Ensure all connections are tight to prevent leaks.

4.4 Drain Connection

Connect the drain hose (included) to your household drain system. Ensure the drain hose is not kinked or obstructed. The drain hose should be positioned at a height between 40 cm and 100 cm from the floor.

4.5 Electrical Connection

Connect the dishwasher to a grounded electrical outlet. The appliance operates on 240 Volts at 50 Hz. Do not use extension cords or adapters.

4.6 Salt Refill

Before first use, fill the salt dispenser with dishwasher salt using the provided salt refill funnel. This helps soften hard water and improves cleaning performance.

5. OPERATING INSTRUCTIONS

Your dishwasher features an LED display and push-button controls for easy operation.



Figure 3: Control panel with 7 wash programs.

5.1 Loading the Dishwasher

Load dishes according to the capacity and ensure water can reach all surfaces. Utilize the adjustable basket for larger items. Scrape off large food particles before loading.

5.2 Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. Fill the rinse aid dispenser to ensure streak-free drying.

5.3 Selecting a Wash Program

Choose from the 7 available wash programs based on the soil level and type of dishes:

1. **Intensive:** Ideal for heavily soiled kitchenware, featuring a 170-minute runtime and 17.5L water consumption.
2. **ECO:** Energy-efficient wash mode for normally soiled kitchenware, with a 225-minute runtime and 11L water consumption.
3. **Glass:** Gentle wash for delicate glassware.
4. **Rapid:** Quick wash for lightly soiled dishes.
5. **90 Min:** Fast and efficient wash mode with a 90-minute runtime, using 12.5L of water for a quicker clean.
6. **Soak:** Pre-wash cycle for loosening stubborn food residues.
7. **Self Cleaning:** Program for cleaning the dishwasher itself.

5.4 Special Functions

- **Child Lock:** Press and hold the designated button to activate/deactivate.
- **Extra-Drying Function:** Enhances drying performance.
- **Half Load:** Reduces water and energy consumption for smaller loads.
- **Delay Timer:** Set a delay for the wash cycle to start at a later time.

5.5 Starting a Wash Cycle

Close the dishwasher door firmly. Select your desired program and any special functions, then press the Start button.

6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and efficiency of your dishwasher.

- **Cleaning the Filters:** Regularly check and clean the filters at the bottom of the dishwasher to prevent blockages and ensure effective cleaning.
- **Cleaning the Spray Arms:** Ensure the spray arm nozzles are not clogged. Remove and clean if necessary.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- **Interior Cleaning:** Use the 'Self Cleaning' program periodically to clean the dishwasher interior.
- **Salt and Rinse Aid Levels:** Monitor and refill dishwasher salt and rinse aid as indicated by the appliance.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed, program not selected.	Check power connection, ensure door is latched, select a wash program.

Problem	Possible Cause	Solution
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, clogged filters.	Reload dishes correctly, clean spray arms and filters, add more detergent.
Water not draining	Clogged drain hose or filter, drain pump issue.	Check and clear drain hose and filters.
Excessive noise	Dishes interfering with spray arms, foreign object in pump.	Rearrange dishes, inspect for foreign objects.
Water leaks	Loose hose connections, damaged door seal.	Check hose connections, inspect and clean door seal.

8. SPECIFICATIONS

Specification	Detail
Brand	Midea
Model Number	MDWPF1301F
Installation Type	Freestanding
Capacity	13 Place Settings
Product Dimensions (D x W x H)	60D x 59.8W x 84.5H Centimeters
Weight	39 Kilograms
Noise Level	52 Decibels
Voltage	240 Volts
Operating Frequency	50 Hz
Energy Consumption	262 Kilowatt Hours Per Year
Water Consumption	11-17.5 Liters per cycle (program dependent)
Number of Wash Programs	7
Controls Type	Push Button
Display	LED
Material Type	Metal
Finish Type	Glossy
Included Components	Cutlery Basket, Drain Hose, Inlet Hose, Salt Refill Funnel, User Manual

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Your Midea MDWPF1301F dishwasher comes with:

- **2-year comprehensive product warranty.**
- **5-year motor warranty.**



Figure 4: 2 Years Product Warranty.



Figure 5: 5 Years Motor Warranty.

Please retain your purchase receipt as proof of purchase for warranty claims.

9.2 Customer Support

For service, technical assistance, or warranty claims, please contact Midea customer support:

- **Importer Contact Information:** Midea India Private Limited, Unit No. 517-522, Fifth Floor, Park Centra, BPTP, Sector 30, Gurugram, Haryana 122001.
- **Manufacturer Contact Information:** Foshan Shunde Midea Washing Appliances Manufacturing Co.,Ltd. No 20, Gangqiang Road, Beijiao, Shunde, Foshan, Guangdong, P.R. China - 528311.

Refer to the official Midea website or your purchase documentation for the most current contact details.