

[manuals.plus](#) /

› [Midea](#) /

› [Midea MDWTT0802D Countertop Dishwasher User Manual](#)

Midea MDWTT0802D

Midea MDWTT0802D Countertop Dishwasher User Manual

Model: MDWTT0802D

1. PRODUCT OVERVIEW

The Midea MDWTT0802D is a compact 8 place setting countertop dishwasher designed for efficient dish cleaning. It features multiple wash programs, an anti-bacterial filter, and a 24-hour delay timer for convenient operation.



Front view of the Midea MDWTT0802D Countertop Dishwasher, showcasing its compact design and control panel.

Key Features:

- 8 Place Setting Capacity:** Suitable for small families or individuals.
- 6 Wash Programs:** Intensive, Normal, ECO, Glass, Rapid, and 90 min.
- Anti-Bacterial Filter:** Enhances hygiene during washing cycles.
- Intensive 70°C Wash:** For heavily soiled dishes, ensuring ultra hygiene.
- 24-Hour Delay Timer:** Allows scheduling wash cycles for convenience.
- Compact and Portable Design:** Ideal for countertop placement.
- Low Noise Level:** Operates at 49 Decibels.

2. SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance to ensure safe operation and prevent damage. Keep this manual for future reference.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if the power cord is damaged. Contact qualified service personnel.

- Keep children away from the dishwasher, especially when it is operating or when the door is open.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Do not open the door during operation, especially during the hot wash cycle, to avoid scalding.
- Sharp items should be loaded with points and edges down to prevent injury.
- Do not store or use flammable materials near the dishwasher.
- Always disconnect the appliance from the power supply before cleaning or maintenance.

3. INCLUDED COMPONENTS

The following items are included with your Midea MDWTT0802D Countertop Dishwasher:

- Midea MDWTT0802D Dishwasher Unit
- Inlet Hose
- Drain Hose
- User Manual
- Salt Refill Funnel
- Cutlery Basket

4. SETUP AND INSTALLATION

4.1 Placement

Place the dishwasher on a stable, level countertop surface. Ensure there is adequate space around the unit for ventilation and hose connections. The dimensions of the unit are approximately 55 cm (Depth) x 50 cm (Width) x 59 cm (Height).

Say Hello To Sparkling Dishes



The Midea MDWTT0802D dishwasher shown with its compact dimensions: 55cm depth, 50cm width, and 59cm height, suitable for countertop placement.

4.2 Water Connection

- **Inlet Hose:** Connect the inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks.
- **Drain Hose:** Insert the drain hose into a sink or a dedicated drain pipe. Ensure the hose is securely positioned to prevent it from dislodging during operation. The drain hose should not be kinked or obstructed.

4.3 Power Connection

Plug the dishwasher into a grounded 220V electrical outlet. Do not use extension cords or adapters.

4.4 Initial Use Preparations

- **Salt Dispenser:** Fill the salt dispenser with dishwasher salt using the provided funnel. This helps soften hard water and improve cleaning performance.
- **Rinse Aid Dispenser:** Fill the rinse aid dispenser with rinse aid. Rinse aid helps prevent water spots and improves drying.

5. OPERATING INSTRUCTIONS

5.1 Control Panel

The control panel features an LED display and push-button controls for selecting programs, setting the delay timer, and starting/pausing cycles.




Close-up of the Midea MDWTT0802D dishwasher's control panel, featuring LED display and push-button controls for program selection and settings.

5.2 Loading Dishes

Arrange dishes in the racks, ensuring they do not block the spray arms. Place larger items in the lower rack and smaller items, glasses, and cups in the upper rack. Use the cutlery basket for forks, spoons, and knives.

Perfect For Small Families

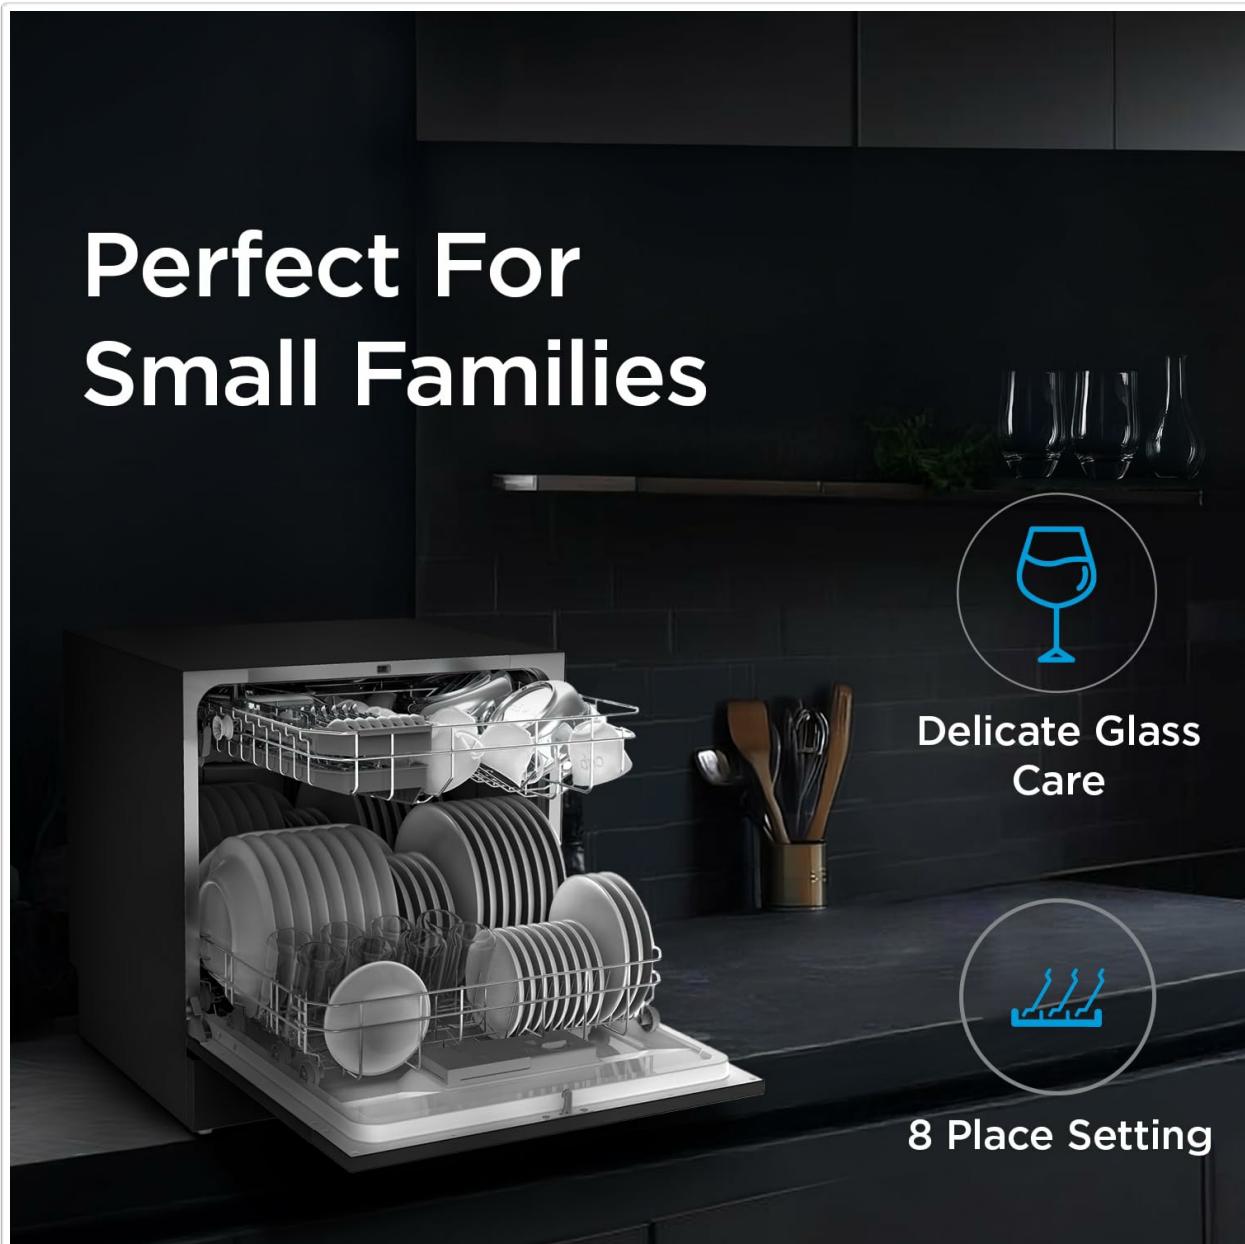

Interior view of the Midea MDWTT0802D dishwasher, demonstrating the capacity for 8 place settings including plates, glasses, and cutlery.

5.3 Adding Detergent

Add the appropriate amount of dishwasher detergent to the dispenser. Refer to the detergent manufacturer's instructions for dosage.

5.4 Selecting a Wash Program

Press the 'Program' button to cycle through the available wash programs. The selected program will be indicated on the LED display.

5.5 Delay Timer

To set a delayed start, press the 'Delay' button repeatedly to select the desired delay time (up to 24 hours). This allows the dishwasher to start at a later time, useful for off-peak electricity hours.

OFF-PEAK WASH CLEAN WHILE YOU DREAM



24HR DELAY
TIMER



An image depicting the Midea MDWTT0802D dishwasher operating in a kitchen while a person sleeps, emphasizing the 24-hour delay timer feature for off-peak washing.

5.6 Starting a Cycle

Close the dishwasher door firmly. Press the 'Start/Pause' button to begin the selected wash program. The dishwasher will automatically proceed through the cycle.

5.7 Power-Off Memory

The dishwasher is equipped with a power-off memory function, which allows it to resume the cycle from where it left off in case of a power interruption.

6. WASH PROGRAMS

The Midea MDWTT0802D offers 6 versatile wash programs to suit various cleaning needs:

Program	Description	Approx. Duration	Approx. Water Consumption
Intensive	For heavily soiled kitchenware, including pots, pans, and dishes with dried-on food. Features a 70°C wash.	160 minutes	12.5 Liters
Normal	Suitable for everyday washing of normally soiled dishes.	150 minutes	12.5 Liters
ECO	Energy-saving program for light or normally soiled kitchenware. Longer duration with lower water and energy use.	185 minutes	8 Liters
Glass	Gentle wash for delicate glassware and lightly soiled items.	Not specified (typically shorter than Normal)	Not specified
Rapid	Quick wash mode for less intense and rapid cleaning of lightly soiled dishes.	35 minutes	7 Liters
90 Min	Fast and efficient wash for moderately soiled dishes when you are in a rush.	90 minutes	11 Liters

7. MAINTENANCE

7.1 Cleaning the Filters

Regularly clean the anti-bacterial filter system to maintain optimal performance. Remove the filter assembly, rinse it under running water, and use a soft brush if necessary to remove food particles. Reassemble correctly before use.

7.2 Cleaning the Spray Arms

Check the spray arm nozzles for blockages. If any holes are clogged, clear them with a thin object like a toothpick.

7.3 Cleaning the Interior and Exterior

- Interior:** Wipe the interior with a damp cloth after each cycle. Occasionally run a dishwasher cleaning cycle with a specialized cleaner.
- Exterior:** Clean the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7.4 Refilling Salt and Rinse Aid

Monitor the salt and rinse aid indicator lights on the control panel. Refill the respective dispensers when the indicators illuminate.

7.5 Water Leak Protection

The dishwasher is equipped with water leak protection. In case of a leak, the system will automatically shut off the water supply to prevent damage. If this occurs, turn off the dishwasher, unplug it, and contact service.

8. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuses/circuit breakers.
Dishes are not clean	Improper loading; Insufficient detergent; Spray arm nozzles blocked; Incorrect wash program selected.	Reload dishes correctly; Add more detergent; Clean spray arm nozzles; Select a more intensive program.
Water not draining	Drain hose kinked or blocked; Filter system clogged.	Check and clear the drain hose; Clean the filter system.
White spots on dishes	Lack of rinse aid; Hard water.	Refill rinse aid dispenser; Ensure dishwasher salt is used and refilled.
Unusual noise	Dishes rattling against each other; Foreign object in pump area.	Rearrange dishes; Inspect and remove any foreign objects.

9. SPECIFICATIONS

Technical specifications for the Midea MDWTT0802D Countertop Dishwasher:

Feature	Specification
Model	MDWTT0802D(B)
Capacity	8 Place Settings
Installation Type	Countertop
Color	Black Compact
Controls Type	Push Button
Material	Metal
Noise Level	49 Decibels
Finish Type	Glossy
Form Factor	Freestanding
Item Weight	17 kg (17000 Grams)
Voltage	220 Volts
Cycle Options	Delicate, Economy, Intensive, Normal, Rapid
Recommended Uses	Residential

Feature	Specification
Display Type	LED
Annual Energy Consumption	205 Kilowatt Hours Per Year
Water Consumption (ECO)	8 Liters (approx. 2.1 Gallons per cycle)
Product Dimensions (LxWxH)	55 x 50 x 59 Centimeters
Special Features	Compact, Portable, Quick Wash, Timer Delay
Certification	Energy Star

10. WARRANTY AND SUPPORT

10.1 Product Warranty

The Midea MDWTT0802D Countertop Dishwasher comes with a **2-year product warranty**. Additionally, the motor is covered by a **5-year warranty** from the date of purchase. Please retain your purchase receipt as proof of warranty.

10.2 Customer Support

For technical assistance, service requests, or warranty claims, please contact Midea customer support. Refer to the contact information provided in your warranty card or visit the official Midea website for details.

Related Documents - MDWTT0802D

 Dishwasher Instruction Manual <small>PART 1: Generic Version</small> <small>TORRINO</small>  <small>Midea</small> <small>Please read and follow carefully. Failure to do so may result in personal injury or property damage. Always wear safety glasses when using power tools.</small>	<p><u>Midea Dishwasher Instruction Manual - TORRINO</u></p> <p>Comprehensive instruction manual for the Midea TORRINO dishwasher, covering safety information, product overview, usage, maintenance, installation, and troubleshooting.</p>
 Midea Countertop Dishwasher Install Instruction <small>METHOD 1: QUICK CONNECTION (RECOMMENDED)</small> <small>METHOD 2: PERMANENT CONNECTION (NOT RECOMMENDED)</small> <small>NOTE: If your faucet can't support Method 2, then Method 1 can be considered.</small>	<p><u>Midea Countertop Dishwasher Installation Guide</u></p> <p>Comprehensive installation instructions for Midea and COMFEE' countertop dishwashers, detailing both quick and permanent connection methods. Includes parts lists, faucet compatibility requirements, step-by-step guidance, and important safety notes for a successful setup.</p>

