

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HOOBRO](#) /

› [HOOBRO BF07XY01 5-Section Laundry Sorter Instruction Manual](#)

## HOOBRO BF07XY01

# HOOBRO BF07XY01 5-Section Laundry Sorter Instruction Manual

Model: BF07XY01 | Brand: HOOBRO

## 1. PRODUCT OVERVIEW

The HOOBRO BF07XY01 Laundry Sorter is designed for efficient laundry organization. It features a robust construction with a particleboard top panel and a metal frame, providing both durability and stability. This unit includes five removable Oxford fabric bags, each with a capacity of 40 liters (10.5 gallons), suitable for sorting various types of laundry. The top panel offers a convenient surface for storing laundry essentials or for folding and ironing clothes. Equipped with four industrial wheels, two of which have braking devices, the sorter can be easily moved and securely positioned. A bottom crossbar is integrated to prevent the laundry bags from sagging, ensuring long-term functionality.

# Versatile And Space-Saving

This versatile laundry hamper fits seamlessly into any room.



Image 1.1: The HOOBRO 5-Section Laundry Sorter in a laundry room, showcasing its versatile design and storage capabilities.

## 2. SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Ensure all screws and fasteners are tightened securely before use. Periodically check and re-tighten as necessary.
- Do not overload the laundry bags or the top panel beyond their specified weight limits (top panel: 100 lb; each laundry bag: 30 lb).
- Use the braking devices on the wheels to secure the sorter in place when not moving it.
- Avoid placing hot items directly on the top panel to prevent damage.
- Do not stand or climb on the unit.

## 3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, contact customer support.

- Laundry Cart Frame (Metal)
- Top Panel (Engineered Wood)
- 5 x Oxford Fabric Laundry Bags
- 4 x Industrial Wheels (2 with brakes)
- Accessory Kit (Screws, Allen Key, etc.)
- Instruction Manual

## 4. ASSEMBLY INSTRUCTIONS

---

Assembly is straightforward and typically takes approximately 25 minutes. Follow the detailed instructions provided in the included manual. Ensure all parts are correctly oriented before tightening screws.

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Attach the wheels to the bottom of the metal frame. Ensure the two wheels with braking devices are installed on the same side for easy access.
3. Assemble the metal frame according to the diagrams in the manual, securing all connections with the provided screws.
4. Place the engineered wood top panel onto the assembled frame and secure it.
5. Insert the Oxford fabric laundry bags into their designated slots within the frame. Ensure the hidden hooks are properly engaged to prevent bags from falling.
6. Verify that all connections are tight and the unit is stable before use.

Your browser does not support the video tag.

Video 4.1: An official product video demonstrating the features and assembly of the HOOBRO Laundry Sorter. This video highlights the ease of use and design elements.

## 5. SETUP AND PLACEMENT

---

Once assembled, position the laundry sorter in your desired location. The industrial wheels allow for easy movement between rooms. When the sorter is in its final position, engage the braking devices on the two lockable wheels to prevent unintended movement and ensure stability.

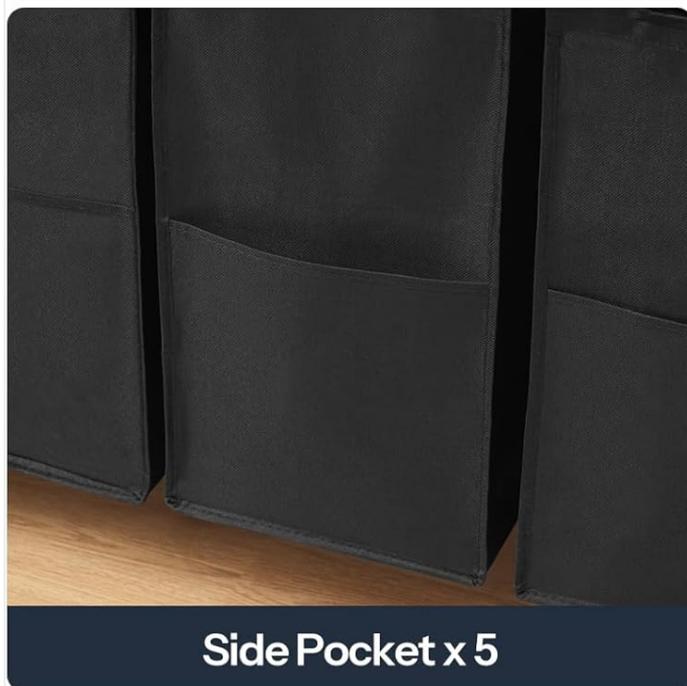
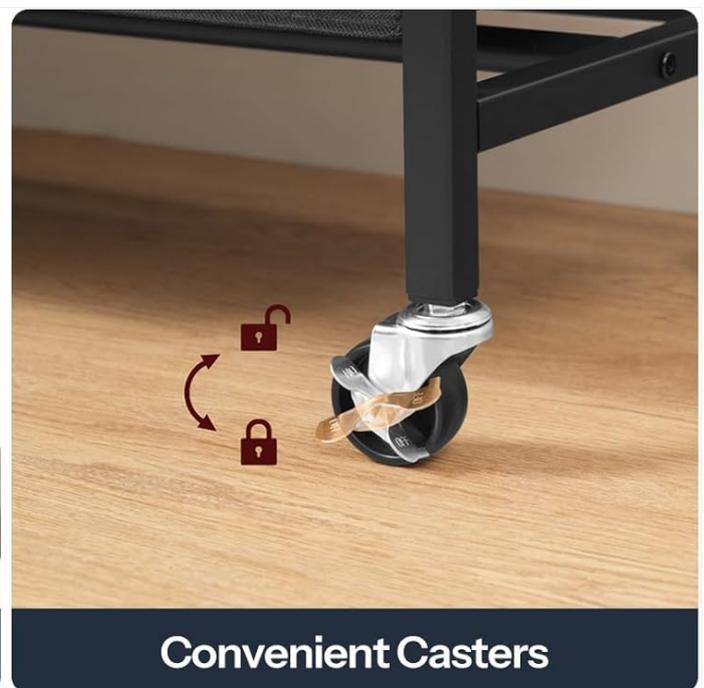


Image 5.1: Detail view of the convenient casters with braking devices, allowing for easy movement and secure placement of the laundry sorter.

## 6. OPERATING INSTRUCTIONS

### 6.1. Sorting Laundry

The HOOBRO Laundry Sorter features five individual Oxford fabric bags, each with a 40L capacity. These bags are designed to be pulled out and removed, facilitating easy sorting of different types of clothes (e.g., whites, darks, delicates, towels, etc.).

- To remove a bag: Gently pull the bag forward until it slides out from the frame.
- To reinsert a bag: Slide the bag back into its slot, ensuring the hidden hooks engage with the frame to secure it.

# 5 Laundry Baskets

Separating different-colored clothes.



Image 6.1: The five individual laundry baskets allow for efficient separation of different clothing types.

## 6.2. Using the Countertop

The sturdy top panel provides an extra-long surface that can be used for various purposes:

- **Storage:** Place laundry detergents, fabric softeners, or other laundry supplies on the surface.
- **Folding:** Use it as a convenient area to fold clean clothes.
- **Ironing:** The surface can also serve as a temporary space for ironing clothes (use an ironing mat to protect the surface from heat).



# Extra-Long Countertop

Dual-purpose design for clothing organization and ironing.

Image 6.2: The extra-long countertop provides a practical surface for various laundry tasks.

## 7. MAINTENANCE

### 7.1. Cleaning the Frame and Top Panel

- Wipe the metal frame and engineered wood top panel with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- Dry thoroughly after cleaning to prevent moisture damage.

### 7.2. Cleaning the Laundry Bags

- The Oxford fabric bags can be spot cleaned with a mild detergent and a damp cloth.
- For deeper cleaning, the bags can be removed and hand-washed in cold water with a mild detergent.
- Air dry completely before reinserting them into the frame. Do not machine wash or tumble dry.

## 8. TROUBLESHOOTING

- **Unit is wobbly:** Ensure all screws are securely tightened. Check that the unit is placed on a flat, even surface.
- **Laundry bags not sliding smoothly:** Check for any obstructions in the sliding mechanism. Ensure the bags are correctly aligned within their slots.
- **Wheels not locking:** Verify that the braking levers on the two lockable wheels are fully engaged.
- **Bags sagging:** Ensure the bottom crossbar is correctly installed and supporting the bags. Avoid overloading bags beyond the 30 lb capacity.

If you encounter any issues not covered here, please refer to the contact information for customer support.

## 9. SPECIFICATIONS

Feature	Detail
Product Dimensions	53.9"L x 12.9"W x 29.5"H (137cm L x 33cm W x 75cm H)
Brand	HOOBRO
Model Number	BF07XY01
Color	Rustic Brown, Black
Material	Engineered Wood, Metal, Oxford Fabric
Number of Compartments	5
Laundry Bag Capacity (each)	40 L (10.5 Gallon)
Max. Load Capacity (Top Panel)	100 lb
Max. Load Capacity (Each Laundry Bag)	30 lb
Special Feature	Wheeled (2 lockable casters)
Item Weight	26.4 pounds (12 Kilograms)



Image 9.1: Dimensional drawing of the laundry sorter, providing precise measurements for planning placement.

## 10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official HOOBRO website. Keep your purchase receipt as proof of purchase.

