

[Manuals.plus](#) /

> [Ambimall](#) /

> Ambimall 60-inch Floor Lamp with Remote Control Instruction Manual

Ambimall RPT-QZB30301

Ambimall 60-inch Floor Lamp Instruction Manual

Model: RPT-QZB30301

PRODUCT OVERVIEW

The Ambimall 60-inch Floor Lamp is designed to provide versatile lighting for various indoor environments. It features a remote control for convenient adjustment of brightness and color temperature, along with a durable metal construction and a beige fabric shade.

Key Features:

- Stepless Dimmable Brightness (30% to 100%)
- Adjustable Color Temperature (3000K Warm White, 5000K Natural White, 6000K Cold White)
- Remote Control with 1-Hour Timer Function
- Magnetic Remote Control for easy storage
- Adjustable Lampshade Angle
- Integrated Foot Switch for basic on/off control
- Modern and classic design suitable for various decors

PACKAGE CONTENTS

- Floor Lamp Components (Pole sections, base, lampshade frame)
- Fabric Lampshade
- 9W E26 LED Bulb
- Remote Control
- Instruction Manual

SETUP INSTRUCTIONS

1. Assembly

Assemble the lamp by screwing the pole sections together, starting from the base. Ensure all connections are secure. Attach the

lampshade frame to the top section. The fabric lampshade typically attaches to the frame using Velcro or clips.



Image: Overview of lamp components and dimensions.

2. Bulb Installation

Carefully screw the provided 9W E26 LED bulb into the lamp socket. Ensure it is tightened sufficiently but do not overtighten.



Image: Close-up of the bulb and lampshade.

3. Power Connection

Plug the lamp's power cord into a standard electrical outlet. Ensure the foot switch on the cord is in the 'ON' position for the remote control to function.

Your browser does not support the video tag.

Video: Demonstrates plugging in the lamp and using the foot switch and remote control.

OPERATING INSTRUCTIONS

1. Remote Control Functions

The included remote control allows for comprehensive adjustment of the lamp's lighting. Ensure the foot switch is 'ON' for remote functionality.

- **Power Button:** Turns the lamp ON or OFF.

- **Brightness Adjustment:** Use the '+' and '-' buttons to increase or decrease brightness from 30% to 100%.
- **Color Temperature (K) Button:** Cycles through 3000K (Warm White), 5000K (Natural White), and 6000K (Cold White).
- **1-Hour Timer:** Activates a 1-hour countdown before the lamp automatically turns off.
- **Preset Modes:** Dedicated buttons for Night Light, Baby Feeding, Working, and Reading modes, each with optimized brightness and color temperature settings.

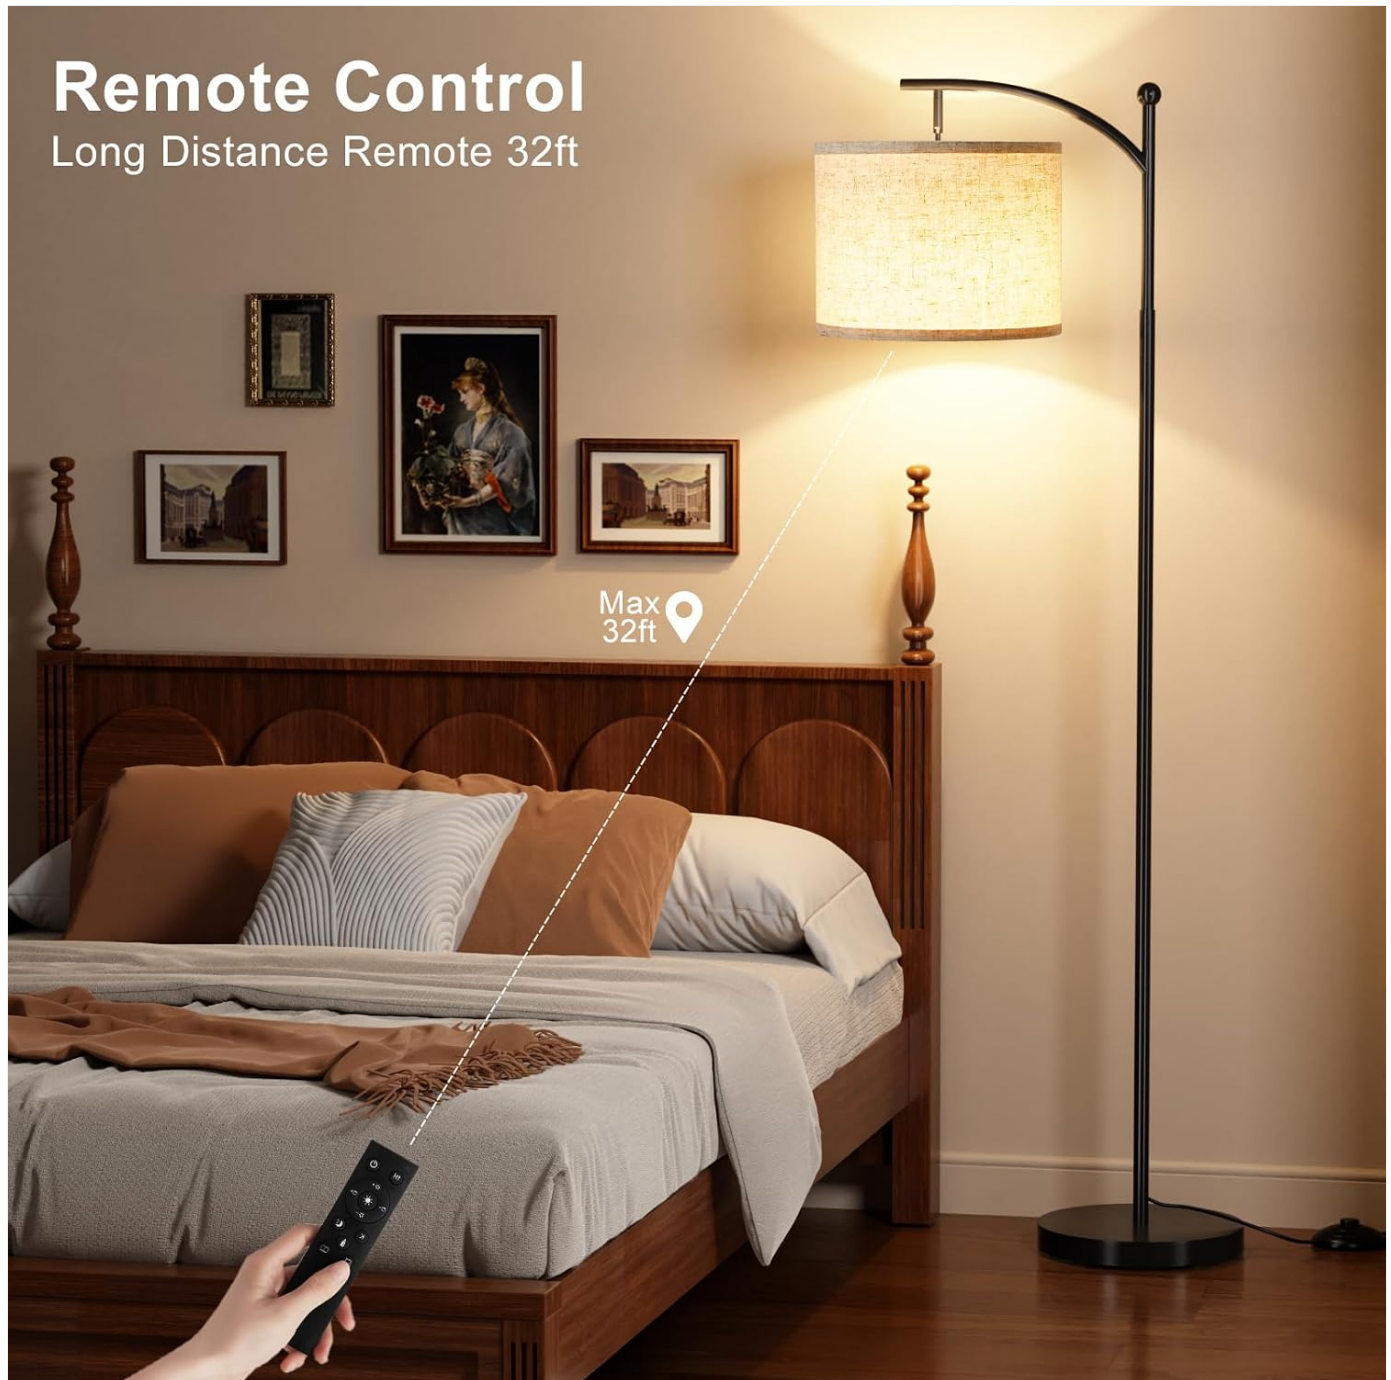


Image: Remote control layout and functions.

Your browser does not support the video tag.

Video: Demonstrates the various functions of the remote control, including brightness, color temperature, and preset modes.

2. Foot Switch Operation

The circular foot switch located on the power cord provides a simple on/off function. Press once to turn the lamp on, press again to turn it off. This switch must be in the 'ON' position for the remote control to operate the lamp.

3. Adjustable Lampshade

The lampshade can be rotated to direct light as needed. Gently adjust the lampshade to your desired angle for reading, working, or ambient lighting.

Your browser does not support the video tag.

Video: Shows the adjustable nature of the lampshade, allowing users to direct light.

MAINTENANCE

1. Cleaning

- **Lamp Pole and Base:** Wipe with a soft, dry cloth. Avoid abrasive cleaners.
- **Lampshade:** Gently dust with a soft cloth or a lint roller. For minor stains, lightly dab with a damp cloth and mild soap, then dry immediately.

2. Bulb Replacement

To replace the bulb, ensure the lamp is unplugged from the power outlet. Unscrew the old E26 bulb and screw in a new E26 base LED bulb (maximum 9W recommended). Always use LED bulbs for energy efficiency and compatibility with the dimming features.

TROUBLESHOOTING

- **Lamp does not turn on:**
 - Check if the power cord is securely plugged into the outlet.
 - Ensure the foot switch on the power cord is in the 'ON' position.
 - Verify that the bulb is correctly screwed into the socket and is not burnt out.
- **Remote control is not working:**
 - Check the battery in the remote control and replace if necessary.
 - Ensure the foot switch on the lamp's cord is 'ON'.
 - If the remote stops pairing after extended use, try replacing the bulb with the original type provided, as some remotes are paired with specific bulbs.
- **Light flickers or dims unexpectedly:**
 - Ensure the bulb is fully tightened in the socket.
 - Check for loose connections in the lamp's pole sections.
 - If using a different bulb, ensure it is dimmable and compatible with the lamp's system.

SPECIFICATIONS

Feature	Detail
Model Number	RPT-QZB30301
Dimensions	10.04"D x 8.66"W x 60.63"H
Item Weight	6.5 Pounds
Material	Metal
Shade Material	Metal (with fabric overlay)

Shade Color	Beige
Finish Type	Brushed
Light Source Type	LED
Bulb Base	E26
Wattage	9 watts
Brightness	900 Lumen
Color Temperature	3000K - 6000K
Control Method	Remote, Foot Switch
Power Source	Corded Electric
Indoor/Outdoor Usage	Indoor

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Ambimall customer service directly. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

