

[Manuals.plus](#) /

› [ICE-WATCH](#) /

› ICE-WATCH ICE Digit Retro Sunset Digital Watch User Manual

ICE-WATCH 022719

ICE-WATCH ICE Digit Retro Sunset Digital Watch User Manual

Model: 022719

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ICE-WATCH ICE Digit Retro Sunset digital wristwatch. Please read this manual carefully to ensure proper use and to maximize the lifespan of your watch.

SETUP AND INITIAL CONFIGURATION

Your ICE Digit Retro Sunset watch comes with a pre-installed battery. Before first use, you may need to remove a plastic tab from the crown or button area if present, which prevents battery drain during shipping. The watch features four primary buttons for navigation and setting:

- **RESET:** Used for resetting values or navigating backward in menus.
- **ST/STP (Start/Stop):** Used for starting/stopping functions like the chronograph or confirming settings.
- **MODE:** Used to cycle through different watch modes (Time, Alarm, Chronograph, Dual Time).
- **LIGHT:** Activates the backlight for visibility in low-light conditions.

Setting Time and Date

1. From the normal time display, press the **MODE** button repeatedly until the time setting mode is displayed (often indicated by flashing digits).
2. Use the **RESET** button to select the digit you wish to adjust (e.g., hours, minutes, year, month, day).
3. Use the **ST/STP** button to increase the selected value. Hold **ST/STP** to rapidly advance.
4. Once all settings are correct, press the **MODE** button to exit the setting mode and return to the normal time display.

Setting the Alarm

1. From the normal time display, press the **MODE** button until the alarm mode is displayed (usually indicated by "AL" or an alarm icon).

2. Press the **RESET** button to select the hour or minute digits.
3. Use the **ST/STP** button to adjust the hour or minute.
4. Press **MODE** to confirm and activate the alarm. An alarm icon should appear on the display.
5. To deactivate the alarm, navigate back to the alarm mode and press **ST/STP** to toggle it off.



Figure 1: Front view of the ICE Digit Retro Sunset watch. This image shows the digital display with time, day, and date, along with the 'RESET', 'ST/STP', 'MODE', and 'LIGHT' indicators on the watch face. The vibrant fuchsia strap and gold-tone case are visible.

OPERATING YOUR WATCH

Mode Functions

- **Time Mode:** Displays current time (hours, minutes, seconds), day of the week, and date.
- **Alarm Mode:** Allows setting and activating a daily alarm.
- **Chronograph (Stopwatch) Mode:**
 - a. Press **MODE** to enter Chronograph mode.
 - b. Press **ST/STP** to start the stopwatch.
 - c. Press **ST/STP** again to stop it.
 - d. Press **RESET** to clear the stopwatch to zero.
- **Dual Time Mode:** Allows setting and displaying a second time zone.
 - a. Press **MODE** to enter Dual Time mode.
 - b. Use **RESET** and **ST/STP** to set the second time zone, similar to setting the main time.

Using the Backlight

Press the **LIGHT** button to illuminate the display for a few seconds. This feature is useful in dark environments.

Water Resistance

This watch is water resistant up to 3 ATM (30 meters). This means it is splash-proof and suitable for everyday use like hand washing or light rain. *It is not suitable for showering, swimming, diving, or any water sports involving immersion.* Avoid pressing buttons while the watch is wet to prevent water ingress.



Figure 2: Side view of the ICE Digit Retro Sunset watch. This image highlights the two control buttons located on the side of the watch case, which are used for adjusting settings and navigating modes.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch case and strap regularly with a soft, dry cloth. For silicone straps, a damp cloth with mild soap can be used, then rinse and dry thoroughly.
- **Avoid Chemicals:** Do not expose the watch to solvents, detergents, perfumes, or cosmetic sprays, as these can damage the case, strap, or internal components.
- **Temperature Extremes:** Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes, which can affect accuracy and battery life.
- **Battery Replacement:** The watch uses 1 LR44 battery. When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.
- **Storage:** When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or depleted battery.	Replace the battery (recommended by a professional).
Time is incorrect.	Time not set correctly or accidental button press.	Refer to "Setting Time and Date" section to reset the time.
Buttons are unresponsive.	Watch may be in a locked mode or internal issue.	Try pressing all buttons to see if any respond. If not, a battery replacement or professional inspection may be needed.
Water appears inside the watch.	Water resistance compromised (e.g., buttons pressed underwater, seal damage).	Immediately take the watch to a professional watch repair service to prevent further damage. Do not attempt to dry it yourself.

SPECIFICATIONS

- **Model Number:** 022719
- **Display Type:** Digital
- **Movement:** Quartz
- **Case Diameter:** 32 mm
- **Case Material:** Stainless Steel (caseback), Plastic (main case)
- **Strap Material:** Silicone
- **Water Resistance:** 3 ATM (30 Meters) - Splash-proof only.
- **Additional Features:** Alarm, Chronograph, Dual Time, Lighting
- **Battery:** 1 x LR44 (included)
- **Item Weight:** 26 Grams
- **Product Dimensions:** 8 x 11 x 8 cm (packaging)



Figure 3: Back view of the ICE Digit Retro Sunset watch. This image displays the stainless steel caseback with engraved details including the model reference (022719), brand logo, and water resistance rating (30M).

WARRANTY AND SUPPORT

Your ICE-WATCH product is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, service, or warranty claims, please contact your authorized ICE-WATCH retailer or visit the official ICE-WATCH website for contact information. Keep your purchase receipt as proof of purchase for warranty purposes.

