

[manuals.plus](#) /› [BLAUPUNKT](#) /› [Blaupunkt A25T Cordless Stick Vacuum Cleaner User Manual](#)

BLAUPUNKT A25T

Blaupunkt A25T Cordless Stick Vacuum Cleaner User Manual

Model: A25T

INTRODUCTION

Thank you for choosing the Blaupunkt A25T Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and keep it for future reference.

PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all components are present:

- BLHS04 Motor Unit
- 2200mAh Battery
- Charging Adapter
- Flexible Extension Hose
- LED Illuminated Turbo Brush Head
- Pet Care Brush Head
- Bendable Tube
- Crevice Tool
- Small Brush Head
- Wall Mount Set
- User Manual



Image: All accessories and main unit included in the Blaupunkt A25T package.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury:

- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow it to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may

reduce airflow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bin and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store the appliance indoors in a cool, dry place.
- Recharge only with the charger specified by the manufacturer.
- Do not modify the battery or appliance.

SETUP AND ASSEMBLY

Follow these steps to assemble your Blaupunkt A25T vacuum cleaner:

1. **Attach the Battery:** Slide the 2200mAh battery into the motor unit until it clicks securely into place.
2. **Connect the Extension Tube:** Insert one end of the extension tube into the motor unit until it locks.
3. **Attach the Brush Head:** Connect your desired brush head (e.g., LED Illuminated Turbo Brush Head) to the other end of the extension tube. Ensure it clicks firmly.
4. **Initial Charging:** Before first use, fully charge the battery. Connect the charging adapter to the charging port on the battery or the wall mount, then plug it into a power outlet. The charging indicator will show the charging status. Charging time is approximately 4.5-5.5 hours.
5. **Wall Mount Installation (Optional):** Use the provided wall mount set to store your vacuum cleaner conveniently. Choose a suitable location and secure the mount to the wall using screws.



Image: Fully assembled Blaupunkt A25T vacuum cleaner.

OPERATING INSTRUCTIONS

Operating your vacuum cleaner is straightforward:

1. **Power On/Off:** Press the power button on the motor unit to turn the vacuum cleaner on. Press it again to turn it off.
2. **Suction Modes:** Your vacuum cleaner may have different suction power settings. Use the mode button (if available) to switch between standard and max suction modes as needed.
3. **Using Attachments:**
 - **LED Illuminated Turbo Brush Head:** Ideal for floors and carpets. The integrated LED lights illuminate dust and debris, ensuring thorough cleaning.
 - **Pet Care Brush Head:** Designed for removing pet hair from upholstery and carpets.
 - **Crevice Tool:** Perfect for narrow gaps, corners, and hard-to-reach areas.
 - **Small Brush Head:** Suitable for delicate surfaces, curtains, and car interiors.
 - **Flexible Extension Hose & Bendable Tube:** Use these with other attachments to reach high areas, under furniture, or around obstacles with ease.



Image: Vacuuming under furniture with the flexible design.

Tara, Süpür, Tüyülerden Kurtul!



Image: Using the pet care brush head to remove pet hair.



**LED aydınlatma ile
derinlemesine temizlik**

Image: LED illumination for deep cleaning and 180-degree maneuverability.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Bin

Empty the dust bin regularly, especially when it reaches the MAX fill line, to maintain strong suction power.

1. Detach the dust bin from the motor unit.
2. Press the release button to open the bottom cover of the dust bin and empty its contents into a trash can.
3. Close the dust bin cover securely.

Cleaning Filters

Your vacuum cleaner features a 3-layer filtration system, including a HEPA filter and a Cyclone filter. Clean these filters regularly for best performance.

1. Twist and pull to remove the dust bin and filter assembly from the motor unit.
2. Separate the HEPA filter and Cyclone filter from the dust bin.
3. Tap the filters gently to remove loose dust. For a deeper clean, rinse them under cold running water.
4. Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use a dryer or direct heat.
5. Reassemble the filters and dust bin, then reattach to the motor unit.

3 Katmanlı Filtreleme Sistemi



Image: Exploded view of the 3-layer filtration system.



Image: Detailed view of the filter components.

Cleaning Brush Heads

Periodically check brush heads for tangled hair or debris. Use scissors to cut away any tangled hair and remove it. Ensure the brush roll spins freely.

Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Store the vacuum cleaner with a partially charged battery if not in use for extended periods.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is not charged or not properly installed.	Ensure the battery is fully charged and securely clicked into the motor unit.
Low suction power.	Dust bin is full; filters are clogged; brush head is blocked.	Empty the dust bin. Clean or replace the filters. Remove any blockages from the brush head or extension tube.
Brush head not spinning.	Brush roll is tangled with hair or debris; brush head is not properly attached.	Remove any obstructions from the brush roll. Ensure the brush head is securely attached to the extension tube.
Short operating time.	Battery not fully charged; battery degradation.	Ensure the battery is fully charged before use. If the issue persists after prolonged use, the battery may need replacement.

SPECIFICATIONS

Detailed technical specifications for the Blaupunkt A25T Cordless Stick Vacuum Cleaner:

Feature	Detail
Brand	BLAUPUNKT
Model Name	A25T
Motor Power	300 Watt
Battery Capacity	2200mAh
Battery Type	Lithium ION Battery
Charging Time	4.5-5.5 hours
Operating Time	11-35 minutes
Motor Noise Level	77.8-81.9dB
Max Airflow	14.1-19.2 L/S
Dust Bin Capacity	600ML
HEPA Filter	Yes
Product Weight	3 Kg
Product Dimensions (L*W*H)	100*193*405 mm
Special Features	Cordless, Vertical, LED Illumination, Flexible Extension
Recommended Uses	Walls and floor coverings, seating groups

WARRANTY INFORMATION

The following warranty information is valid only for Turkey:

- The warranty period for this product is 2 years.
- This product complies with WEEE (Waste Electrical and Electronic Equipment) regulations.

For warranty claims or service, please retain your proof of purchase and contact the authorized service center.

CUSTOMER SUPPORT

If you have any questions, require technical assistance, or need to report a problem that is not covered in the troubleshooting section, please contact Blaupunkt customer support or your local distributor. Please have your model number (A25T) and purchase information ready when contacting support.

© 2024 Blaupunkt. All rights reserved.