

[Manuals.plus](#) /

› [BELLA](#) /

› BELLA Air Fry Toaster Oven, Model 35154 User Manual

## BELLA 35154

# BELLA Air Fry Toaster Oven User Manual

Model: 35154

## INTRODUCTION

---

This manual provides essential instructions for the safe operation, maintenance, and troubleshooting of your BELLA Air Fry Toaster Oven, Model 35154. Please read all instructions thoroughly before first use and retain this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.


- Do not place any of the following materials in the oven: paper, cardboard, plastic, or similar materials.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.

## PRODUCT COMPONENTS

---

The BELLA Air Fry Toaster Oven includes the following components:

- Main Oven Unit with Tempered Glass Door and Cool-Touch Handle
- Air Fry Mesh Basket
- Wire Rack
- Bake Pan
- Removable Crumb Tray

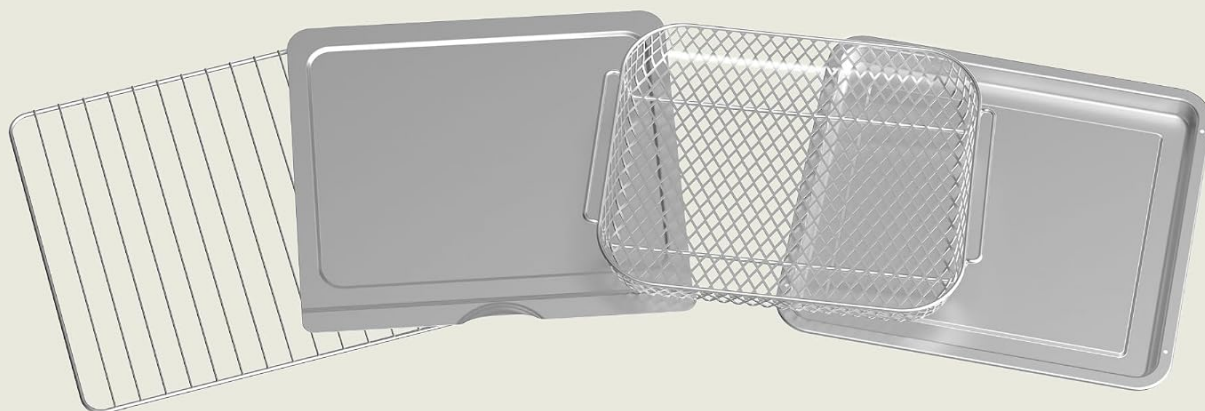

**Easy-to-clean accessories**  
**Dishwasher-safe tray, wire rack and**  
**air fry mesh basket**

Image: Included accessories: wire rack, bake pan, and air fry mesh basket.

## SETUP

---

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the oven.
2. **Cleaning:** Before first use, wash the air fry mesh basket, wire rack, bake pan, and removable crumb tray in warm, soapy water. Rinse and dry thoroughly. Wipe the interior and exterior of the oven with a damp cloth.
3. **Placement:** Place the oven on a stable, level, heat-resistant surface. Ensure there is adequate clearance (at least 4 inches) on all sides and above the oven for proper ventilation. Do not place near flammable materials.
4. **First Use Burn-Off:** It is normal for a small amount of smoke and odor to be emitted during the first use as manufacturing oils burn off. Operate the oven empty on the 'Bake' setting at 450°F for approximately 15 minutes in a well-ventilated area.

## OPERATING INSTRUCTIONS

---

The BELLA Air Fry Toaster Oven features three control knobs for easy operation:



Image: Close-up of the BELLA Air Fry Toaster Oven's control knobs for function, temperature, and timer.

## Control Knobs

- **Function Knob (Left):** Selects the desired cooking mode: Air Fry, Toast, Roast, Bake, Broil, Keep Warm, or Convection Bake.
- **Temperature Knob (Middle):** Adjusts the cooking temperature from Warm to 450°F (232°C).
- **Timer Knob (Right):** Sets the cooking time up to 60 minutes. Features an audible timer and automatic shut-off.

## Cooking Functions

This appliance offers 7 versatile cooking functions:

- **Air Fry:** Ideal for achieving crispy results with little to no oil. Use the air fry mesh basket.
- **Toast:** For toasting bread, bagels, and waffles.
- **Roast:** Suitable for cooking meats and vegetables.
- **Bake:** For baking cakes, cookies, and casseroles.
- **Broil:** For quick cooking and browning the top of dishes.
- **Keep Warm:** Maintains food at a serving temperature.
- **Convection Bake:** Uses a fan to circulate hot air for faster and more even baking.



**One appliance, so many options**  
**Air fry, toast, roast, bake, broil, keep warm,**  
**and convection bake**

Image: Diagram illustrating various food items that can be prepared using the oven's multiple functions, including pizza, chicken, roast beef, salmon, and toast.

### General Operation Steps

1. Place food on the appropriate accessory (wire rack, bake pan, or air fry basket).
2. Insert the accessory into the desired rack position inside the oven.
3. Close the tempered glass door.
4. Turn the Function Knob to select your desired cooking mode.
5. Turn the Temperature Knob to set the desired temperature.
6. Turn the Timer Knob to set the cooking time. The oven will begin heating.
7. The power indicator light will illuminate when the oven is operating.
8. When the timer reaches zero, an audible alert will sound, and the oven will automatically shut off.
9. Carefully remove cooked food using oven mitts.



**Safe & convenient**  
**Cord wraps for compact storage, 60-minute**  
**auto shutoff & cool-down handles**

Image: A pizza being removed from the oven, demonstrating the cool-touch handle and tempered glass door.

Your browser does not support the video tag.

Video: Official product video demonstrating the features and operation of the BELLA Air Fry Toaster Oven.

## CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. **Before Cleaning:** Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. **Removable Parts:** The wire rack, bake pan, air fry mesh basket, and removable crumb tray are dishwasher-safe for easy cleaning. Alternatively, wash them in warm, soapy water, rinse, and dry thoroughly.
3. **Crumb Tray:** The removable crumb tray should be emptied and cleaned regularly to prevent grease buildup and potential fire hazards.
4. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner. Do not use harsh abrasives or metal scouring pads.
5. **Exterior:** Wipe the exterior of the oven with a damp cloth. Do not immerse the oven in water or any other liquid.



Image: The removable crumb tray being cleaned, demonstrating ease of maintenance.

## TROUBLESHOOTING

If you encounter issues with your BELLA Air Fry Toaster Oven, refer to the following common problems and solutions:

| Problem                                 | Possible Cause                                                   | Solution                                                                                                                                                                |
|-----------------------------------------|------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Oven does not turn on.                  | Not plugged in; power outage; timer not set.                     | Ensure the oven is securely plugged into a working outlet. Check circuit breaker. Turn the Timer Knob past the 0 mark to activate.                                      |
| Food is not cooking evenly.             | Overcrowding; incorrect rack position; temperature too high/low. | Avoid overcrowding the oven. Refer to recipes for recommended rack positions. Adjust temperature and cooking time as needed. Use Convection Bake for more even results. |
| Excessive smoke or odor during cooking. | Food residue; high-fat foods; first use burn-off.                | Clean the oven and crumb tray thoroughly. Use a drip tray for high-fat foods. Initial smoke/odor is normal during first use.                                            |

| Problem                          | Possible Cause         | Solution                                                                                                    |
|----------------------------------|------------------------|-------------------------------------------------------------------------------------------------------------|
| Timer does not advance or stops. | Timer mechanism issue. | Ensure the timer knob is turned fully to the desired time. If the issue persists, contact customer support. |

## SPECIFICATIONS

Key technical specifications for the BELLA Air Fry Toaster Oven, Model 35154:

| Feature                        | Specification                                             |
|--------------------------------|-----------------------------------------------------------|
| Model Number                   | 35154                                                     |
| Brand                          | BELLA                                                     |
| Power                          | 1700 Watts                                                |
| Capacity                       | 25 Quarts (fits 6 slices of bread or a 12-inch pizza)     |
| Temperature Range              | Warm to 450°F (232°C)                                     |
| Control Type                   | Knob Control                                              |
| Timer                          | 60-minute with auto shut-off and audible alert            |
| Product Dimensions (D x W x H) | 15.82" x 16.61" x 14.92"                                  |
| Item Weight                    | 19.18 pounds                                              |
| Included Components            | Air Fry Basket, Wire Rack, Bake Pan, Removable Crumb Tray |

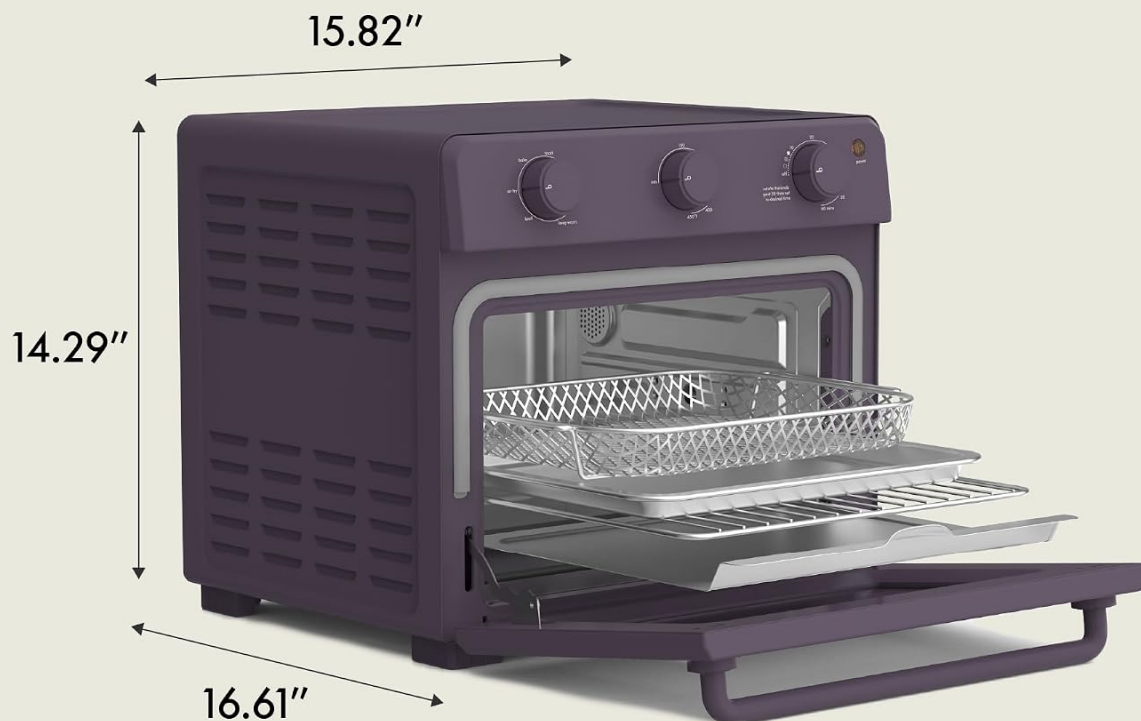


Image: Dimensions of the BELLA Air Fry Toaster Oven.

## WARRANTY AND SUPPORT

---

### Warranty Information

The BELLA Air Fry Toaster Oven, Model 35154, comes with a **2-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. It does not cover damage resulting from misuse, accident, commercial use, or unauthorized modification.

### Customer Support

For technical assistance, warranty claims, or general inquiries, please contact BELLA Customer Service. Refer to the official BELLA website or your product packaging for the most current contact information.