

BELLA 35153-016A

BELLA Air Fry Toaster Oven User Manual

Model: 35153-016A | Brand: BELLA

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials not specifically designed for oven use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Extreme caution should be exercised when removing tray or disposing of hot grease.

PRODUCT OVERVIEW



Front view of the BELLA Air Fry Toaster Oven, showcasing its sleek design and control knobs.

Components and Accessories

- Main Unit (Air Fry Toaster Oven)
- Wire Rack
- Bake Pan
- Air Fry Mesh Basket
- Removable Crumb Tray



Safe & convenient Cord wraps for compact storage, 60-minute auto shutoff & cool-down handles

The BELLA Air Fry Toaster Oven comes with essential accessories for versatile cooking.

Key Features

- **7-in-1 Cooking Functions:** Air Fry, Toast, Roast, Bake, Broil, Keep Warm, and Convection Bake.
- **Large Capacity:** Accommodates up to 6 slices of bread or a 12-inch pizza.
- **Powerful Heating:** 1700-watt system for fast and consistent cooking.
- **Adjustable Temperature:** Ranges from Warm to 450°F.
- **Intuitive Digital Control Panel:** Easy setting of time and temperature.
- **60-Minute Timer with Auto Shut-off:** Ensures precise cooking and safety.
- **Tempered Glass Door & Cool-Touch Handle:** For safe monitoring and handling.
- **Dishwasher-Safe Parts:** Wire rack, bake pan, air fry mesh basket, and removable crumb tray for easy cleanup.

SETUP

1. **Unpack:** Carefully remove the Air Fry Toaster Oven and all accessories from the packaging. Remove any packing materials, stickers, or labels.
2. **Clean Before First Use:** Wash the wire rack, bake pan, air fry mesh basket, and removable crumb tray in warm, soapy water. Wipe the interior and exterior of the oven with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is adequate clearance (at least 4 inches) on all sides and above the oven for proper ventilation. Do not place it directly against a wall or under cabinets.
4. **Insert Crumb Tray:** Slide the removable crumb tray into the bottom slot of the oven.
5. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet. The power indicator light will illuminate.

OPERATING INSTRUCTIONS

Control Panel Overview




The intuitive control knobs allow for precise selection of cooking function, temperature, and time.

- **Function Knob (Left):** Selects the desired cooking mode (Air Fry, Toast, Roast, Bake, Broil, Keep Warm, Convection Bake).
- **Temperature Knob (Middle):** Adjusts the cooking temperature from Warm to 450°F.
- **Timer Knob (Right):** Sets the cooking duration up to 60 minutes. Features an auto shut-off.

Using Cooking Functions

Before starting, ensure the crumb tray is in place and the appropriate accessories (wire rack, bake pan, or air fry mesh basket) are inserted for your chosen function.

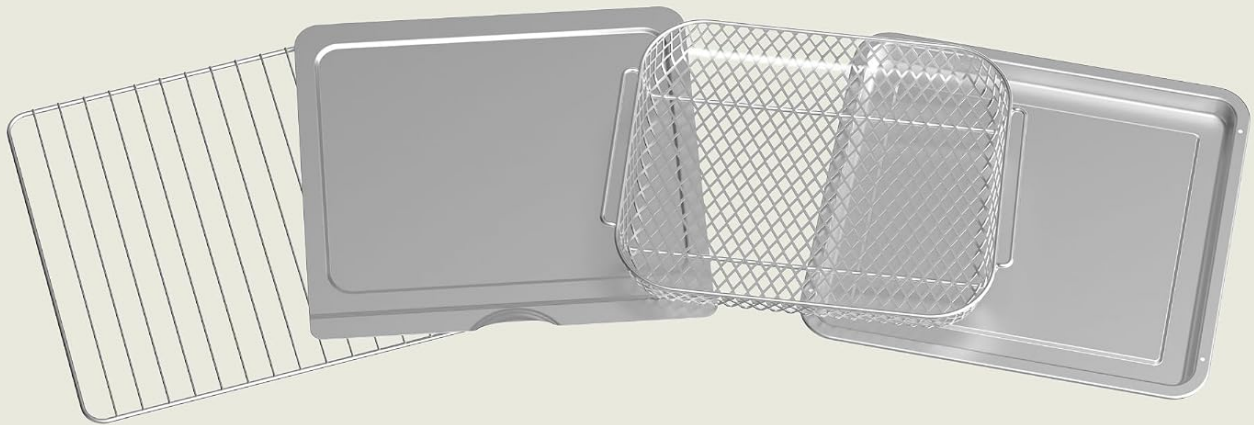

Easy-to-clean accessories

Dishwasher-safe tray, wire rack and air fry mesh basket

Explore a wide range of culinary possibilities with the 7 versatile cooking functions.

1. **Prepare Food:** Place food on the appropriate accessory (e.g., air fry mesh basket for air frying, bake pan for baking).
2. **Select Function:** Turn the Function Knob to your desired cooking mode (e.g., 'Air Fry').
3. **Set Temperature:** Turn the Temperature Knob to the recommended temperature for your recipe.
4. **Set Time:** Turn the Timer Knob past the 20-minute mark, then back to your desired cooking time (up to 60 minutes). The oven will begin heating.
5. **Monitor Cooking:** The tempered glass door allows you to monitor food progress. The power indicator light will remain on during operation.
6. **Completion:** The oven will automatically shut off and an audible timer will sound when the set time has elapsed. Carefully remove food using oven mitts.


Specific Function Tips:

- **Air Fry:** Use the air fry mesh basket for best results with crispy foods like fries, chicken wings, or vegetables.

- **Toast:** Place bread directly on the wire rack. Adjust the timer for desired toast shade.
- **Bake/Roast:** Use the bake pan for cakes, cookies, or roasting meats and vegetables.
- **Broil:** Position food closer to the top heating elements. Monitor closely to prevent burning.
- **Convection Bake:** Utilizes a fan for even heat distribution, ideal for baking multiple items or larger dishes.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your BELLA Air Fry Toaster Oven. Always unplug the appliance and allow it to cool completely before cleaning.

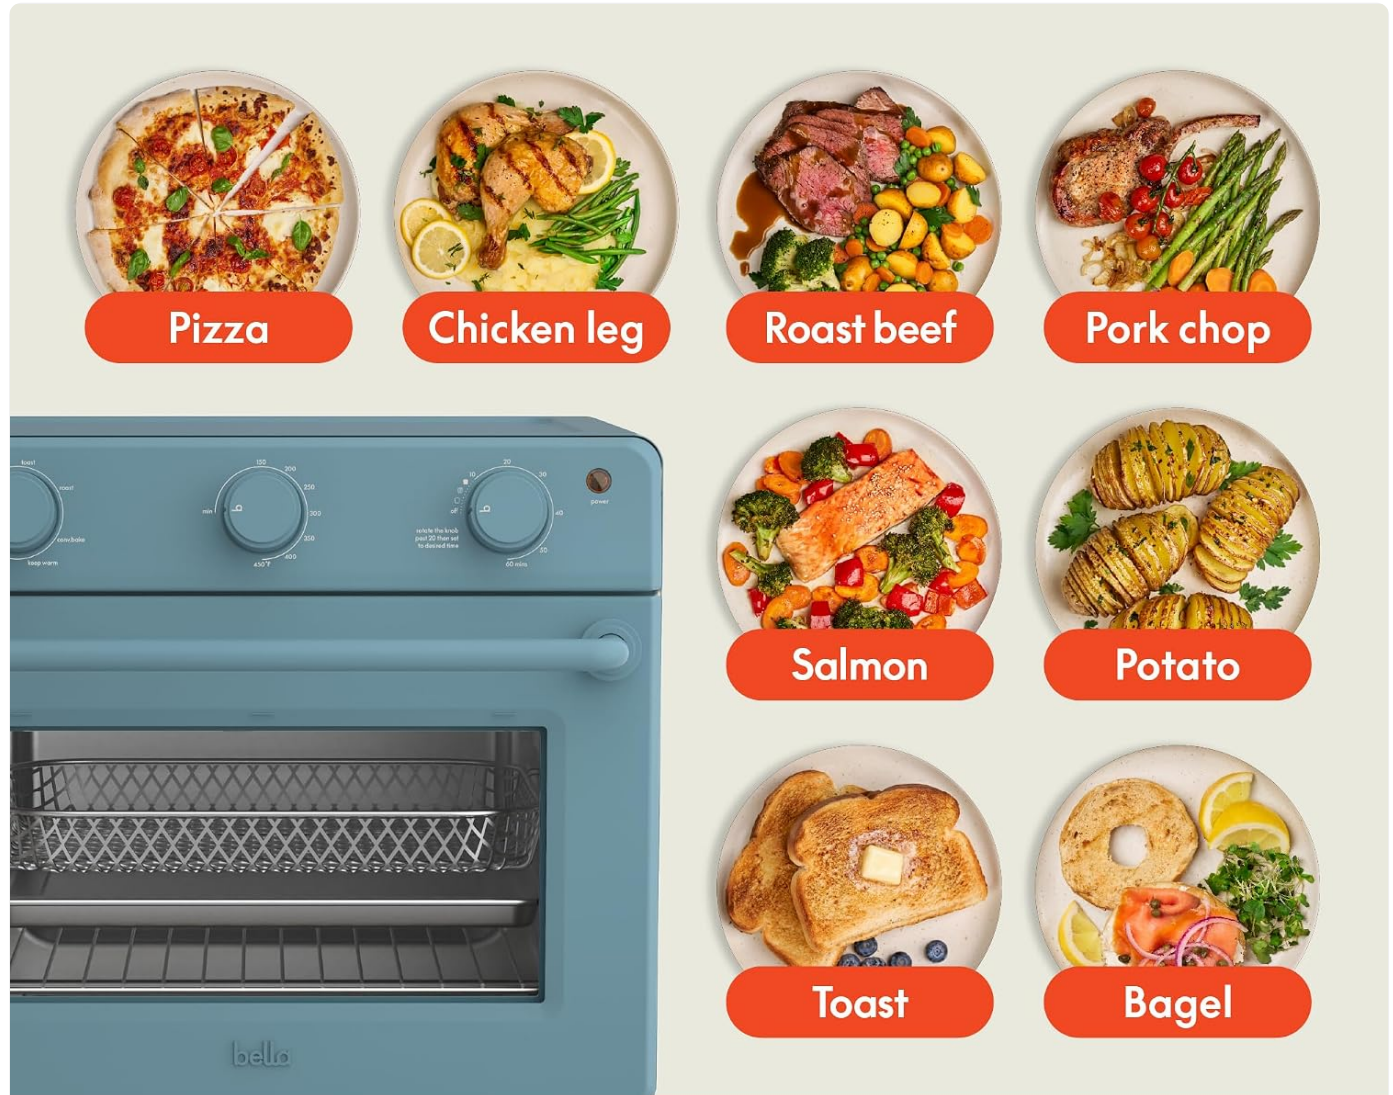

One appliance, so many options
Air fry, toast, roast, bake, broil, keep warm,
and convection bake

The removable crumb tray simplifies cleanup, catching crumbs and drips.

- **Interior Cleaning:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner. Do not use steel wool or abrasive cleaners.

- **Exterior Cleaning:** Wipe the exterior with a damp cloth. Dry thoroughly.
- **Crumb Tray:** Slide out the removable crumb tray and discard crumbs. Wash the tray in warm, soapy water or place it in the dishwasher.
- **Accessories:** The wire rack, bake pan, and air fry mesh basket are dishwasher-safe for convenient cleaning. For hand washing, use warm, soapy water and a non-abrasive sponge.
- **Storage:** Ensure the oven is clean and dry before storing. Utilize the cord wraps for compact storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure plug is securely in outlet; check circuit breaker; turn timer knob past 20 minutes then back to desired time.
Food is not cooking evenly.	Incorrect temperature/time setting; overcrowding; improper rack position.	Adjust temperature and time according to recipe; avoid overcrowding the basket/pan; refer to recipe for optimal rack position. Consider using Convection Bake for more even results.
Excessive smoke during cooking.	Food residue/grease on heating elements or crumb tray; high-fat food.	Clean the oven interior and crumb tray thoroughly before use. For high-fat foods, use a bake pan under the air fry basket to catch drips.
Timer does not advance or sounds continuously.	Timer mechanism issue.	Ensure the timer knob was rotated past 20 minutes before setting. If issue persists, contact customer support.

SPECIFICATIONS

Attribute	Detail
Brand	BELLA
Model Name	Bella 6 Slice Toaster Oven With Air fryer
Item Model Number	35153-016A
Color	Surf
Power Source	Electric (1700 Watt)
Product Dimensions	16.61"D x 15.82"W x 14.29"H
Item Weight	18.95 pounds
Capacity	25QT (fits 6 slices of bread or 12" pizza)

Attribute	Detail
Control Type	Knob Control
Material	Stainless Steel (Door)
First Available Date	October 1, 2024
UPC	829486351532

WARRANTY AND SUPPORT

The BELLA Air Fry Toaster Oven comes with a **2-year warranty**, ensuring peace of mind and product reliability. For warranty claims, technical assistance, or general inquiries, please contact BELLA Customer Support.

You can find more information and support resources by visiting the official BELLA store:

Visit the BELLA Store

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

