

BELLA 35155

BELLA Air Fry Toaster Oven Instruction Manual

Model: 35155

Brand: BELLA

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord.
- The appliance features a 60-minute auto shut-off for safety.
- The tempered glass door and cool-touch handle are designed for safe operation.

2. PARTS AND FEATURES

Familiarize yourself with the components of your BELLA Air Fry Toaster Oven.

- **Function Knob:** Selects cooking mode (Air Fry, Toast, Roast, Convection Bake, Broil, Keep Warm).
- **Temperature Knob:** Adjusts cooking temperature from Warm to 450°F.
- **Timer Knob:** Sets cooking time up to 60 minutes with auto shut-off and audible signal.
- **Power Indicator Light:** Illuminates when the oven is operating.
- **Tempered Glass Door:** Allows viewing of food during cooking.
- **Cool-Touch Handle:** For safe opening and closing of the oven door.
- **Air Fry Basket:** Used for air frying foods.
- **Wire Rack:** For toasting, baking, and roasting.
- **Bake Pan:** For baking and roasting, often placed under the wire rack or air fry basket to catch drips.
- **Removable Crumb Tray:** Collects crumbs and drips for easy cleaning.



Figure 2.1: Front view of the BELLA Air Fry Toaster Oven, showcasing its Blossom color and control panel.



Pizza

Chicken leg

Roast beef

Pork chop

Salmon

Potato

Toast

Bagel

One appliance, so many options
Air fry, toast, roast, bake, broil, keep warm,
and convection bake

Figure 2.2: The essential accessories included with your oven: a wire rack, a bake pan, and an air fry mesh basket.

3. BEFORE FIRST USE

1. **Unpack:** Carefully remove the oven and all accessories from the packaging.
2. **Clean Accessories:** Wash the Air Fry Basket, Wire Rack, Bake Pan, and Removable Crumb Tray in warm, soapy water. Rinse thoroughly and dry completely. These parts are dishwasher-safe.
3. **Wipe Interior/Exterior:** Wipe the interior and exterior of the oven with a damp cloth. Dry thoroughly.
4. **Placement:** Place the oven on a flat, stable, heat-resistant surface, ensuring at least 4 inches of clearance on all sides for proper ventilation.
5. **Initial Burn-Off:** To eliminate any manufacturing odors, operate the oven empty for approximately 15 minutes at 400°F (205°C) on the 'Bake' setting. Some smoke or odor is normal during this initial use. Ensure the area is well-ventilated.

4. SETUP

1. Ensure the oven is unplugged from the power outlet.
2. Insert the Removable Crumb Tray into the bottom slot of the oven.
3. Depending on your cooking method, place the Wire Rack or Air Fry Basket into the desired rack position. The oven typically has multiple rack positions for versatility.
4. If using the Air Fry Basket, place the Bake Pan underneath it to catch any drips.
5. Plug the power cord into a standard 120V AC electrical outlet.

5. OPERATING INSTRUCTIONS

Your BELLA Air Fry Toaster Oven offers 7 versatile cooking functions. Follow these steps for general operation and specific cooking modes.

General Operation

1. Place food on the appropriate accessory (Wire Rack, Air Fry Basket, or Bake Pan).
2. Insert the accessory into the desired rack position inside the oven.
3. Close the oven door.
4. Turn the **Function Knob** to select your desired cooking mode.
5. Turn the **Temperature Knob** to set the desired temperature.
6. Turn the **Timer Knob** to set the cooking time. The Power Indicator Light will illuminate.
7. When the timer reaches zero, an audible signal will sound, and the oven will automatically shut off.
8. Carefully remove cooked food using oven mitts.



Easy-to-use control knobs for precise cooking

Figure 5.1: The intuitive control knobs for function, temperature, and timer settings.

Specific Cooking Functions

- **Air Fry:** Ideal for crispy foods like fries, chicken wings, and vegetables. Use the Air Fry Basket, placed on the Wire Rack, with the Bake Pan underneath to catch oil.
- **Toast:** Perfect for bread, bagels, and frozen waffles. Place items directly on the Wire Rack. Adjust the timer for desired browning.
- **Roast:** For cooking meats and vegetables. Use the Bake Pan or Wire Rack.
- **Bake:** Suitable for cakes, cookies, and casseroles. Use the Bake Pan or an oven-safe dish on the Wire Rack.
- **Broil:** For quick browning or cooking thin cuts of meat. Place food on the Wire Rack, typically in the top position. Monitor closely to prevent burning.
- **Keep Warm:** Maintains food at a serving temperature without further cooking. Use a low temperature setting.
- **Convection Bake:** Uses a fan to circulate hot air, resulting in faster and more even cooking, similar to a traditional convection oven.



Figure 5.2: Visual representation of the seven versatile cooking functions and their applications.

6. COOKING GUIDE

This section provides general guidance for cooking with your BELLA Air Fry Toaster Oven. Cooking times and temperatures may vary based on food type, quantity, and desired doneness. Always use a food thermometer to ensure food is cooked to safe internal temperatures.

- **Capacity:** The oven can accommodate up to 6 slices of bread or a 12-inch pizza.
- **Preheating:** For best results, preheat the oven for 5-10 minutes before adding food, especially for baking and roasting.
- **Air Frying:** For optimal crispiness, avoid overcrowding the Air Fry Basket. Shake or flip food halfway through cooking. A small amount of oil can enhance crispiness.
- **Toasting:** Monitor toast closely to achieve desired browning. The timer knob can be turned to 'OFF' at any time to stop the toasting cycle.
- **Temperature Adjustment:** The 1700-watt heating system provides quick and consistent cooking. Temperatures range from Warm to 450°F.




Safe & convenient
Cord wraps for compact storage, 60-minute
auto shutoff & cool-down handles

Figure 6.1: The oven's generous capacity, capable of cooking a 12-inch pizza.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance. Always unplug the oven and allow it to cool completely before cleaning.

1. **Interior Cleaning:** Wipe the interior walls with a damp cloth and mild, non-abrasive detergent. For stubborn stains, a paste of baking soda and water can be used. Avoid abrasive cleaners or metal scouring pads.
2. **Exterior Cleaning:** Wipe the exterior with a damp cloth and dry thoroughly. Do not immerse the oven in water.
3. **Removable Crumb Tray:** Slide out the crumb tray from the bottom of the oven. Discard crumbs and wash the tray in warm, soapy water or place it in the dishwasher. Rinse and dry thoroughly before reinserting.
4. **Accessories:** The Air Fry Basket, Wire Rack, and Bake Pan are dishwasher-safe. For hand washing, use warm, soapy water and a non-abrasive sponge.
5. **Storage:** Ensure the oven is clean and dry before storing. Wrap the power cord for compact storage.

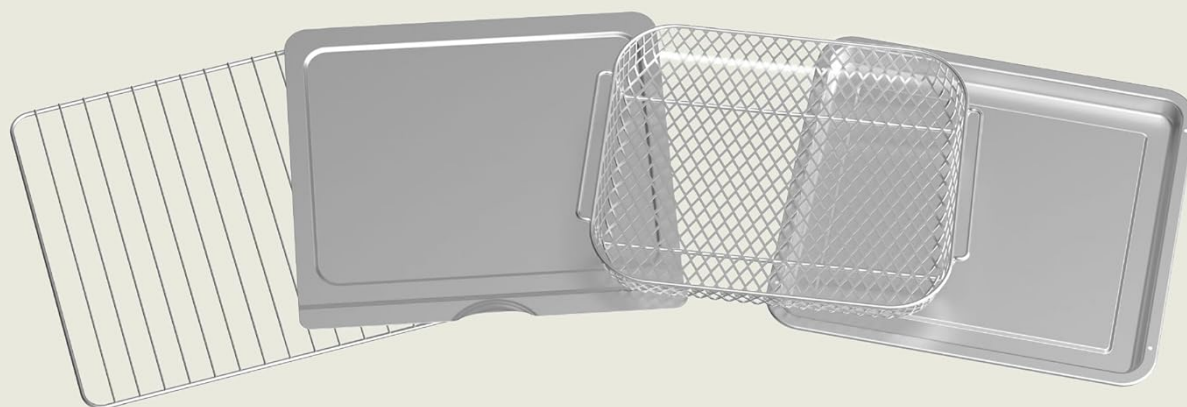

Easy-to-clean accessories

Dishwasher-safe tray, wire rack and air fry mesh basket

Figure 7.1: The removable crumb tray simplifies cleaning and maintenance.

8. TROUBLESHOOTING

If you encounter issues with your BELLA Air Fry Toaster Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the oven is securely plugged into a working outlet. Set the timer knob to the desired cooking duration.
Food not cooking evenly.	Overcrowding; incorrect temperature/time; food not flipped/shaken.	Avoid overcrowding the basket/rack. Adjust temperature and time as needed. Flip or shake food halfway through cooking.

Problem	Possible Cause	Solution
Excessive smoke during cooking.	Food with high fat content; food residue in oven.	Use the bake pan to catch drips. Clean the oven interior and crumb tray regularly.
Timer not working.	Timer knob not turned past 10 minutes initially.	For accurate timing, turn the timer knob past the 10-minute mark, then back to the desired time.

9. SPECIFICATIONS

- **Brand:** BELLA
- **Model Number:** 35155
- **Power:** 1700 Watts
- **Product Dimensions:** 16.61"D x 15.82"W x 14.29"H
- **Capacity:** Fits 6 slices of bread or a 12-inch pizza
- **Control Type:** Knob Control
- **Special Features:** Temperature Control, 60-Minute Auto Shutoff with Audible Timer
- **Included Components:** Air Fry Basket, Wire Rack, Bake Pan, Removable Crumb Tray

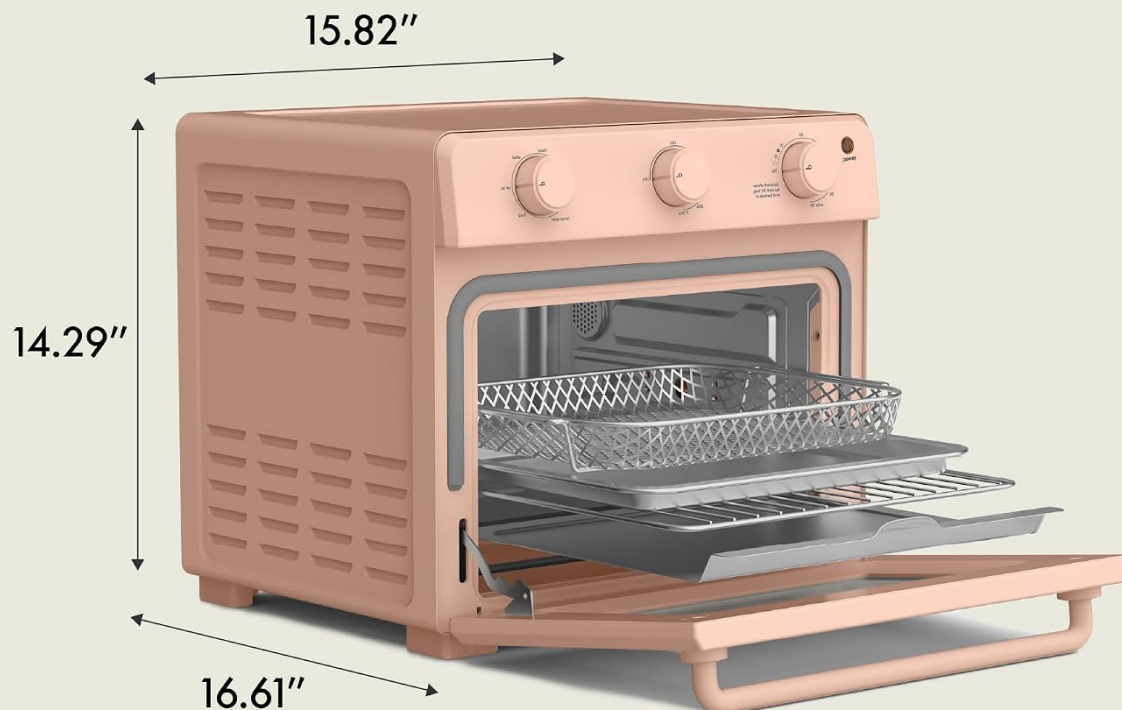


Figure 9.1: Dimensions of the BELLA Air Fry Toaster Oven.

10. WARRANTY AND SUPPORT

Your BELLA Air Fry Toaster Oven is backed by a **2-year warranty**, ensuring quality and performance. For warranty claims, technical assistance, or any product-related inquiries, please contact BELLA customer support. Please retain your proof of purchase for warranty validation.

Customer Support: Refer to the contact information provided on the product packaging or the official BELLA website for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question