

[Manuals.plus](#) /

› [BELLA](#) /

› BELLA Flip-n-Store Waffle Maker Instruction Manual


BELLA 35143

BELLA Flip-n-Store Waffle Maker

Model: 35143

INTRODUCTION

The BELLA Flip-n-Store Waffle Maker is designed to bring delicious, diner-style Belgian waffles to your home with unparalleled convenience and space-saving efficiency. Its innovative flip design ensures perfectly cooked waffles every time, while the EverGood™ Ceramic Nonstick Coating makes cleanup effortless.

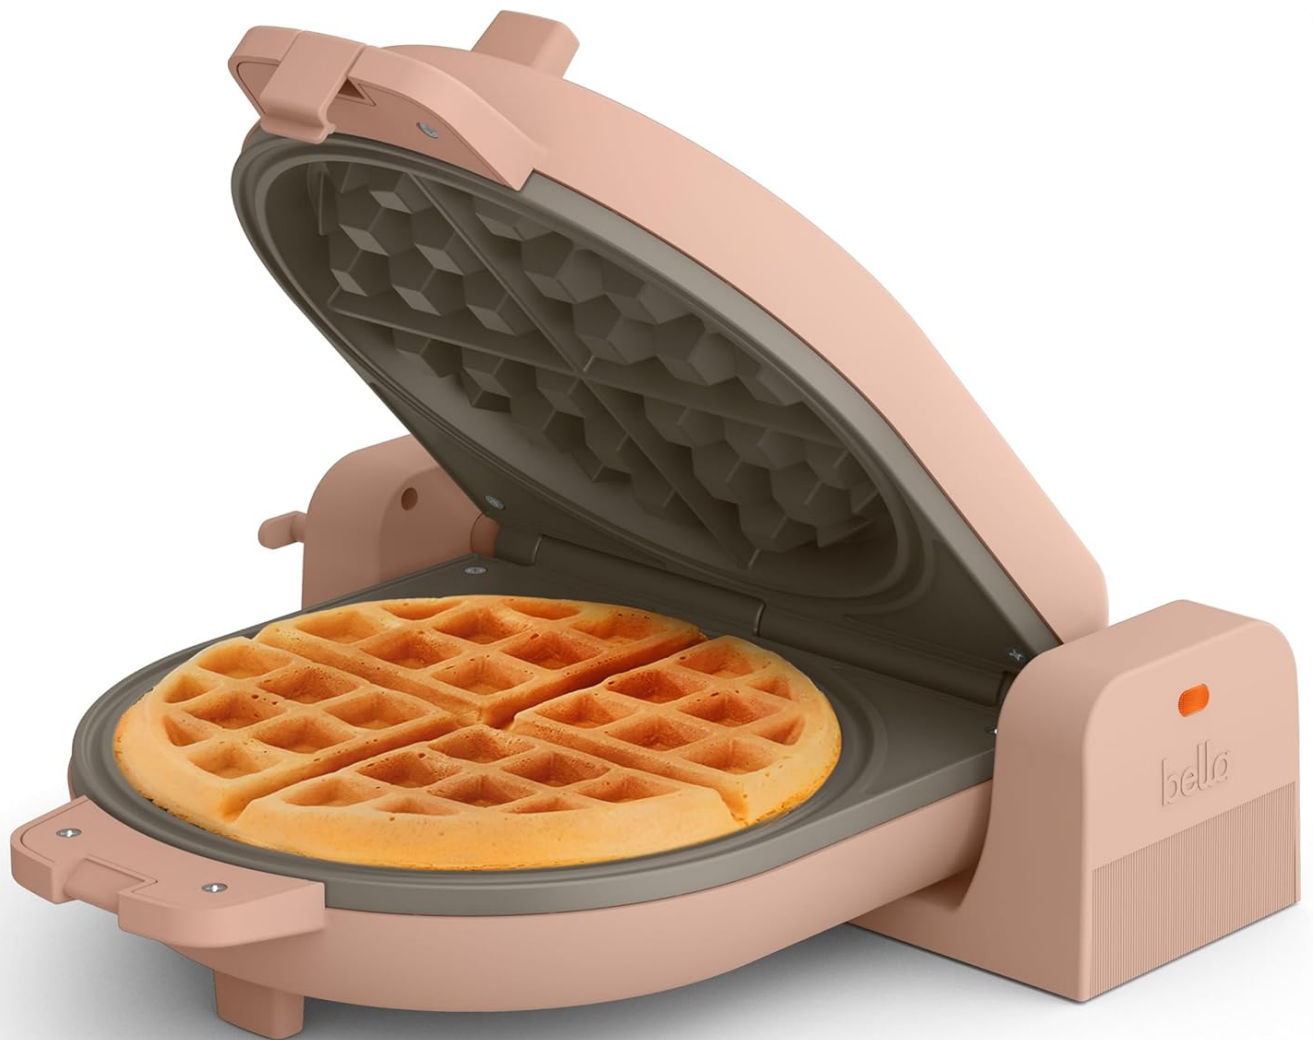

The BELLA Flip-n-Store Waffle Maker in Blossom color, shown open with a freshly made waffle.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then

remove plug from wall outlet.

- Do not use appliance for other than intended use.
- **WARNING:** Do not use cooking sprays from aerosol cans. They can cause a build-up on the cooking plates and may affect the ceramic non-stick performance of the product.
- **NOTE:** Your Waffle Maker may emit a small amount of smoke and/or odor when you use it for the first time. This is normal and harmless; however, we recommend that you do not eat the first waffle you make with the Waffle Maker.

SETUP

Before first use, wipe the cooking plates with a damp cloth and dry thoroughly. Ensure the appliance is placed on a stable, heat-resistant surface. The waffle maker is designed for compact, upright storage. To prepare for use, unlock the handle from the upright storage position and lay the unit flat.



Innovative hinge design
Flip waffles 180° in half the space

The waffle maker can be flipped from its compact upright storage position to its flat operating position.

Plug the power cord into a standard electrical outlet. The indicator light on the front of the unit will illuminate orange, indicating that the waffle maker is preheating. Wait for the light to turn white, signaling that the appliance has reached the optimal cooking temperature.

OPERATING INSTRUCTIONS

1. Once the indicator light turns white, the waffle maker is ready for use.
2. Pour your waffle batter onto the center of the bottom cooking plate. Do not overfill, as the batter will expand during cooking.
3. Close the lid. The cool-touch handle provides a secure grip.
4. Immediately after closing the lid, use the handle to flip the waffle maker 180 degrees. This innovative hinge design ensures even distribution of batter and consistent cooking on both sides.
5. Allow the waffle to cook. The indicator light will turn orange during cooking and then turn white again when the waffle is done. Cooking time is approximately 2 minutes for a fluffy waffle.
6. Carefully open the lid and remove the cooked waffle using a heat-resistant, non-abrasive utensil. The EverGood™ Ceramic Nonstick Coating ensures easy release without the need for cooking sprays.
7. Close the lid to prepare for the next waffle. The indicator light will turn orange again as it reheats.



Diner-style waffles
Evenly heated 7" wide, 1" thick waffle

The 1000-watt heating system ensures fast cooking, and the nonstick plates allow for quick cleaning.



EverGood™ Ceramic Nonstick Coating

- ✓ Without PFAS
- ✓ Food glides off
- ✓ Easy wipe clean
- ✓ Long-lasting



Other coatings


- ✗ Concerning toxins
- ✗ Food sticks
- ✗ Hard to clean
- ✗ Chips easily

Enjoy perfectly cooked, diner-style waffles that are evenly heated and fluffy.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity of your waffle maker. Always unplug the appliance from the electrical outlet and allow it to cool completely before cleaning.

- **Cleaning Plates:** The EverGood™ Ceramic Nonstick Coating allows for easy cleanup. Simply wipe the cooking plates with a damp cloth or sponge. For stubborn residue, a small amount of mild dish soap can be used, followed by wiping with a clean, damp cloth.
- **Exterior:** Wipe the exterior of the waffle maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- **Do Not Submerge:** Never immerse the waffle maker in water or any other liquid.
- **Stuck Food:** If any food becomes stuck to the plates, apply a small amount of cooking oil to the residue and let it sit for 5-7 minutes. This will soften the food, allowing it to be wiped away easily.
- **Storage:** Once clean and completely cool, the waffle maker can be flipped back to its upright position for compact storage. Use the integrated cord wrap for tidy storage.

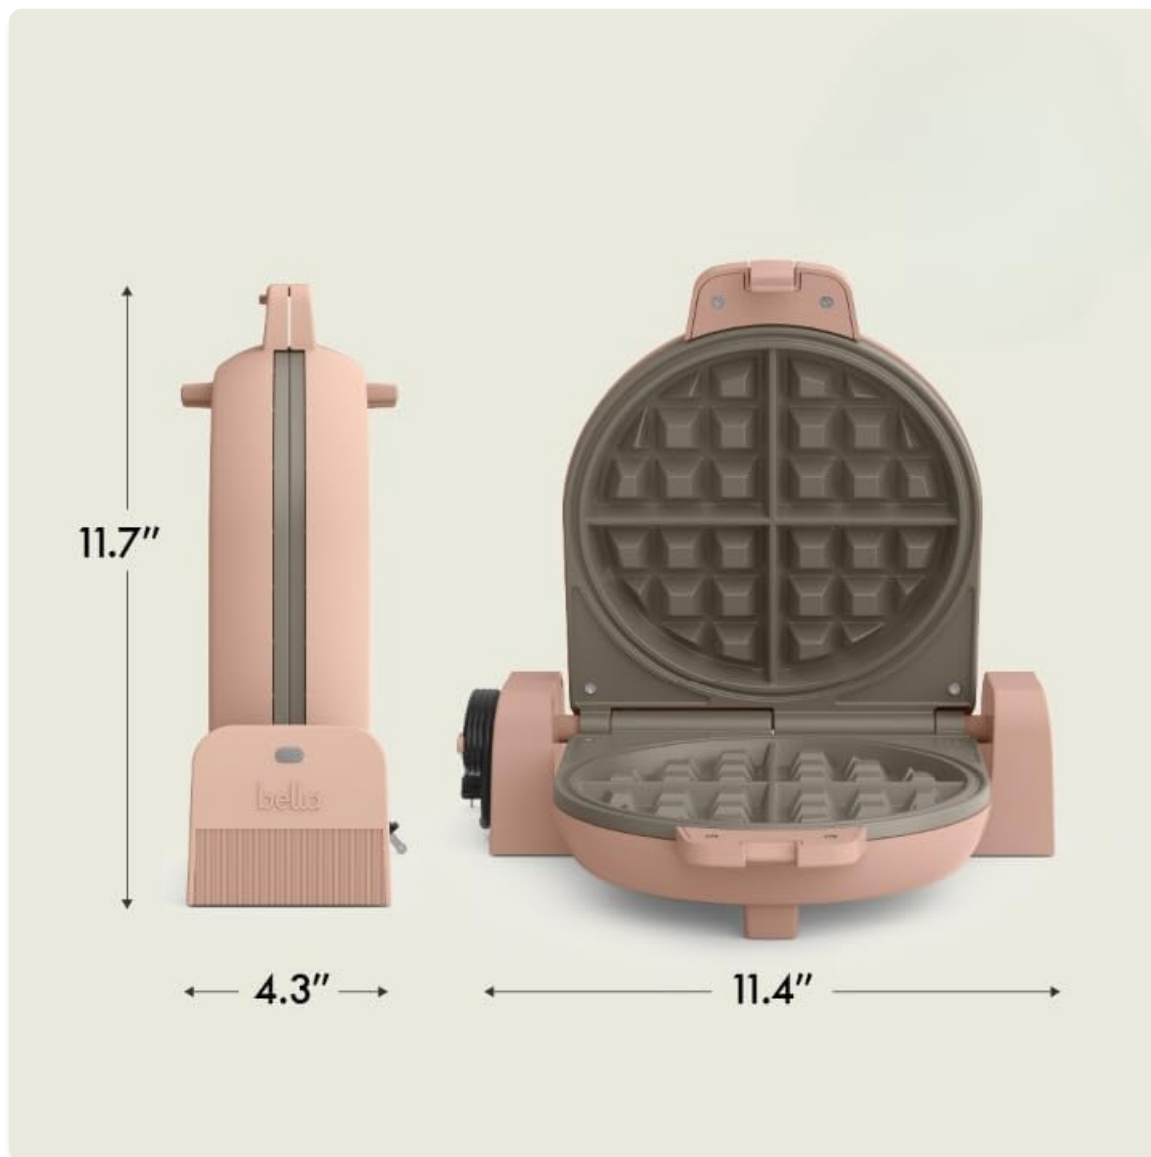

The EverGood™ Ceramic Nonstick Coating is PFAS-free, ensures food glides off, and is easy to wipe clean.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Waffle maker does not heat up.	Not plugged in; power outage; faulty outlet.	Ensure unit is securely plugged into a working outlet. Check household circuit breaker.
Waffles are not cooking evenly.	Insufficient batter; uneven batter distribution; not flipping the unit.	Ensure enough batter is used to cover the plates. Make sure to flip the unit 180 degrees after closing the lid.
Waffles stick to the plates.	Plates not properly seasoned (first use); residue build-up.	For first use, ensure plates are clean. For subsequent uses, ensure plates are clean and free of residue. Avoid aerosol cooking sprays.

SPECIFICATIONS

- **Model Number:** 35143
- **Power:** 1000 watts

- **Voltage:** 120 Volts
- **Material:** Ceramic, Plastic
- **Coating:** EverGood™ Ceramic Nonstick (PFAS Free)
- **Product Dimensions:** 3.93"D x 11.81"W x 12.2"H
- **Item Weight:** 3.3 Pounds
- **Waffle Size:** 7" wide, 1.5" thick
- **Special Features:** Temperature Control, Non Stick Coating, Cool Touch Handle, Cord Wrap

Before bella



After bella



The compact design allows for easy storage, with dimensions optimized for kitchen spaces.

WARRANTY AND SUPPORT

This BELLA Flip-n-Store Waffle Maker comes with a 2-year limited warranty. For warranty claims, product support, or additional information, please visit the official BELLA store or contact customer service through the details provided in your product packaging.

For more information, visit the [BELLA Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question