

[Manuals.plus](#) /

› [BELLA](#) /

› bella 6.0 Qt Programmable Slow Cooker, Ceramic Nonstick Coating, Adjustable Temperature & Cooking Times, Dishwasher Safe Stoneware Pot & Tempered Glass Lid, Tangle Free Cord Wrap, Surf

BELLA 35175

BELLA 6.0 Qt Programmable Slow Cooker Instruction Manual

Model: 35175

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the slow cooker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the base unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- Avoid sudden temperature changes, such as adding refrigerated foods into a heated pot.
- The stoneware pot is designed for use in this appliance only. It must not be used on a gas or electric stovetop or in a microwave oven.
- Do not place the hot stoneware pot on a cold or wet surface.
- Do not use a cracked or chipped stoneware pot.

PRODUCT OVERVIEW

The BELLA 6.0 Qt Programmable Slow Cooker consists of three main components:

- **Base Unit:** Contains the heating element and control panel.
- **Removable Stoneware Pot:** The cooking vessel with a ceramic nonstick coating.
- **Tempered Glass Lid:** Allows for viewing food during cooking.



Simple-to-use controls
4. 6. 8, and 10 hour settings & High, Low
and Warm buttons

Image: The slow cooker disassembled, showing the main components: the outer base, the removable black stoneware pot, and the clear glass lid.



Image: The BELLA 6.0 Qt Programmable Slow Cooker in its assembled state, showcasing its Surf color and sleek design.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the slow cooker.
2. **Clean Components:** Wash the stoneware pot and glass lid in warm, soapy water. Rinse thoroughly and dry completely. The stoneware pot and glass lid are dishwasher safe.
3. **Wipe Base Unit:** Wipe the exterior of the base unit with a soft, damp cloth. Do not immerse the base unit in water or any other liquid.
4. **Placement:** Place the slow cooker on a flat, stable, heat-resistant surface, away from walls and curtains, ensuring adequate ventilation.
5. **Insert Pot:** Place the clean stoneware pot into the base unit.
6. **Initial Run (Optional):** For first use, it is recommended to fill the stoneware pot with 2-3 cups of water, cover with the lid, and run on the HIGH setting for 30 minutes. This helps to remove any manufacturing odors. After 30 minutes, unplug, allow to cool, and discard the water. Wash the pot and lid again.

OPERATING INSTRUCTIONS

The BELLA 6.0 Qt Programmable Slow Cooker features a user-friendly control panel for setting cooking time and temperature.



Image: Detailed view of the slow cooker's control panel, highlighting the touch-activated buttons and indicator lights for time and temperature settings.

Control Panel Functions:

- **SELECT Button:** Used to cycle through cooking time presets (4, 6, 8, or 10 hours) and temperature settings (High, Low, Warm).
- **Time Indicators (4hrs, 6hrs, 8hrs, 10hrs):** Lights up to show the selected cooking duration.
- **Temperature Indicators (High, Low, Warm):** Lights up to show the selected cooking temperature.
- **POWER Indicator:** Illuminates when the unit is powered on.
- **WARM Indicator:** Illuminates when the unit is in the automatic warm setting.
- **Power Button:** Turns the unit on and off.

Cooking Process:

1. **Prepare Food:** Place all ingredients into the stoneware pot.
2. **Cover:** Place the glass lid securely on the stoneware pot.

3. **Plug In:** Plug the slow cooker into a standard 120V AC electrical outlet. The POWER indicator light will illuminate.

4. **Select Time and Temperature:**

- Press the **SELECT** button repeatedly to choose your desired cooking time (4, 6, 8, or 10 hours). The corresponding time indicator light will illuminate.
- After selecting the time, continue pressing the **SELECT** button to choose your desired temperature setting (HIGH or LOW). The corresponding temperature indicator light will illuminate.
- The slow cooker will begin cooking immediately after a temperature setting is selected.

5. **Automatic WARM Function:** Once the set cooking time has elapsed, the slow cooker will automatically switch to the WARM setting. The WARM indicator light will illuminate, and the unit will maintain a safe serving temperature until manually turned off.

6. **Turn Off:** To turn off the slow cooker, press the Power Button. Unplug the unit from the wall outlet when cooking is complete and the unit is no longer needed for warming.

Note: The slow cooker does not have a "medium" setting. The "Warm" setting is for keeping food warm after cooking, not for cooking food.

COOKING TIPS

- For best results, fill the stoneware pot between half and three-quarters full.
- Avoid lifting the lid frequently during cooking, as this releases heat and can extend cooking times.
- Root vegetables (carrots, potatoes) cook slower than meat. Place them at the bottom of the pot and cover with liquid.
- Dairy products and fresh herbs should be added during the last 30 minutes of cooking to prevent curdling or loss of flavor.
- Always ensure meat and poultry are cooked to safe internal temperatures.



Perfect for entertaining
Cool-touch handles and knob make it
safe for serving

Image: Examples of diverse meals that can be prepared using the BELLA slow cooker, demonstrating its versatility.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity of your slow cooker.

1. **Unplug and Cool:** Always unplug the slow cooker from the electrical outlet and allow it to cool completely before cleaning.
2. **Stoneware Pot and Glass Lid:**
 - The stoneware pot and glass lid are dishwasher safe.
 - Alternatively, wash them in warm, soapy water using a non-abrasive sponge or cloth.
 - For stubborn food residue, fill the pot with warm, soapy water and let it soak for a few hours before cleaning.
 - Do not use abrasive cleaners or scouring pads, as they may damage the nonstick coating.
 - Rinse thoroughly and dry completely before storing.
3. **Base Unit:**

- Wipe the exterior of the base unit with a soft, damp cloth.
- Do not immerse the base unit in water or any other liquid.
- Ensure the base unit is completely dry before storing or next use.

4. **Storage:** Store the slow cooker with the stoneware pot and lid inside the base unit. The unit features a convenient cord wrap on the bottom for clutter-free storage.



Image: The base of the slow cooker revealing the integrated cord wrap, designed for neat and compact storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Slow cooker does not turn on.	Not plugged in; power outlet not working; unit malfunction.	Ensure the unit is securely plugged into a working electrical outlet. Check your home's circuit breaker. If problem persists, contact customer support.
Food is not cooking properly or taking too long.	Lid not sealed properly; incorrect temperature setting; pot overfilled; frequent lid lifting.	Ensure the lid is seated correctly. Verify you have selected HIGH or LOW, not WARM. Do not overfill the pot. Avoid lifting the lid during cooking.
Food is burning on the bottom.	Too little liquid; cooking on HIGH for too long; ingredients not suitable for slow cooking.	Ensure adequate liquid is used. Consider using the LOW setting for longer cook times. Some ingredients may require more liquid or different cooking methods.
Stoneware pot has cracks or chips.	Impact damage; sudden temperature changes.	Discontinue use immediately. A cracked or chipped pot is unsafe. Contact customer support for a replacement.

SPECIFICATIONS

Brand: BELLA
Model Number: 35175
Capacity: 6 Quarts
Color: Surf
Material: Glass, Plastic, Stoneware
Product Dimensions: 11.31"D x 15.9"W x 9.98"H
Wattage: 260 watts
Item Weight: 10.58 Pounds
Control Method: Touch
Control Type: Programmable
Number of Settings: 3 (Low, High, Warm)
Dishwasher Safe: Stoneware Pot & Glass Lid (Base Unit is NOT dishwasher safe)

WARRANTY AND SUPPORT

This BELLA 6.0 Qt Programmable Slow Cooker is backed by a **2-Year Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

For warranty claims, technical support, or replacement parts, please contact BELLA Customer Service. Keep your proof of purchase for warranty validation.

Contact Information:

Website: www.bellahousewares.com

Phone: Refer to the contact section on the official website for the most current phone number.



Image: The BELLA slow cooker in a kitchen setting, emphasizing the included 2-year warranty.

© 2024 BELLA. All rights reserved.
For more information, visit bellahousewares.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CZPHNLVT>

More documents and user manuals: <https://manuals.plus/>