

[Manuals.plus](#) /

› [BELLA](#) /

› BELLA 4Qt Slim Air Fryer User Manual

BELLA 35138-016A

BELLA 4Qt Slim Air Fryer User Manual

Model: 35138-016A

INTRODUCTION

Welcome to the user manual for your new BELLA 4Qt Slim Air Fryer. This appliance is designed to provide a convenient and efficient way to cook a variety of foods with less oil, offering crispy results. Its compact design is ideal for maximizing kitchen space, while the generous 3.3 lb capacity basket is suitable for family meals. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: The BELLA 4Qt Slim Air Fryer, showcasing its sleek design and digital display.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the air fryer basket is properly inserted before operation.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

PRODUCT OVERVIEW

Familiarize yourself with the components of your BELLA 4Qt Slim Air Fryer.

1. Main Unit with Digital Control Panel
2. Air Fryer Basket
3. Crisping Tray (removable)
4. Cool-Touch Handle
5. Air Outlet Vent (rear)
6. Power Cord

Our 4qt



Their 4qt



**Extra-long basket design
For big-batch cooking**

Image: Detail of the digital control panel, showing temperature and time adjustments, and preset options.

SETUP

Before First Use:

- Remove all packaging materials, stickers, and labels from the appliance.
- Wipe the exterior of the air fryer with a clean, damp cloth.
- Wash the air fryer basket and crisping tray thoroughly with hot, soapy water. Rinse and dry completely.
- Place the air fryer on a stable, level, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
- Ensure the air outlet vent at the rear is not blocked.

Before bella



After bella



Image: Visual representation of the air fryer's compact size and the spacious XL basket.

OPERATING INSTRUCTIONS

Basic Operation:

1. Plug the air fryer into a grounded electrical outlet. The display will illuminate.
2. Pull out the air fryer basket using the cool-touch handle.
3. Place the crisping tray inside the basket.
4. Arrange your food on the crisping tray. Do not overfill the basket to allow for proper air circulation.
5. Slide the basket back into the air fryer until it clicks into place.
6. Press the Power button to turn on the appliance.
7. Select a preset cooking option (Air Fry, Bake, Roast, Broil, Reheat, Dehydrate) or manually set the temperature and time using the '+' and '-' buttons.
8. Press the 'Start/Stop' button to begin cooking.

9. The 60-minute auto shut-off timer with an audible tone will signal when cooking is complete.
10. Carefully pull out the basket and remove food using tongs.

Preset Cooking Options:

The BELLA 4Qt Slim Air Fryer features 6 convenient preset cooking options for common dishes:

- **Air Fry:** Ideal for crispy foods like fries, chicken wings, and nuggets.
- **Bake:** Suitable for baked goods, small cakes, or casseroles.
- **Roast:** Perfect for roasting vegetables or small cuts of meat.
- **Broil:** For achieving a browned or crispy top layer.
- **Reheat:** To warm up leftovers while maintaining texture.
- **Dehydrate:** For making dried fruits or jerky.



Image: The air fryer's control panel highlighting the six cooking presets.

MAINTENANCE AND CLEANING

Regular cleaning will ensure the longevity and optimal performance of your air fryer.

Cleaning the Air Fryer:

- Always unplug the air fryer and allow it to cool completely before cleaning.
- The air fryer basket and crisping tray feature EverGood™ Ceramic Nonstick Coating for easy cleaning. They are dishwasher safe.
- For manual cleaning, wash the basket and crisping tray with hot, soapy water and a non-abrasive sponge. Rinse thoroughly and dry.
- Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- Never immerse the main unit, cord, or plug in water or any other liquid.
- Ensure all parts are completely dry before storing or using again.

Dinner in minutes
6 presets & auto shut-off

Image: Demonstrating the easy wipe-down cleaning of the nonstick air fryer basket.



 **EverGood™ Ceramic
Nonstick Coating**

- ✓ Without PFAS
- ✓ Food glides off
- ✓ Dishwasher safe
- ✓ Long-lasting



Other coatings

- ✗ Concerning toxins
- ✗ Food sticks
- ✗ Soak & scrub
- ✗ Chips easily

Image: Visual comparison highlighting the superior nonstick properties of the EverGood™ Ceramic Coating.

TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; basket not fully inserted.	Ensure the power cord is securely plugged into a working outlet. Push the basket firmly until it clicks into place.
Food is not crispy.	Basket overcrowded; insufficient cooking time/temperature.	Cook food in smaller batches. Increase cooking time or temperature. Shake the basket halfway through cooking.

Problem	Possible Cause	Solution
White smoke coming from the appliance.	Grease residue from previous use; high-fat food.	Clean the basket and crisping tray thoroughly. For high-fat foods, drain excess oil from the basket during cooking.
Appliance smells like plastic.	New appliance odor.	This is normal for first few uses. It will dissipate. Ensure good ventilation.

SPECIFICATIONS

Feature	Detail
Model Number	35138-016A
Capacity	4 Quarts (3.3 lbs food capacity)
Power	1700 Watts
Voltage	230 Volts (AC)
Temperature Range	Up to 400°F
Control Method	Touch Digital Controls
Nonstick Coating	EverGood™ Ceramic (PFAS, PFOA, PTFE, lead, cadmium free)
Dishwasher Safe Parts	Basket and Crisping Tray
Product Dimensions	12.4"D x 11.22"W x 11.41"H
Item Weight	7.49 Pounds

WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or customer support, please refer to the warranty card included with your purchase or visit the official BELLA website.

You can also contact BELLA customer service for assistance with any questions or concerns about your air fryer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question