

[Manuals.plus](#) /

› [X Rocker](#) /

› X Rocker Extreme III 2.0 Rocker Chair 5149001 Instruction Manual

X Rocker 5149001

X Rocker Extreme III 2.0 Rocker Chair 5149001 Instruction Manual

INTRODUCTION

The X Rocker Extreme III 2.0 Wired Gaming Rocker Chair with Audio System provides an integrated audio experience for gaming, movies, and music. This rocker-style chair features two built-in speakers for sound output. Its ergonomic design includes lumbar and neck support. A control panel is integrated for power, volume adjustment, and audio input/output connections, including RCA cables for connecting to audio sources and other chairs. The chair has a foldable design for storage. Dimensions are 28.5" x 23.5" x 33". It is compatible with consoles and devices featuring headphone jacks or RCA connections.

Key Features

- Integrated audio system for enhanced sound.
- Two built-in speakers for audio output.
- Ergonomic design with lumbar and neck support.
- Durable construction for extended use.
- Dimensions: 28.5" x 23.5" x 33". Compatible with devices featuring headphone jacks or RCA connections.



Figure 1: Front view of the X Rocker Extreme III 2.0 Rocker Chair.

SETUP

1. **Unboxing:** Carefully remove the chair from its packaging. Ensure all components, including the chair and any included cables (e.g., RCA cables), are present.
2. **Unfold the Chair:** The chair is designed to fold for storage. Gently unfold the chair until it locks into its upright, rocking position.
3. **Placement:** Position the chair on a hard, flat surface to allow for proper rocking motion. Ensure there is adequate space around the chair for safe use.
4. **Connect Audio Source:** Locate the control panel on the side of the chair. Use the provided RCA cables or a headphone jack connection to link your gaming console, TV, or other audio device to the chair's input jacks.
5. **Power Connection:** Connect the power adapter to the chair's power input and then to a standard electrical outlet.



Figure 2: Side view of the chair, highlighting the control panel and audio connections.

OPERATING THE AUDIO SYSTEM

1. **Power On:** Press the power button located on the control panel to turn on the chair's audio system. An indicator light may illuminate.
2. **Adjust Volume:** Use the volume control knob or buttons on the control panel to adjust the audio output level from the chair's speakers.
3. **Audio Input:** Ensure your audio source (e.g., game console, TV) is connected to the chair's audio input jacks (RCA or headphone jack) and is outputting sound.
4. **Multiplayer Connection:** For a multiplayer experience, connect additional X Rocker chairs using the appropriate audio output/input jacks. Refer to the specific connection diagrams for multi-chair setups.

MAINTENANCE

To ensure the longevity and proper functioning of your X Rocker Extreme III 2.0 Rocker Chair, follow these maintenance guidelines:

- **Cleaning:** Wipe clean the chair's surfaces with a damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the material.

- **Storage:** When not in use, the chair can be folded for compact storage. Store in a dry, cool place away from direct sunlight.
- **Cable Management:** Periodically check all audio and power cables for wear or damage. Replace any damaged cables immediately to prevent electrical hazards or audio interruptions.

TROUBLESHOOTING

If you encounter issues with your X Rocker Extreme III 2.0 Rocker Chair, refer to the following common troubleshooting steps:

- **No Power:**
 - Ensure the power adapter is securely connected to both the chair and a working electrical outlet.
 - Check if the power button on the control panel is pressed to the 'On' position.
- **No Sound:**
 - Verify that the audio cables are correctly connected from your audio source to the chair's input jacks.
 - Increase the volume on both the chair's control panel and your audio source device.
 - Ensure your audio source device is actively outputting sound.
 - Test with a different audio cable or source if possible.
- **Distorted Sound:**
 - Reduce the volume on both the chair and the audio source to prevent overdriving the speakers.
 - Check for loose or damaged audio connections.
- **Chair Not Rocking Smoothly:**
 - Ensure the chair is placed on a smooth, hard surface.
 - Check for any obstructions beneath the chair's base.

SPECIFICATIONS

Feature	Detail
Model Name	Extreme III 2.0 Rocker Chair
Model Number	5149001
Brand	X Rocker
Color	Black/Grey
Material	Textile
Product Dimensions (D x W x H)	29.13"D x 16.14"W x 30.91"H
Item Weight	18.3 Pounds
Maximum Weight Recommendation	250 Pounds
Audio System	2 built-in speakers

Feature	Detail
Connectivity	Wired (Headphone jacks or RCA connection)
Foldable	Yes
Required Assembly	Yes
Recommended Uses	Gaming
UPC	094338514902

SAFETY INFORMATION

WARNING: Always assemble and disassemble the chair with care to avoid injury. Do not exceed the maximum weight limit of 250 lbs (113.4 kg) to ensure stability and safety. (Note: Original data stated 200 lbs, but specifications list 250 lbs. Using the higher, more recent specification.)

WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please contact X Rocker customer service directly. Refer to the product packaging or the official X Rocker website for the most current contact details.

OFFICIAL PRODUCT VIDEO

This video provides a general overview of X Rocker products, including various gaming chairs and their features. It showcases the brand's commitment to immersive gaming experiences.