



Manuals.plus /

› BELLA /

› BELLA 1.5 Quart Slow Cooker Instruction Manual (Model 35169)

BELLA 35169

BELLA 1.5 Quart Slow Cooker Instruction Manual (Model 35169)

Model: 35169 | Brand: BELLA

INTRODUCTION

This instruction manual provides important information for the safe and efficient operation of your BELLA 1.5 Quart Slow Cooker, Model 35169. Please read all instructions carefully before first use and retain this manual for future reference. This appliance is designed for slow cooking various foods, ideal for small meals or dips.



Image: The BELLA 1.5 Quart Slow Cooker in Surf color, featuring a compact design with a clear glass lid and a control knob on the front.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or heating base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Avoid sudden temperature changes, such as adding refrigerated foods into a heated pot.
- The stoneware pot and glass lid are dishwasher safe. The heating base is not.

PARTS AND COMPONENTS

Familiarize yourself with the components of your slow cooker:

- **Tempered Glass Lid:** Allows viewing of food during cooking.
- **Stoneware Pot:** Removable, ceramic nonstick coated cooking vessel.
- **Heating Base:** Contains the heating element and control knob.
- **Control Knob:** Used to select heat settings (OFF, WARM, LOW, HIGH).
- **Cool-Touch Handles:** For safe handling of the appliance.
- **Cord Wrap:** For tidy storage of the power cord.



Simple and user-friendly
Low, Medium and High temperatures allow you
to experiment with a variety of recipes

Image: An exploded view of the BELLA 1.5 Quart Slow Cooker, showing the separate glass lid, removable stoneware pot, and the main heating base with handles.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and labels from the slow cooker.
2. **Initial Cleaning:** Before first use, wash the stoneware pot and tempered glass lid in warm, soapy water. Rinse thoroughly and dry completely. The heating base can be wiped clean with a damp cloth. Do not immerse the heating base in water.
3. **Placement:** Place the heating base on a dry, flat, heat-resistant surface, away from the edge of the counter. Ensure there is adequate ventilation around the appliance.
4. **Assembly:** Place the clean stoneware pot into the heating base.

OPERATING INSTRUCTIONS

Follow these steps to operate your slow cooker:

1. **Prepare Food:** Place your ingredients into the stoneware pot. Do not overfill; ensure there is space between the food and the lid.
2. **Cover:** Place the tempered glass lid securely on the stoneware pot.
3. **Connect Power:** Plug the power cord into a standard 110V AC electrical outlet.
4. **Select Setting:** Turn the control knob to your desired heat setting:
 - **LOW:** For gentle simmering and longer cooking times.
 - **HIGH:** For faster cooking.
 - **WARM:** To keep cooked food at serving temperature. Do not use the WARM setting for cooking.
5. **Cooking:** Allow the food to cook for the recommended time for your recipe. The indicator light will illuminate when the unit is powered on.
6. **Serving:** Once cooking is complete, turn the control knob to the "OFF" position and unplug the appliance. Use oven mitts when handling the hot stoneware pot or lid.



Image: A close-up view of the control knob on the slow cooker, showing the "OFF", "WARM", "LOW", and "HIGH" settings, along with an indicator light.

CARE AND MAINTENANCE

Proper care ensures the longevity of your slow cooker:

- **Before Cleaning:** Always unplug the slow cooker and allow it to cool completely before cleaning.
- **Stoneware Pot and Lid:** The removable stoneware pot and tempered glass lid are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Rinse thoroughly and dry.
- **Heating Base:** Wipe the exterior of the heating base with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the heating base in water or any other liquid.
- **Nonstick Coating:** The EverGood Ceramic Nonstick Coating is designed for easy food release. To maintain its quality, avoid using metal utensils that could scratch the surface.
- **Storage:** Ensure all parts are clean and dry before storing. Use the integrated cord wrap feature on the base for tidy storage.



Chesy fondue

Creamy dips & sauces

Side dishes

Chili, soups & stews

Pudding & desserts

From mini meals to party dips

Image: A hand washing the removable stoneware pot of the slow cooker, demonstrating the ease of cleaning.

TROUBLESHOOTING

If you encounter issues with your slow cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not functioning; control knob is OFF.	Ensure the power cord is securely plugged into a working outlet. Turn the control knob to WARM, LOW, or HIGH.
Food is not cooking properly.	Incorrect heat setting; lid not sealed; insufficient cooking time.	Verify the correct heat setting (LOW or HIGH) is selected. Ensure the lid is properly sealed. Adjust cooking time as needed for the recipe. Avoid frequently lifting the lid, as this extends cooking time.
Food is sticking to the pot.	Lack of liquid; food cooked too long on HIGH; coating wear.	Ensure adequate liquid is used in recipes. Reduce cooking time or use a lower heat setting. The EverGood Ceramic Nonstick Coating is durable, but avoid abrasive cleaning or metal utensils.
Control knob markings are hard to read.	Low contrast printing.	Ensure adequate lighting when selecting settings. Familiarize yourself with the knob positions for OFF, WARM, LOW, and HIGH.

PRODUCT SPECIFICATIONS

- **Brand:** BELLA
- **Model Number:** 35169
- **Capacity:** 1.5 Quarts
- **Color:** Surf
- **Material:** Glass, Plastic, Stoneware
- **Product Dimensions:** 7.99"D x 9.56"W x 7.55"H
- **Item Weight:** 4.18 Pounds
- **Wattage:** 110 watts
- **Voltage:** 110.0 V
- **Control Type:** Manual (dial knob)
- **Number of Settings:** 3 (LOW, HIGH, WARM)
- **UPC:** 829486351693

WARRANTY AND CUSTOMER SUPPORT

Your BELLA 1.5 Quart Slow Cooker is covered by a **2-Year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

For warranty claims, technical assistance, or general inquiries, please contact BELLA customer service. Contact information can typically be found on the BELLA official website or on the product packaging.



Image: The BELLA 1.5 Quart Slow Cooker displayed with a prominent "2-Year Warranty" badge, indicating product assurance.

