

[Manuals.plus](#) /

› [Retevis](#) /

› Retevis EZTalk 2 GMRS Radio User Manual

Retevis EZTalk 2

Retevis EZTalk 2 GMRS Radio User Manual

Model: EZTalk 2

1. INTRODUCTION

This user manual provides detailed instructions for the operation and maintenance of your Retevis EZTalk 2 GMRS Radio. Please read this manual thoroughly before using the device to ensure proper function and safety. The Retevis EZTalk 2 is a General Mobile Radio Service (GMRS) two-way radio designed for reliable communication in various outdoor environments.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 2 x EZTalk 2 Two Way Radio
- 2 x 2200mAh Li-ion Battery
- 2 x Headset
- 2 x Type-C Charging Cable & Charger
- 2 x Belt Clip
- 1 x User Manual

NOAA Weather Alert

Help you get the latest weather for safe outdoor activities



Figure 2.1: All components included in the Retevis EZTalk 2 GMRS Radio package.

3. PRODUCT OVERVIEW

The Retevis EZTalk 2 GMRS Radio features a robust design suitable for outdoor use. Familiarize yourself with the radio's components.



Figure 3.1: Front view of two Retevis EZTalk 2 GMRS Radios with accessories.

Whisper Function

With earpiece, transmit clearly and silently



Figure 3.2: Rear view of the Retevis EZTalk 2 GMRS Radio, detailing the battery compartment and identification labels.

4. SETUP

4.1 Charging the Battery

1. Insert the 2200mAh Li-ion battery into the battery compartment on the back of the radio. Ensure it clicks securely into place.
2. Place the radio into the charging base.
3. Connect the Type-C charging cable to the charging base and then to a power source.
4. The charging indicator light will illuminate, typically red during charging and green when fully charged. A full charge takes approximately 3-4 hours.

IP67 Waterproof

Waterproof walkie talkie no fear of an outdoor harsh environment



Figure 4.1: Battery installation and charging setup.

4.2 Attaching the Antenna

Screw the antenna clockwise into the connector on the top of the radio until it is finger-tight. Do not overtighten.

4.3 Attaching the Belt Clip

Align the belt clip with the screw holes on the back of the radio and secure it with the provided screws.

4.4 Connecting the Headset

Insert the headset's two-pin plug into the audio jack located on the side of the radio. Ensure a firm connection for clear audio.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Volume Adjustment

Rotate the **Power/Volume Knob** (located on the top of the radio) clockwise to power on the radio. Continue rotating

clockwise to increase the volume. Rotate counter-clockwise to decrease volume and power off the radio.

5.2 Channel Selection

Use the **Up/Down** arrow buttons to select your desired GMRS channel. Ensure all radios in your group are set to the same channel for communication.

5.3 Transmitting and Receiving

- To **transmit**, press and hold the **PTT (Push-To-Talk) button** on the side of the radio. Speak clearly into the microphone. Release the PTT button to stop transmitting.
- To **receive**, simply release the PTT button. The radio will automatically receive transmissions on the selected channel.

5.4 Menu Navigation

Press the **MENU** button to access the radio's settings. Use the **Up/Down** arrow buttons to navigate through options and the **MENU** button again to confirm selections. The **ESC** button exits the menu or cancels an action.

Note: Some users have reported audible voice prompts during menu navigation. While the manual does not specify a direct way to disable all voice prompts, the 'One-key Mute' function can silence general prompts and indicators during operation.

5.5 Whisper Function

When using the earpiece, activate the whisper function (refer to menu settings) to transmit clearly at a lower voice level, enabling discreet communication.

Hunting Radios Long Range

High power and long antenna
communication clearly over the distance



Figure 5.1: Discreet communication using the whisper function with an earpiece.

5.6 NOAA Weather Alert

Access the NOAA function through the menu to receive the latest weather information. This feature assists in adjusting outdoor plans promptly for safety.

Powerful Flashlight

Light your way and look for animals at night



Figure 5.2: NOAA Weather Alert display on the radio.

5.7 Hunting Calls

The radio includes 7 pre-programmed hunting calls (elk, buck, duck, hare, roe deer, wild hogs, wolf). Select the appropriate call from the menu to assist in hunting activities.

Package Includes



Figure 5.3: Selecting hunting calls from the radio menu.

5.8 High-Light Flashlight

Activate the built-in flashlight (via a dedicated button or menu option) for illumination in low-light conditions.

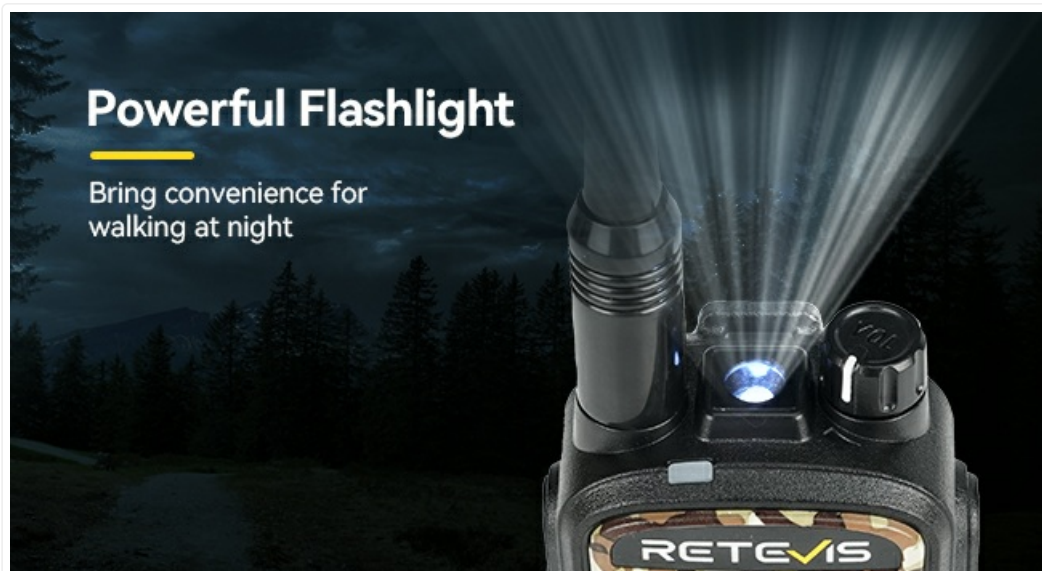


Figure 5.4: The integrated high-light flashlight in operation.

5.9 One-Key Mute

Press the dedicated mute button to temporarily disable prompts and indicators, which can be useful in situations requiring silence.

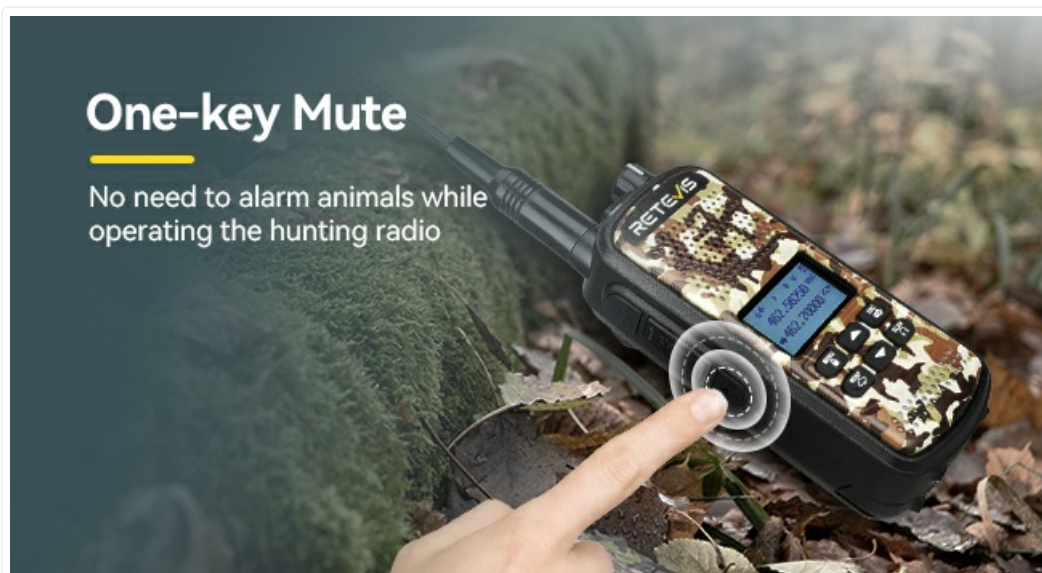


Figure 5.5: Activating the one-key mute function.

5.10 Key Lock

Activate the key lock feature (usually by long-pressing a specific button or via the menu) to prevent accidental button presses.

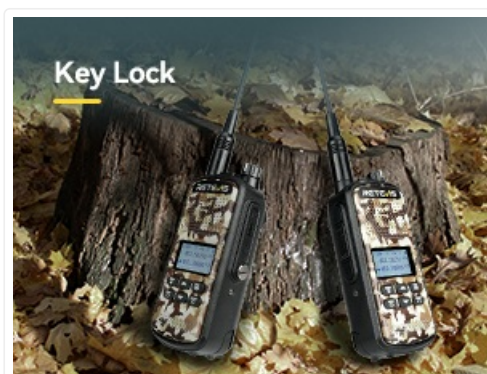


Figure 5.6: Radios with key lock engaged.

5.11 Backlight Adjustment

The display backlight can be adjusted to 5 levels for optimal visibility in various lighting conditions. Adjust this setting through the radio's menu.

6. KEY FEATURES

- **IP67 Waterproof Rating:** The radio is designed to withstand immersion in water up to 1 meter for 30 minutes, making it suitable for use in wet outdoor environments.



Figure 6.1: IP67 Waterproof capability.

- **Extended Range Communication:** Equipped with a long antenna and support for 8 relay channels, the EZTalk 2 facilitates clear communication over extended distances, especially beneficial in challenging terrains.

Built-with 2200mAh Battery

No need to frequently charge when hunting for a whole day outdoors



Figure 6.2: Long-range communication in outdoor settings.

- **2200mAh Lithium Battery:** The high-capacity battery provides approximately 20 hours of continuous use, reducing the need for frequent recharging during prolonged outdoor activities.
- **Emergency Alarm:** An integrated emergency alarm function is available for alerting others in critical situations.

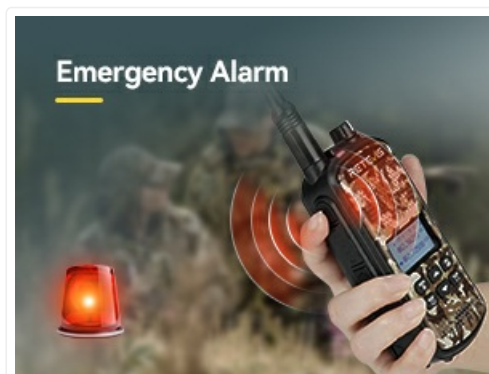


Figure 6.3: Emergency Alarm feature.

- **Camouflage Design:** The radio features a camouflage pattern, blending with outdoor environments.



Figure 6.4: Camouflage design for outdoor integration.

7. MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the radio's exterior. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** To prolong battery life, avoid overcharging and fully discharging the battery regularly. Store the radio and battery in a cool, dry place when not in use for extended periods.
- **Storage:** Ensure the radio is powered off and the antenna is securely attached or removed for storage. Keep away from extreme temperatures and direct sunlight.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Radio does not power on	Battery is low or not installed correctly	Charge the battery or re-install it securely.
Cannot transmit or receive	Incorrect channel selected; PTT button not pressed; antenna loose	Verify channel settings; ensure PTT is pressed during transmission; check antenna connection.
Poor audio quality or static	Out of range; interference; low battery	Move closer to other radios; change channel; charge battery.
Buttons unresponsive or menu issues	Key lock activated; software glitch	Deactivate key lock. If issue persists, try resetting the radio (refer to advanced settings in menu or contact support).
Voice prompts are loud/unwanted	Voice prompt feature enabled	Use the 'One-key Mute' function for temporary silence. Consult the full manual (if available) or manufacturer for options to disable permanent voice prompts.

9. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	EZTalk 2
Brand	Retevis
Item Weight	10.1 ounces (286 Grams)
Product Dimensions	2.36 x 1.46 x 5.2 inches
Batteries	2 CR5 batteries required (included)
Color	Green (Camouflage)
Number of Channels	30
Special Feature	Long Range, Waterproof
Frequency Range	GMRS
Talking Range Maximum	3 Kilometer
Voltage	7.4 Volts (DC)
Water Resistance Level	IP67 Waterproof

10. WARRANTY AND SUPPORT

Retevis provides a **2-year warranty** for the radio body and a **1-year warranty** for accessories from the date of purchase. A 30-day no-reason return policy is also offered.

For service beyond the warranty period, maintenance services are available, with buyers responsible for associated costs.

For warranty claims, technical support, or any inquiries, please contact Retevis customer service via Amazon. Responses are typically provided within 12 hours.

Contact Information:

- Via Amazon messaging system (search for 'Retevis Direct' seller)
- Visit the [Retevis Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CZQJBLKC>

More documents and user manuals: <https://manuals.plus/>