

HOVER HEART LBW14(DZT)

HOVERSTAR Hoverboard User Manual

Model: **LBW14(DZT)** | Brand: **HOVER HEART**

1. IMPORTANT SAFETY INFORMATION

Please read this manual thoroughly before operating your HOVERSTAR Hoverboard. Failure to follow instructions can result in injury or damage to the device.

- Always wear appropriate safety gear, including a helmet, knee pads, and elbow pads.
- Do not ride the hoverboard on public roads, uneven surfaces, or near traffic.
- Ensure the hoverboard is fully charged before each use.
- Do not exceed the maximum weight limit of **54 kg (120 lbs)**.
- Supervise children during operation. Recommended age is **6 years and up**.
- Avoid riding in wet conditions or extreme temperatures.
- Do not attempt to modify the hoverboard.

2. WHAT'S IN THE BOX

Upon opening your HOVERSTAR Hoverboard package, please verify that all components are present:

- HOVERSTAR Hoverboard (1 unit)
- Charger (1 unit)
- Instruction Manual (This document)
- How to Reset Instruction Card (1 unit)



Image: The HOVERSTAR Hoverboard in Matt Purple, along with its included charger and documentation.

3. SETUP

3.1 Charging the Hoverboard

Before first use, fully charge the hoverboard. The charging time is approximately **2 to 3 hours**.

1. Locate the charging port on the hoverboard.
2. Connect the charger to the hoverboard's charging port.
3. Plug the charger into a standard wall outlet.
4. The indicator light on the charger will typically be red during charging and turn green when fully charged.
5. Once fully charged, disconnect the charger from both the hoverboard and the outlet.

3.2 Initial Calibration/Reset

If the hoverboard does not balance correctly or exhibits unusual behavior, a reset may be required. Please refer to the dedicated **"How to Reset Instruction Card"** included in your package for detailed steps on resetting the hoverboard to its factory status.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

To power on the hoverboard, press the power button. To power off, press and hold the power button until the lights turn off.

4.2 Riding the Hoverboard

The HOVERSTAR Hoverboard features an electronic self-balancing system, making it easy to learn and ride. When turned on, the hoverboard will automatically balance itself.

1. Place one foot on a footpad, ensuring the hoverboard remains level.
2. Quickly place your second foot on the other footpad.
3. Shift your weight slightly forward to move forward, and lean back to slow down or move backward.
4. To turn, apply more pressure to the footpad on the side opposite to the desired turn direction.



Image: A user's feet positioned on the footpads of the HOVERSTAR Hoverboard, demonstrating proper stance for operation.



Image: A child riding the HOVERSTAR Hoverboard, showcasing its self-balancing capability and ease of use.

AUTO SELF BALANCE

when turn it on,
hoverboard will be balance
automatically,
It's easy to user to
learn and ride.



Image: A person sitting beside the HOVERSTAR Hoverboard, illustrating the automatic self-balancing feature when the device is powered on.

4.3 Bluetooth Speaker Operation

Your HOVERSTAR Hoverboard includes a built-in wireless Bluetooth speaker, allowing you to play music from your smartphone or other Bluetooth-enabled devices.

1. Ensure the hoverboard is powered on.
2. Enable Bluetooth on your smartphone or device.
3. Search for available Bluetooth devices and select the hoverboard (usually named "HOVERSTAR" or similar).
4. Once paired, you can play audio through the hoverboard's speaker.
5. Adjust the volume on your connected device. Ensure the volume is not set to zero.

4.4 LED Lights

The hoverboard is equipped with bright flashing LED wheels and desirable front LED lights for enhanced visibility and fun

during operation.

FLASHING WHEEL

Front LED Light



Image: A close-up view of the HOVERSTAR Hoverboard's wheel, highlighting its vibrant flashing LED lights.

5. MAINTENANCE

5.1 Cleaning

Wipe the hoverboard with a damp cloth to remove dirt and dust. Do not use harsh chemicals or abrasive cleaners. Avoid direct water spray.

5.2 Storage

Store the hoverboard in a cool, dry place away from direct sunlight and extreme temperatures. Ensure it is clean and fully charged before long-term storage.

5.3 Battery Care

To prolong battery life, avoid completely draining the battery. Charge the hoverboard regularly, even if not in use for extended periods (e.g., once every 3 months).

6. TROUBLESHOOTING

If you encounter any issues with your HOVERSTAR Hoverboard, please refer to the common problems and solutions below:

Problem	Solution
Hoverboard does not turn on.	Reset the hoverboard to factory status (refer to the included reset card). Ensure it is charged.
Hoverboard does not balance.	Reset the hoverboard to factory status (refer to the included reset card).
Hoverboard does not move.	Reset the hoverboard to factory status (refer to the included reset card). Ensure it is charged.
Wireless speaker not working (but worked before).	Try connecting with a different smartphone to test the Bluetooth connection. Ensure the volume on your device is not set to zero.
Hoverboard makes a continuous 'beep' sound.	Ensure the volume is adjusted and not set to zero on your connected device. This sound can also indicate a low battery or an internal error; try charging or resetting.
Hoverboard shaking (but worked well before).	Reset the hoverboard to factory status (refer to the included reset card).
Charger light does not change from red to green.	Ensure the hoverboard is properly connected. If the issue persists, the charger may be faulty. Contact seller to request a new charger (within warranty time).
Hoverboard damaged upon receipt.	Contact seller immediately and provide pictures to arrange an exchange (within warranty time).

7. SPECIFICATIONS

Feature	Detail
Model Name	LBW14(DZT)
Color	MATT PURPLE
Product Dimensions	20.7 x 6.8 x 9.1 inches
Product Weight	10.3 Pounds

Feature	Detail
Maximum Load Capacity	54 kg (approx. 120 lbs)
Max Speed	10 km/h (approx. 6.2 mph)
Battery Type	1 Lithium Ion battery (included)
Charging Time	2-3 hours
Operating Temperature	5°C ~ 40°C (41°F ~ 104°F)
Charging Temperature	5°C ~ 40°C (41°F ~ 104°F)
Stored Relative Humidity	5% ~ 85%
Manufacturer Recommended Age	6 years and up
Safety Certification	UL 2272 Standard (SGS Lab tested and approved)
Special Features	Bluetooth Speaker, Light Up Wheels, Front LED Lights, Auto Self Balance

Tire Size: 6.5 inch SPORT

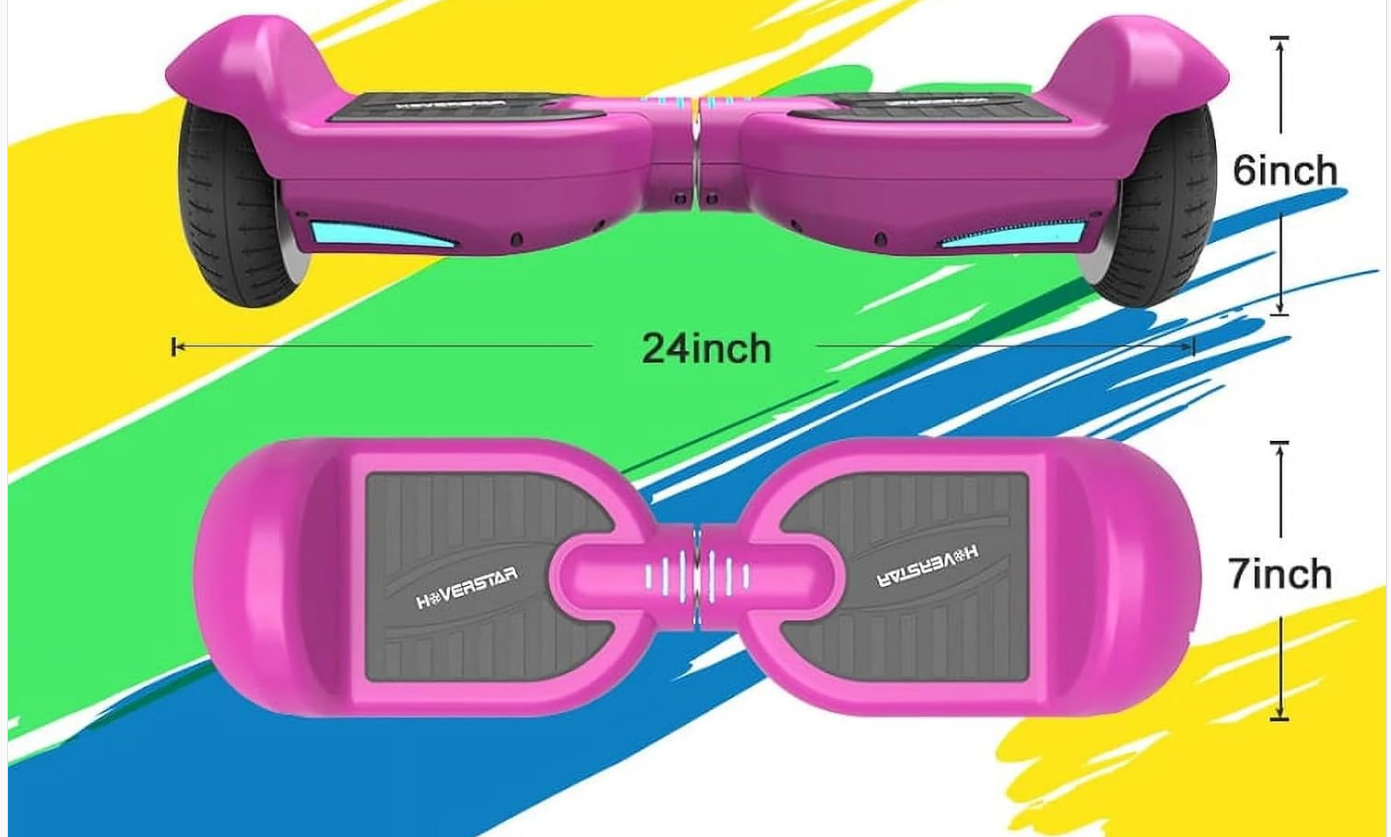


Image: Diagram illustrating the dimensions of the HOVERSTAR Hoverboard, including tire size (6.5 inches), length (24 inches), and height/width.

8. WARRANTY AND SUPPORT

HOVER HEART provides reliable support service for your HOVERSTAR Hoverboard. We offer a **90-day free exchange service** and parts service from the date of purchase.

If your hoverboard experiences any problems within the warranty period, please contact the seller directly through Amazon email. Be prepared to provide details of the issue and, if applicable, pictures of any damage.

For issues such as a non-functional charger or the need for an exchange due to damage upon receipt, please contact the seller for assistance within the warranty timeframe.

9. OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for embedding at this time.

© 2025 HOVER HEART. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question