

[Manuals.plus](#) /

› [LIPETY](#) /

› LIPETY 9" Portable Oscillating Standing Fan User Manual

LIPETY F9

LIPETY 9" Portable Oscillating Standing Fan User Manual

Model: F9

1. INTRODUCTION

Thank you for choosing the LIPETY 9" Portable Oscillating Standing Fan. This versatile fan is designed for convenience and powerful cooling, whether you're at home, in the office, or enjoying outdoor activities. Its unique foldable and telescopic design allows it to transform from a compact unit to a full-sized standing fan, meeting various cooling needs. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Figure 1: The LIPETY Portable Oscillating Standing Fan in various modes (folded, desk, and standing) with its remote control.


2. PRODUCT FEATURES

- **9" Portable Fan with Remote:** Supports 1h to 4h timer function.
- **Unique Telescopic Design:** Lightweight and compact, adjustable height from 4.1" to 41.3". Functions as a table, pedestal, or floor fan.
- **65° Oscillating Function:** Provides wide-angle air distribution.
- **4 Speeds & Quiet Operation:** Includes breeze, soft, strong, and natural wind modes. Operates quietly (12~22±5db) for undisturbed sleep.
- **7200mAh Rechargeable Battery:** Built-in battery supports charging while in use. Provides 5 to 23.5 hours of working time depending on speed.
- **Height Adjustable and Easy to Clean:** Fan head can be flipped 180°, and the front grille is detachable for easy cleaning. Features a non-slip silicone pad for stability.

Creative Design Standing/Desktop fan

break space constraints

Height adjustable

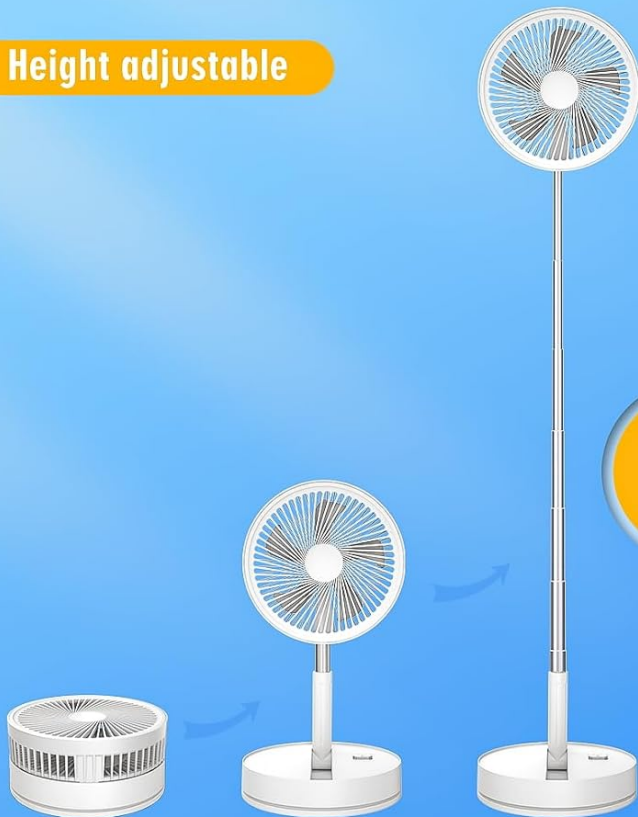

- ✓ Small size easy to carry
- ✓ 7200mAh battery outdoor available
- ✓ Super low noise
- ✓ Detachable design for clean

Fixed height



- ✗ Fixed height
- ✗ Large size takes up more space
- ✗ Only use plug to work
- ✗ Loud noise affect rest

Figure 2: The fan's versatile design allows for adjustable height and compact storage, unlike traditional fans.

3. PACKAGE CONTENTS

Upon opening the package, please ensure all items listed below are present and in good condition:

- 1 x Foldable Fan
- 1 x USB to Type C Cable
- 1 x Remote Control (with battery)
- 1 x User Manual (this document)

Package List



1*USB to Type C cable



1*collapsible fan



1*remote with battery



1*user manual



1*package box

Foldable Design Available for Outdoor



Figure 3: All components included in the product package.

4. SETUP INSTRUCTIONS

4.1 Unfolding the Fan

1. Place the folded fan on a flat, stable surface.
2. Gently pull the fan head upwards from the base in the direction of the arrow marked "OPEN" until it locks into an upright position.
3. Adjust the fan head to your desired angle (up to 180° tilt).

4.2 Adjusting Height

1. To extend the fan, firmly hold the base and pull the telescopic rod upwards to your desired height. The rod can extend up to 41.3 inches.
2. To retract, press the release button on the back of the telescopic rod and gently push the rod downwards.



Figure 4: Visual guide for unfolding and adjusting the fan's height.

4.3 Charging the Fan

The fan comes with a built-in 7200mAh rechargeable battery. Use the provided USB to Type C cable for charging.

1. Connect the Type C end of the cable to the charging port on the fan's base.
2. Connect the USB end to a compatible USB power source (e.g., USB wall adapter, power bank, computer USB port).
3. The charging indicator lights on the base will illuminate to show charging progress. A full charge typically takes 4-6 hours.
4. The fan can be used while charging.

7200mAh Large Rechargeable Battery

large capacity long service life



12-23.5H

Speed 1 - Breeze Wind

5-8H

Speed 2 - Soft Wind

3-5H

Speed 3 - Strong Wind

9-17H

Speed 4 - Natural Wind



The length of working hours depend on different speed and whether to use oscillation.

Figure 5: Battery life indication based on fan speed.

More Power Supplies to Choose

4-6 hours for full charge



NOTE: these power supplies aren't included



equipped with 1.5M USB-C cable

Figure 6: Charging the fan via USB-C cable.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Speed Control

The fan can be operated using either the touch controls on the base or the included remote control.

- **Touch Control:** Press the power button on the fan base to turn it on. Each subsequent press cycles through the 4 wind speeds (Breeze, Soft, Strong, Natural Wind). Press and hold to turn off.
- **Remote Control:** Use the red power button on the remote to turn the fan on/off. Use the speed buttons (1, 2, 3, 4) to select your desired wind mode.



Figure 7: Fan speed settings and remote control overview.

5.2 Oscillation Function

The fan features a 65° oscillation function to distribute air across a wider area.

- **Remote Control:** Press the oscillation button on the remote control to activate or deactivate the 65° oscillation.



Figure 8: Fan oscillation and tilt angles.

5.3 Timer Function

Set the fan to automatically turn off after a specified period.

- **Remote Control:** Use the timer buttons (1H, 2H, 3H, 4H) on the remote to set the desired auto-off time. The timer function can only be set via the remote.

Super Low Noise & 4H Timer

10db 30db 40db

Rustling Leaves our fan within this range Silent Night Alarm Clock

1H 2H 3H 4H

4H **TIMER**
FUNCTION

12-22db

Figure 9: Timer settings for automatic fan shut-off.

5.4 Official Product Video

Video 1: This video provides a visual demonstration of the fan's features, including its portability, folding mechanism, and oscillation. It highlights the 7200mAh battery and quiet operation, showcasing its suitability for various environments.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your fan.

- 1. Power Off:** Always ensure the fan is turned off and unplugged before cleaning.
- 2. Detachable Front Grille:** The front grille can be detached for easy cleaning of the fan blades. Gently twist or unclip the grille as indicated by markings on the fan.
- 3. Cleaning Blades and Grille:** Use a soft, damp cloth to wipe down the fan blades and grille. For stubborn dust, a mild soap solution can be used, but ensure no liquid enters the motor or electronic components.

4. **Base Cleaning:** Wipe the base with a dry or slightly damp cloth.
5. **Reassembly:** Ensure all parts are completely dry before reassembling the front grille and operating the fan.

7. TROUBLESHOOTING

If you encounter any issues with your fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on	Low battery or no power.	Charge the fan fully. Ensure the power button is pressed correctly.
Weak airflow	Low speed setting; dirty fan blades/grille.	Increase the fan speed. Clean the front grille and blades.
Fan makes unusual noise	Obstruction in fan blades; unstable surface.	Turn off and check for any foreign objects. Place the fan on a stable, flat surface.
Oscillation not working	Oscillation function not activated.	Press the oscillation button on the remote control.

8. SPECIFICATIONS

Feature	Detail
Brand	LIPETY
Model Name	F9
Color	White
Electric Fan Design	Floor Fan
Power Source	DC & Battery Powered
Product Dimensions	8.6"D x 8.6"W x 41.3"H
Noise Level	22 dB
Number of Blades	5
Voltage	6 Volts
Switch Type	Electronic Touch Controls
Control Method	Remote
Connector Type	USB Type C
Battery	7200mAh Lithium Ion (built-in)
Working Time	5 h to 23.5 h (depending on speed)
Charging Time	Approx. 6 hours

Feature	Detail
Item Weight	2.99 pounds

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact LIPETY customer service directly. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question