

[Manuals.plus](#) /

› [EcoBasic](#) /

› EcoBasic Ultrasonic Retainer Cleaner GH-UC122 User Manual

EcoBasic GH-UC122

EcoBasic Ultrasonic Retainer Cleaner GH-UC122

INSTRUCTION MANUAL

INTRODUCTION

The EcoBasic Ultrasonic Retainer Cleaner GH-UC122 is designed to provide efficient and thorough cleaning for various dental appliances and small personal items. Utilizing advanced 45kHz ultrasonic technology and UV-C lights, this device effectively removes dirt, stains, and odors from retainers, dentures, mouthguards, toothbrush heads, and jewelry, ensuring optimal hygiene without causing damage.

SAFETY INFORMATION

No specific safety information was provided beyond general usage guidelines. Always ensure the device is used according to the instructions to prevent malfunction or burnout. Do not turn on the device before adding water. After three consecutive uses, allow the machine to rest for 10 minutes.

PACKAGE CONTENTS

- Ultrasonic Cleaner Machine
- Power Adapter
- Drain Basket
- Tweezers
- User Manual

What's In The Box?

- A Ultrasonic Cleaner Machine
- Drain Basket
- A Adapter
- A Tweezer
- User Manual



Image: All components included in the EcoBasic Ultrasonic Retainer Cleaner package.

SETUP

1. Place the EcoBasic Ultrasonic Retainer Cleaner on a stable, flat surface.
2. Open the lid of the cleaner.
3. If cleaning small items like jewelry, place the provided drain basket inside the stainless steel tank.
4. Fill the stainless steel tank with cold water up to the 'MAX' fill line.
5. Optionally, add a cleaning tablet to the water for enhanced performance.
6. Carefully place the items to be cleaned (e.g., retainers, dentures, mouthguards, jewelry, toothbrush heads) into the water. Ensure items are fully submerged.
7. Close the lid securely.
8. Connect the power adapter to the device's power port and then plug it into a standard electrical outlet.

200ML LARGE CAPACITY & MULTI-FUNCTIONAL

Large Capacity make it easier to clean long size, everyday items, widely used in daily life



Image: The cleaner's tank filled with water and various items ready for cleaning.

OPERATING INSTRUCTIONS

The EcoBasic Ultrasonic Retainer Cleaner features a single-button control for ease of use and offers four professional cleaning modes:

- **Mode 1 (Green light is on):** 5 minutes ultrasonic with UV light for daily quick cleaning.
- **Mode 2 (Red light is on):** 10 minutes pulse ultrasonic with UV light for stubborn buildup and deep cleaning.
- **Mode 3 (Blue light is on):** 10 minutes ultrasonic only, suitable for delicate items.
- **Mode 4 (Green, Red, & Blue indicators light up at the same time):** 10 minutes UV only.

To select a mode, press the power button repeatedly until the desired light indicator appears. The digital display will show the remaining cleaning time. For items with heavy stains or buildup, it is recommended to use Mode 2 or Mode 3 for 2-3 cycles. To turn off the device before a cycle completes, press the power button 5 times.

Common Oral Problems



1 Bacterial Growth



2 Difficult Cleaning



3 Yellowing Aligners



4 Oral Odor

Image: Visual guide to the four distinct cleaning modes and their functions.

ONE-BUTTON OPERATION & 4 CLEANING FUNCTIONS



Image: Close-up of the one-button operation and digital display.

MAINTENANCE

After each cleaning cycle, carefully pour out the water from the tank. Wipe the stainless steel tank and the exterior of the device with a soft, dry cloth. Do not immerse the main unit of the cleaner in water or rinse it under running water, as this may damage the electronic components. Ensure the device is completely dry before storing.

TROUBLESHOOTING

- **Device not turning on:** Ensure the power adapter is securely connected to both the device and a working electrical outlet.
- **Poor cleaning results:** Verify that the water level is correct (up to the MAX line). Consider using a cleaning tablet. Try a different cleaning mode or run the cycle 2-3 times for heavily soiled items.
- **Unusual noise during operation:** Some vibration and a high-pitched sound are normal during ultrasonic cleaning. Ensure the device is placed on a stable, flat surface to minimize excessive noise.

SPECIFICATIONS

Feature	Detail
Product Dimensions	4.02 x 4 x 3 inches
Item Model Number	GH-UC122
UPC	787378689913
Manufacturer	NEW GREATHOUSE ELECTRONICS INDUSTRY LTD
ASIN	B0CZRD28S5
Tank Capacity	200ml
Ultrasonic Frequency	45kHz
Power Supply	AC100-240V
Rated Power	25W

WARRANTY AND SUPPORT

The EcoBasic Ultrasonic Retainer Cleaner comes with a 2-year extra warranty and a 60-day money-back guarantee. For any inquiries or support needs, 24-hour customer support is available, along with VIP service for free replacement. Please refer to the contact information provided in your product packaging for direct support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question