

[manuals.plus](#) /› [TIMEX](#) /› [Timex TW2W24200 Men's Analogue Quartz Watch Instruction Manual](#)**TIMEX TW2W24200**

Timex TW2W24200 Men's Analogue Quartz Watch Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Timex TW2W24200 Men's Analogue Quartz Watch. Please read this manual thoroughly to ensure proper use and to maximize the functionality of your timepiece.

PRODUCT OVERVIEW

The Timex TW2W24200 is an analogue quartz watch featuring a tide tracker, temperature sensor, and an analog compass display. These functions are driven by a dedicated fourth hand. The watch is constructed with a 45mm 316L stainless-steel case, a black silicone strap, and a teal dial. It includes luminescent hands and hour markers, a date feature, and is water-resistant up to 100 meters.



Image: Front view of the Timex TW2W24200 watch, displaying the teal dial with tide, temperature, and compass markings, along with the main time hands.



Image: The Timex TW2W24200 watch worn on a wrist, providing a perspective on its size and how it appears when in use.

SETUP

Unboxing

Upon receiving your watch, carefully remove it from its packaging. Inspect the watch for any visible damage. The watch comes with one unknown battery included.



Box Supplied may be different from picture

Image: The black Timex watch box in which the product is supplied.

Initial Time and Date Setting

1. Pull out the crown (usually the central knob on the right side of the watch case) to the time-setting position.
2. Rotate the crown to set the correct time. Ensure to account for AM/PM if your watch has a 24-hour indicator or if setting the date.
3. Push the crown back in to the normal operating position.
4. To set the date, pull the crown out to the date-setting position (often a half-pull or a different position than time setting). Rotate the crown until the correct date is displayed.
5. Push the crown back in to the normal operating position.

OPERATING INSTRUCTIONS

Your Timex TW2W24200 watch features a unique fourth hand that drives the tide tracker, temperature sensor, and analog compass. Refer to the specific markings on your watch dial for these functions.



Image: Side view of the Timex TW2W24200 watch, highlighting the crowns and pushers located on the right side of the watch case, used for various functions.

Tide Tracker

The tide tracker function indicates the approximate time until the next high or low tide. This feature is calibrated based on standard tidal cycles. For precise local tide information, always consult official local tide charts.

- **Calibration:** To calibrate, set the tide hand to the current local tide (High or Low) using the designated pusher (refer to your watch's specific button layout).
- **Reading:** The tide hand will then move to indicate the approximate time remaining until the next high or low tide.

Temperature Sensor

The watch includes a temperature sensor. For accurate readings, remove the watch from your wrist for at least 5-10 minutes to allow it to acclimate to ambient air temperature, as body heat can affect the reading.

- **Activation:** Press the designated pusher for the temperature function (refer to your watch's specific button layout). The fourth hand will point to the current temperature on the dial's temperature scale (e.g., in Celsius or Fahrenheit).

Analog Compass

The analog compass function provides a directional reference. For accurate readings, ensure you are away from strong magnetic fields (e.g., large metal objects, electronics).

- **Activation:** Press the designated pusher for the compass function (refer to your watch's specific button layout). The fourth hand will point North.
- **Orientation:** Hold the watch flat and level. Rotate your body until the fourth hand aligns with the 'N' (North) marking on the bezel or dial. Other cardinal directions (E, S, W) will then be correctly oriented.

Luminescent Features

The hands and hour markers are treated with luminescent material, providing enhanced visibility in low-light conditions after exposure to light.

Water Resistance (100m)

Your watch is water-resistant up to 100 meters (330 feet). This makes it suitable for swimming, snorkeling, and showering. However, it is not recommended for scuba diving. Do not operate the pushers or crown while the watch is wet or submerged, as this can compromise the water resistance.

MAINTENANCE

Cleaning

Regularly clean your watch with a soft, damp cloth. For the silicone strap, mild soap and water can be used. Avoid harsh chemicals or abrasive materials that could damage the watch case or strap.



Image: Close-up view of the black silicone strap and buckle of the Timex TW2W24200 watch, illustrating its texture and fastening mechanism.

Battery Replacement

The watch operates on a quartz movement powered by a battery. When the watch stops or the second hand begins to jump erratically (indicating a low battery), it is time for a battery replacement. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

Strap Care

The silicone strap is durable but can be affected by prolonged exposure to direct sunlight, extreme temperatures, or certain chemicals. Clean it regularly and avoid stretching or twisting it excessively.

TROUBLESHOOTING

- Watch Not Running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- Incorrect Time/Date:** Refer to the 'Initial Time and Date Setting' section to reset.
- Sensor Inaccuracy (Tide/Temp/Compass):** Ensure proper calibration for tide, remove watch from wrist for temperature, and avoid magnetic interference for compass. If issues persist, a professional check may be required.
- Water Inside Watch:** If condensation or water appears inside the watch, immediately take it to a service center. Do not attempt to open it yourself.

SPECIFICATIONS

Feature	Detail
Model Number	TW2W24200
Movement	Analogue Quartz
Case Material	316L Stainless Steel
Strap Material	Silicone
Water Resistance	100 meters (WR 100M)
Functions	Tide Tracker, Temperature Sensor, Analog Compass, Date, Luminous Hands/Markers
Battery	1 Unknown battery (included)
Package Dimensions	15 x 10 x 10 cm
Weight	250 g



Image: Close-up view of the watch case back, displaying engravings such as 'Expedition North', 'WR 100M', and 'Stainless Steel', indicating product series and water resistance.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Timex website or contact your authorized Timex retailer. Keep your proof of purchase for warranty claims.

Related Documents - TW2W24200

	<p><u>Timex Analog Watch User Manual - Features, Settings, and Care</u></p> <p>Comprehensive user guide for Timex Analog watches, covering setup, features like INDIGLO® Night-Light, water resistance, alarms, perpetual calendar, and maintenance. Available in multiple languages.</p>
	<p><u>Timex Analog Watch User Manual</u></p> <p>This comprehensive user manual provides detailed instructions for operating and maintaining your Timex Analog watch. It covers setup, feature usage including INDIGLO® night-light and alarms, water resistance guidelines, bracelet adjustment, and warranty details.</p>
	<p><u>Timex Watch User Manual - Instructions and Guides</u></p> <p>Comprehensive user manual for Timex watches, providing detailed instructions, setup guides, and troubleshooting tips in multiple languages. Learn how to operate your Timex timepiece effectively.</p>
	<p><u>Timex Combination Watch User Manual and Instructions</u></p> <p>Comprehensive user manual for the Timex Combination Analog/Digital Watch, detailing features like INDIGLO night-light, various time modes, chronograph, countdown timer, second time zone, water resistance, and warranty information.</p>
	<p><u>Руководство по эксплуатации часов Timex</u></p> <p>Подробное руководство по эксплуатации часов Timex, охватывающее настройку времени, использование хронографа, водонепроницаемость, регулировку браслета и функции подсветки INDIGLO® для различных механизмов Timex.</p>
	<p><u>Timex Victory Sailing Watch Instruction Manual 704-095001</u></p> <p>Official instruction manual for the Timex Victory Sailing Watch (model 704-095001). Learn about its features, how to set time and calendar, use the chronograph, tide ring, race timer, tack ratio, and understand the limited warranty and service information.</p>