

Timex TW2W41700

Timex Expedition North TW2W41700 Quartz Analog Watch User Manual

Model: TW2W41700 | Brand: Timex

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Timex Expedition North TW2W41700 Quartz Analog Watch. Please read this manual thoroughly to ensure proper use and care of your timepiece.

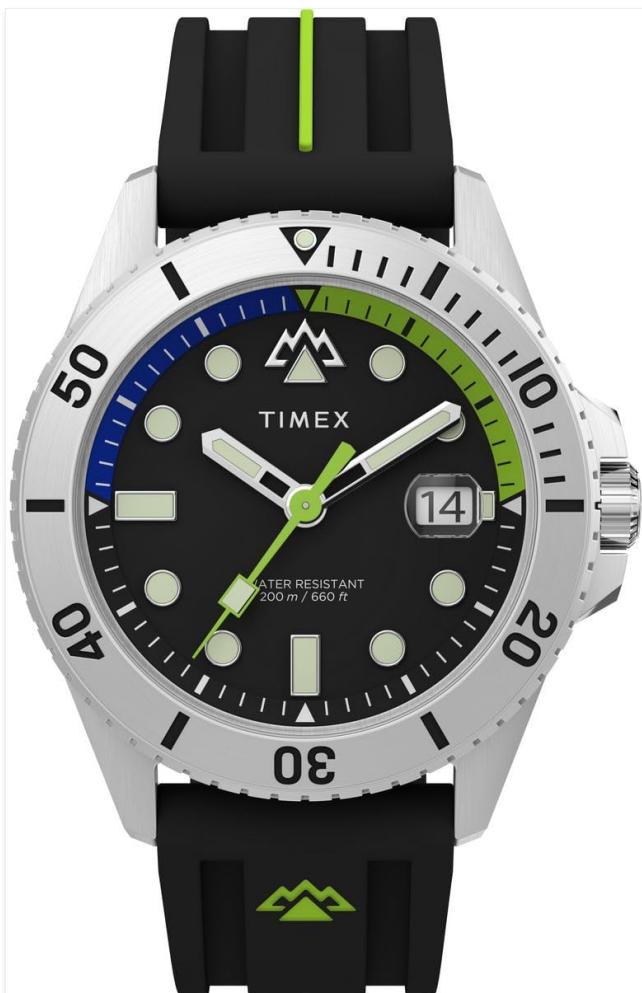


Image Description: A clear front view of the Timex Expedition North TW2W41700 watch. It features a black dial with a green and black mountain logo at the top. The dial has three sub-dials at the 3, 6, and 9 o'clock positions. The main dial features a date window at 3 o'clock showing '14'. The dial is surrounded by a blue and green bezel with a 60-minute scale. The watch has a stainless steel case and a black rubber strap with a green mountain logo at the clasp. The strap has a textured pattern and a small green mountain logo on the side. The watch is shown from a front-on perspective, slightly angled.

luminous hour markers and hands, a date window at 3 o'clock, and a silver-toned stainless steel case. The unidirectional rotating bezel has blue and lime green accents. The watch is fitted with a black silicone strap that has subtle green detailing.

PRODUCT OVERVIEW

The Timex Expedition North TW2W41700 is a robust 42mm stainless steel analog watch designed for durability and functionality. It features a scratch-resistant anti-reflective sapphire crystal with a date magnifier, luminous hands and markers, and a unidirectional ratcheting bezel for elapsed time tracking. The watch is equipped with a comfortable co-molded quick-release silicone strap.



Image Description: A side profile view of the Timex Expedition North TW2W41700 watch, highlighting its 12mm case thickness and the textured crown. The black silicone strap with its green inner lining is also visible, curving around.

SETUP AND INITIAL USE

Setting the Time

1. Pull the crown out to the second click position.
2. Rotate the crown to set the hour and minute hands to the correct time.
3. Push the crown back into the first click position.

Setting the Date

1. Pull the crown out to the first click position.
2. Rotate the crown clockwise or counter-clockwise (depending on the movement) to set the correct date.
3. Push the crown back into the closed position.

Note: Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism.

Wearing the Watch

Adjust the silicone strap to a comfortable fit on your wrist. The quick-release mechanism allows for easy strap changes if desired.



Image Description: A close-up shot of a person's wrist wearing the Timex Expedition North TW2W41700 watch. The watch is prominently displayed, showing its size and how it sits on the wrist, complementing casual attire.

OPERATING THE WATCH

Unidirectional Rotating Bezel

The watch features a unidirectional rotating bezel. This bezel can be rotated counter-clockwise to mark elapsed time. Align the triangle marker on the bezel with the minute hand at the start of an activity to track the duration.

Water Resistance

This watch is water-resistant up to 20 bars (200 meters / 660 feet). It is suitable for swimming, snorkeling, and recreational diving. Ensure the crown is fully pushed in before any water exposure.

***Caution:** Do not operate the crown or pushers while the watch is wet or submerged, as this can compromise water resistance.*

MAINTENANCE AND CARE

Cleaning

To clean your watch, wipe the case and strap with a soft, damp cloth. For the silicone strap, mild soap and water can be used. Rinse thoroughly and dry completely.

Battery Replacement

The watch is powered by a quartz movement requiring a battery. When the battery needs replacement, it is recommended to take the watch to an authorized Timex service center or a qualified watchmaker to ensure proper sealing and water resistance.

Storage

When not in use, store your watch in a cool, dry place, away from direct sunlight and extreme temperatures.



Image Description: A detailed view of the watch's black silicone strap and the silver-toned buckle. The Timex logo is subtly embossed on the buckle, and the texture of the silicone strap is clearly visible.



Image Description: A close-up of the watch's stainless steel case back. Engraved details include "EXPEDITION NORTH TIMEX" and "WATER RESISTANT 200M / 660FT", along with other manufacturing marks, confirming its robust design.

TROUBLESHOOTING

- **Watch Not Running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Date Not Changing:** Ensure the time is set correctly, especially distinguishing between AM and PM. If the date changes at noon, you may need to advance the time by 12 hours.
- **Condensation Under Crystal:** This may indicate a loss of water resistance. Avoid further water exposure and have the watch inspected by a qualified technician.

SPECIFICATIONS

Model Number	TW2W41700
Case Diameter	42 mm
Case Thickness	12 mm
Case Material	Stainless Steel
Dial Color	Black
Strap Material	Silicone
Strap Length	21 cm
Strap Width	21 mm
Crystal	Anti-reflective Sapphire
Movement	Quartz Analog
Water Resistance	20 Bar (200 meters / 660 feet)
Weight	140 g

WARRANTY AND SUPPORT

Your Timex Expedition North TW2W41700 watch comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

For service or support, please contact Timex customer service or visit an authorized Timex service center. The watch is delivered in its original gift box.



Image Description: The black gift box for the Timex Expedition North watch, featuring a distinctive green mountain range graphic and the "EXPEDITION NORTH TIMEX" logo on the lid.

© 2024 Timex. All rights reserved.