

Timex TW5M59100

Timex UFC Rush 52mm Digital Watch Instruction Manual

Model: TW5M59100

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Timex UFC Rush 52mm Digital Watch. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your timepiece.



Image 1: Front view of the Timex UFC Rush 52mm Digital Watch, displaying the digital time, day, and date, with "TIMEX" and "UFC" logos visible. The watch features a black case with red accents and a black strap.

WATCH COMPONENTS

Familiarize yourself with the main components and buttons of your watch:

- **Display:** Digital screen showing time, date, and various function indicators.
- **Mode Button:** Cycles through different watch modes (Time, Stopwatch, Timer, Alarm, Dual Time).
- **ST/STP (Start/Stop) Button:** Used to start and stop functions like the stopwatch or timer, and to

adjust settings.

- **RESET Button:** Resets functions and is used for setting adjustments.
- **INDIGLO Button:** Activates the Indiglo night-light for illumination.



Image 2: Side view of the Timex UFC Rush 52mm Digital Watch, highlighting the buttons on the side of the watch case. These buttons are used for mode selection, starting/stopping functions, resetting, and activating the Indiglo light.

SETUP

Initial Time and Date Setting

1. In Time mode, press and hold the **MODE** button until the display flashes, indicating setting mode.
2. Press the **ST/STP** button to advance the flashing digit (e.g., hours).
3. Press the **RESET** button to move to the next setting (e.g., minutes, seconds, month, day, year).
4. Repeat steps 2 and 3 until all desired settings are adjusted.
5. Press the **MODE** button again to exit setting mode.

Strap Adjustment

The watch features a polyurethane strap designed to fit wrist sizes from 150 mm to 205 mm. Adjust the buckle to achieve a comfortable and secure fit on your wrist.

OPERATING INSTRUCTIONS

Time Mode

The default display shows the current time, day, and date. Press the **INDIGLO** button to illuminate the display in low-light conditions.

Stopwatch Function

1. Press the **MODE** button repeatedly until "STW" or "STOPWATCH" appears on the display.
2. Press the **ST/STP** button to start the stopwatch.
3. Press the **ST/STP** button again to pause the stopwatch.
4. Press the **RESET** button to clear the stopwatch to zero.
5. To resume timing after pausing, press **ST/STP**.

Countdown Timer Function

1. Press the **MODE** button repeatedly until "TMR" or "TIMER" appears.
2. To set the timer, press and hold the **RESET** button until the digits flash.
3. Use **ST/STP** to adjust the flashing digit and **MODE** to move between hours, minutes, and seconds.
4. Once set, press **RESET** to confirm.
5. Press **ST/STP** to start the countdown.
6. Press **ST/STP** again to pause; press **RESET** to reset the timer.

Alarm Function

1. Press the **MODE** button repeatedly until "ALM" or "ALARM" appears.
2. Press and hold the **RESET** button until the alarm time digits flash.
3. Use **ST/STP** to adjust the flashing digit and **MODE** to move between hours and minutes.
4. Press **RESET** to confirm the alarm time.
5. To activate/deactivate the alarm, press **ST/STP** while in Alarm mode. An alarm icon will appear/disappear.

Dual Time Function

This feature allows you to track a second time zone.

1. Press the **MODE** button repeatedly until "T2" or "DUAL TIME" appears.
2. Press and hold the **RESET** button until the digits flash.
3. Use **ST/STP** to adjust the flashing digit and **MODE** to move between hours and minutes for the second time zone.
4. Press **RESET** to confirm the dual time setting.

MAINTENANCE

Water Resistance

Your Timex UFC Rush watch is water-resistant to 100 meters (330 feet). This rating means it is suitable for

showering, swimming, and snorkeling. It is **not** suitable for scuba diving or high-impact water sports where water pressure may exceed the rating.

- Do not operate buttons underwater.
- Avoid exposing the watch to extreme temperature changes, which can compromise water seals.
- After exposure to saltwater, rinse the watch with fresh water and dry thoroughly.

Cleaning

Clean your watch regularly with a soft, damp cloth. For the strap, mild soap and water can be used, then rinse thoroughly. Avoid harsh chemicals or abrasive materials.

Battery Replacement

The watch uses one CR2025 battery (included). When the display dims or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance integrity.



Image 3: Close-up view of the stainless steel back of the Timex UFC Rush watch, showing engraved details such as "UFC TIMEX", "WR 100M", "STAINLESS STEEL BACK", and "CR2025 CELL". This indicates the battery type and water resistance rating.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace battery (refer to Battery Replacement section).
Buttons are unresponsive.	Temporary software glitch or watch is in a locked mode.	Try pressing all buttons firmly. If issue persists, allow the battery to drain completely and replace, or consult a technician.

Problem	Possible Cause	Solution
Time/Date is incorrect.	Incorrect setting or battery interruption.	Reset time and date according to "Initial Time and Date Setting" instructions.

SPECIFICATIONS




- **Model Number:** TW5M591006B
- **Case Diameter:** 52 mm
- **Case Material:** Black Resin
- **Strap Material:** Black Polyurethane
- **Wrist Fit:** 150 mm to 205 mm
- **Display Type:** Digital
- **Crystal Material:** Acrylic
- **Water Resistance:** 100 meters (330 feet)
- **Functions:** Day-date calendar, Stopwatch, Countdown Timer, Dual Time, Alarm, Indiglo Light
- **Battery:** 1 x CR2025 (included)
- **Product Dimensions:** 4 x 10 x 6 cm
- **Weight:** 143 grams
- **Country of Origin:** Philippines




WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Timex website or the warranty card included with your purchase. Keep your proof of purchase for warranty claims.

For further assistance, you may visit the [Timex Customer Service](#) page.

Related Documents - TW5M59100

	<p>Timex UFC Kick Digital Watch Operating Instructions</p> <p>Comprehensive operating instructions for the Timex UFC Kick Digital watch, covering features, modes, stopwatch, alarm, time/date settings, and battery replacement.</p>
	<p>Timex Digital Watch User Manual and Battery Safety Guide</p> <p>Comprehensive user manual for the Timex Digital Watch, detailing operation of time, stopwatch, countdown timer, and alarm functions. Includes essential battery safety warnings, handling instructions, and replacement guidelines.</p>
	<p>Руководство по эксплуатации часов Timex</p> <p>Подробное руководство по эксплуатации часов Timex, охватывающее настройку времени, использование хронографа, водонепроницаемость, регулировку браслета и функции подсветки INDIGLO® для различных механизмов Timex.</p>

	<p>Timex Analog Watch User Manual - Features, Settings, and Care</p> <p>Comprehensive user guide for Timex Analog watches, covering setup, features like INDIGLO® Night-Light, water resistance, alarms, perpetual calendar, and maintenance. Available in multiple languages.</p>
	<p>Timex Kids Digital Watch User Guide - Operation and Features</p> <p>Comprehensive user guide for the Timex Kids digital watch (model 791-095007). Covers features, basic operations, setting time and date, chronograph, alarm, timer, INDIGLO night light, water resistance, strap adjustments, battery information, and warranty details.</p>
	<p>Timex Atelier Marine M1a User Manual and International Warranty</p> <p>Comprehensive user manual and international warranty details for the Timex Atelier Marine M1a watch. Includes product specifications, instructions for setting the time and adjusting the bracelet, and warranty coverage information.</p>