

[Manuals.plus](#) /

› [Starfrit](#) /

› Starfrit 10-Cup Coffee Maker Instruction Manual

## Starfrit 024043-004-0000

# Starfrit 10-Cup Coffee Maker Instruction Manual

Model: 024043-004-0000

## IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using your Starfrit 10-Cup Coffee Maker. Keep this manual for future reference.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The glass carafe is designed for use with this appliance only. It must never be used on a range top.
- Do not place a hot carafe on a cold or wet surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.
- This appliance has a built-in boil-dry protection feature for enhanced safety.

## PRODUCT OVERVIEW

---

The Starfrit 10-Cup Coffee Maker is designed for ease of use and consistent coffee brewing. It features a modern design with plastic housing and metal accents, a reusable filter basket, and a keep-warm function.



Front view of the Starfrit 10-Cup Coffee Maker in grey, showcasing its sleek design and glass carafe.



**12.6" /  
32,0 cm**

**10.2" /  
26,0 cm**

**6.5" /  
16,5 cm**

The coffee maker with its approximate dimensions: 12.6 inches (32.0 cm) height, 10.2 inches (26.0 cm) depth, and 6.5 inches (16.5 cm) width.

# FUNCTIONS FONCTIONS



**ON/OFF SWITCH WITH  
INDICATOR LIGHT  
INTERRUPTEUR LUMINEUX  
MARCHE/ARRÊT**



**REUSABLE DISHWASHER  
SAFE FILTER BASKET AND  
HOLDER  
FILTRE ET PORTE-FILTRE  
RÉUTILISABLES ALLANT AU  
LAVE-VAISSELLE**



**WATER LEVEL WINDOW  
INDICATEUR DU NIVEAU  
D'EAU**



**AUTOMATICALLY SHUTS  
OFF  
S'ÉTEINT  
AUTOMATIQUEMENT**



**KEEPS COFFEE HOT  
MAINTIENT LA CHALEUR DU  
CAFÉ**

An illustration highlighting the key functions: the On/Off switch with indicator light, the reusable dishwasher-safe filter basket and holder, the water level window, the automatic shut-off feature, and the keep-warm function.

## Components:

- Main Unit with Heating Plate
- Water Reservoir with Water Level Window
- Lid
- Filter Basket (removable)
- Reusable Filter
- Glass Carafe with Handle
- On/Off Switch with Indicator Light

## SETUP AND FIRST USE

---

## Before First Use:

1. Unpack the coffee maker and remove all packaging materials.
2. Wash the glass carafe, reusable filter, and removable filter basket in warm, soapy water. Rinse thoroughly and dry. These parts are also dishwasher-safe.
3. Wipe the exterior of the coffee maker with a damp cloth.
4. Place the coffee maker on a flat, stable, heat-resistant surface, away from the edge of the counter.
5. For the first use, it is recommended to run a full cycle with only water to clean the internal components. Fill the water reservoir to the MAX line, place the empty filter basket and carafe in position, and turn on the appliance. Discard the water after the cycle.

## OPERATING INSTRUCTIONS

---

### Brewing Coffee:

1. Open the lid of the coffee maker.
2. Fill the glass carafe with the desired amount of fresh, cold water. Refer to the water level window on the side of the coffee maker for guidance (up to 10 cups).
3. Pour the water from the carafe into the water reservoir.
4. Place the reusable filter into the removable filter basket.
5. Add the desired amount of ground coffee into the reusable filter. A general guideline is one tablespoon of ground coffee per cup, but adjust to your taste.
6. Insert the filter basket with the coffee into its designated slot and close the lid securely.
7. Place the empty glass carafe onto the heating plate. Ensure it is properly seated to activate the drip-stop mechanism.
8. Plug the power cord into a standard electrical outlet.
9. Press the On/Off switch. The indicator light will illuminate, indicating that the brewing process has started.
10. Once brewing is complete, the coffee maker will automatically switch to the keep-warm function. The indicator light will remain on.
11. The coffee maker will automatically shut off after approximately 40 minutes to conserve energy and for safety.



A hand demonstrating the placement of the reusable filter into the filter basket of the coffee maker.

### **Keep Warm Function:**

After brewing, the heating plate will keep the coffee warm for approximately 40 minutes. This ensures your coffee remains at an optimal serving temperature. The appliance will then automatically shut off.

## **MAINTENANCE AND CLEANING**

---

Regular cleaning helps maintain the performance and longevity of your coffee maker.

### **Daily Cleaning:**

1. Always unplug the coffee maker and allow it to cool completely before cleaning.

2. Remove the glass carafe, reusable filter, and filter basket. Discard used coffee grounds.
3. Wash the carafe, reusable filter, and filter basket in warm, soapy water. Rinse thoroughly. These parts are dishwasher-safe (top rack recommended).
4. Wipe the exterior of the coffee maker and the heating plate with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
5. Do not immerse the main unit in water or any other liquid.

## **PLASTIC DRIP COFFEE MAKER WITH WATER LEVEL (BPA FREE) AUTOMATIC SHUT-OFF AND BOIL-DRY SAFETY FEATURES**

**CAFETIÈRE EN PLASTIQUE AVEC INDICATEUR DE  
NIVEAU D'EAU (SANS BPA), ARRÊT AUTOMATIQUE  
ET DISPOSITIF SÉCURITAIRE AUTI-CHAUFFAGE À  
SEC**



The Starfrit coffee maker with its removable filter basket and reusable filter detached, illustrating ease of cleaning.

### **Descaling (Mineral Deposit Removal):**

Mineral deposits (calcium) can build up in your coffee maker over time, affecting its performance. Descale your coffee maker every 2-3 months, or more frequently if you have hard water.

1. Fill the water reservoir with a mixture of white vinegar and cold water (1 part vinegar to 2 parts water). Do not exceed the MAX fill line.
2. Place the empty filter basket (without coffee or filter) and the empty carafe in position.
3. Turn on the coffee maker and let it complete half of a brewing cycle.
4. Turn off the coffee maker and let it soak for at least 15 minutes to allow the vinegar solution to work on the deposits.
5. Turn the coffee maker back on and let it complete the remaining brewing cycle.
6. Discard the vinegar solution from the carafe.
7. Run 2-3 full cycles with fresh, cold water only to rinse out any remaining vinegar smell or taste.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	Appliance not plugged in. Power switch is off. Water reservoir is empty. Carafe not properly placed on heating plate.	Ensure the power cord is securely plugged into a working outlet. Press the On/Off switch to turn on the appliance. Fill the water reservoir with fresh, cold water. Ensure the carafe is correctly positioned on the heating plate, activating the drip-stop.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio. Coffee grind size is too coarse/fine.	Adjust the amount of ground coffee to your preference. Use a medium grind for drip coffee makers.
Coffee overflows from filter basket.	Too much coffee grounds. Filter basket not properly seated. Mineral buildup in the coffee maker.	Reduce the amount of coffee grounds. Ensure the filter basket is securely in place. Perform a descaling cycle.
Coffee is not hot enough.	Appliance has automatically shut off. Mineral buildup.	The coffee maker automatically shuts off after approximately 40 minutes. Brew fresh coffee for optimal temperature. Perform a descaling cycle.

## SPECIFICATIONS

<b>Brand</b>	Starfrit
<b>Model Number</b>	024043-004-0000
<b>Colour</b>	Grey
<b>Product Dimensions</b>	16 x 26 x 32 cm (approximately 6.3 x 10.2 x 12.6 inches)
<b>Capacity</b>	10 Cups
<b>Power/Wattage</b>	900 watts
<b>Material</b>	Plastic with metal accent

<b>Special Features</b>	Reusable filter basket, Built-in boil-dry protection, Keep warm function
<b>Item Weight</b>	1.59 kg (approximately 3.5 lbs)

## WARRANTY AND SUPPORT

---

For warranty information, product registration, or customer support, please refer to the official Starfrit website or contact their customer service department. Keep your proof of purchase for warranty claims.

You can visit the official Starfrit store on Amazon for more information: [Starfrit Store](#)