

[manuals.plus](#) /› [Courant](#) /› [Courant CRC-0310R 6-Cup Rice Cooker Instruction Manual](#)

## Courant CRC-0310R

# Courant CRC-0310R 6-Cup Rice Cooker Instruction Manual

Model: CRC-0310R

## INTRODUCTION

Thank you for purchasing the Courant CRC-0310R 6-Cup Rice Cooker. This appliance is designed to simplify your cooking process, providing perfectly cooked rice with minimal effort. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

## PRODUCT OVERVIEW

### Components

Your Courant Rice Cooker includes the following components:

- Rice Cooker Base Unit
- Removable Non-Stick Cooking Bowl
- Tempered Glass Lid with Built-in Lid Holder
- Measuring Cup
- Rice Paddle

## Key Features



Figure 1: Front view of the Courant CRC-0310R Rice Cooker, showcasing its compact design and control panel.

- **6-Cup Capacity:** Cooks up to 3 cups of uncooked rice, yielding 6 cups of cooked rice.
- **One-Touch Operation:** Simple control for cooking.
- **Automatic Keep Warm Function:** Switches to keep warm mode after cooking is complete.
- **Cook & Keep Warm Indicator Lights:** Clearly shows the current operating mode.
- **Removable Non-Stick Cooking Bowl:** Features precise measuring lines for convenience.
- **Easy-View Tempered Glass Lid:** Allows monitoring of cooking progress.
- **Steam Vent:** Ensures even heat distribution and prevents overflow.

- **Built-In Lid Holder:** Practical solution for lid storage during serving or stirring.

# KEY FEATURES



**Figure 2:** Diagram illustrating the key components and features of the rice cooker, including the tempered glass lid, steam vent, removable cooking bowl, built-in lid holder, and indicator lights.



## BUILT-IN LID HOLDER

Practical solution to keep the spoon & the lid secure,  
saves counter space.

**Figure 3:** The rice cooker in a kitchen setting, demonstrating the built-in lid holder feature, which provides a convenient place to rest the lid and rice paddle.

### SETUP

- Unpack:** Carefully remove all packaging materials and accessories.
- Clean:** Before first use, wash the removable non-stick cooking bowl, tempered glass lid, measuring cup, and rice paddle in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the rice cooker base unit with a damp cloth. Do not immerse the base unit in water.
- Placement:** Place the rice cooker on a stable, level, heat-resistant surface, away from water and heat sources. Ensure adequate ventilation around the unit.

### OPERATING INSTRUCTIONS

#### Cooking Rice

- Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. One full measuring cup typically holds about 180ml of uncooked rice.
- Rinse Rice (Optional):** Rinse the rice under cold water until the water runs clear. This helps remove excess starch.
- Add Rice to Bowl:** Place the rinsed rice into the removable non-stick cooking bowl.
- Add Water:** Add the appropriate amount of water. The cooking bowl has internal measuring lines for guidance. A general ratio is 1 cup of uncooked rice to 1.5-2 cups of water, but this can vary based on rice type and desired consistency.
- Insert Bowl:** Place the cooking bowl into the rice cooker base unit, ensuring it is seated properly.
- Close Lid:** Place the tempered glass lid securely on the cooking bowl.
- Plug In:** Plug the power cord into a standard electrical outlet. The "WARM" indicator light may illuminate.
- Start Cooking:** Press the "COOK" switch down. The "COOK" indicator light will illuminate, indicating that cooking has begun.
- Automatic Keep Warm:** Once the rice is cooked (typically 30-40 minutes), the rice cooker will automatically switch to the "WARM" function. The "COOK" light will turn off, and the "WARM" light will illuminate.
- Resting Period:** For best results, allow the rice to rest on "WARM" for 5-10 minutes after cooking is complete. This allows the rice to absorb any remaining moisture and become fluffier.
- Serve:** Use the provided rice paddle to fluff and serve the rice.
- Unplug:** Always unplug the rice cooker from the outlet when not in use.

## 6 Cup Capacity

Cook up to 3 cups uncooked rice to yield 6 cups of fluffy cooked rice



Figure 4: Visual representation of the 6-cup capacity, demonstrating how 3 cups of uncooked rice yield 6 cups of fluffy cooked rice.

# EASY TO USE

One Touch Operation With Automatic Keep Warm Function



## COOK

One-Touch button makes cooking easier and so much faster.



## WARM

After cooking is completed, the rice cooker automatically switches to the keep-warm function to keep the rice warm.

Figure 5: Detailed view of the one-touch control panel, highlighting the "COOK" and "WARM" indicator lights and the simple switch operation.

## CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your rice cooker.

- Unplug and Cool:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
- Wash Removable Parts:** The removable non-stick cooking bowl, tempered glass lid, measuring cup, and rice paddle can be washed in warm, soapy water. Rinse thoroughly and dry completely. Do not use abrasive cleaners or metal scouring pads, as these can damage the non-stick coating.
- Clean Base Unit:** Wipe the exterior of the rice cooker base unit with a damp cloth. Do not immerse the base unit in water or any other liquid.
- Storage:** Ensure all parts are clean and dry before storing. Store the rice cooker in a cool, dry place.

**Product Care Instruction:** Hand Wash for removable parts.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Rice is too dry or hard.	Not enough water; lid not sealed properly; rice not allowed to rest.	Ensure correct water-to-rice ratio. Check lid for proper seating. Allow rice to rest on "WARM" for 5-10 minutes after cooking.
Rice is too wet or mushy.	Too much water; rice not rinsed (for some types).	Reduce water slightly for next batch. Rinse rice thoroughly before cooking.
Cooker does not turn on.	Not plugged in; power outage; faulty outlet.	Check if the power cord is securely plugged into a working outlet. Verify power supply.
Rice sticks to the bottom of the bowl.	Insufficient water; bowl not properly cleaned; prolonged "WARM" time.	Ensure adequate water. Clean the non-stick bowl thoroughly. Avoid leaving rice on "WARM" for excessively long periods.

## SPECIFICATIONS

- Model:** CRC-0310R
- Capacity:** 6 Cups (cooked rice) / 3 Cups (uncooked rice)
- Voltage:** 110 Volts
- Power Source:** Corded Electric
- Material:** Aluminum (cooking bowl), Glass (lid)
- Product Dimensions (WxDxH):** 9.92" x 8.07" x 8.19"
- Item Weight:** 2.65 Pounds
- Special Features:** Automatic Keep Warm, Non-Stick, One-Touch Operation, Removable Bowl, Steam Vent, Built-In Lid Holder
- Included Components:** Measuring Cup, Rice Paddle

## WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the warranty card included with your product or contact Courant customer service directly. Please have your model number (CRC-0310R) and purchase details ready when contacting support.

For further assistance, visit the official Courant website or contact their customer support channels.