

EOS ELL15I

EOS ELL15I 15-Place Setting Inox Dishwasher User Manual

Model: ELL15I

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new EOS ELL15I 15-Place Setting Inox Dishwasher. Please read all instructions carefully before using the appliance and retain this manual for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This dishwasher is intended for household use only.

- Ensure the appliance is properly grounded.
- Do not operate the dishwasher if it is damaged.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Do not touch the heating element during or immediately after use.
- Sharp items should be loaded with points down to prevent injury.
- Disconnect the power supply before performing any maintenance or cleaning.

3. PRODUCT OVERVIEW

The EOS ELL15I dishwasher is designed for efficient and quiet dishwashing, accommodating up to 15 place settings. It features multiple wash programs and a digital display for user convenience.

Key Features:

- **15 Place Setting Capacity:** Designed to wash dishes for up to 15 people simultaneously.

- **Efficient Cleaning:** Equipped with three water spray arms for thorough and complete cleaning.
- **7 Washing Programs:** Offers a variety of cycles to suit different cleaning needs.
- **Timer Function:** Allows scheduling the wash cycle to start up to 9 hours in advance.
- **Quiet Operation:** Operates at a low noise level of 49dB(A).
- **Digital Display:** Provides information on remaining wash time.
- **Inox Finish:** Stainless steel design for durability and aesthetics.

Dishwasher Components:

Below are images illustrating the exterior and interior of the EOS ELL15I dishwasher, highlighting its design and internal racks.



Image 3.1: Front and side view of the EOS ELL15I dishwasher, showcasing its stainless steel finish and integrated handle.



Image 3.2: Interior view of the EOS ELL15I dishwasher with the door open, showing the upper and lower racks, and cutlery basket.



Image 3.3: Detailed view of the lower rack inside the EOS ELL15I dishwasher, designed for larger plates and bowls.

4. SETUP AND INSTALLATION

The EOS ELL15I is a built-in dishwasher. Professional installation is recommended to ensure proper electrical and plumbing connections.

4.1. Site Preparation:

- Ensure the installation area meets the specified dimensions.
- Verify access to a grounded 220V electrical outlet.
- Confirm availability of hot water supply and a drain connection.

4.2. Dimensions:

Refer to the diagram below for precise product dimensions to ensure proper fit within your cabinetry.



Image 4.1: Diagram showing the dimensions of the EOS ELL15I dishwasher: 82cm height, 59.6cm width, and 56cm depth.

4.3. Initial Use:

- Before the first wash, ensure the salt reservoir (if applicable) is filled and rinse aid dispenser is topped up.
- Run an empty cycle with dishwasher detergent to clean the interior.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and available wash programs for optimal dishwashing results.

5.1. Control Panel:

The control panel typically includes a digital display, program selection buttons, and function buttons (e.g., Timer, Start/Pause).

5.2. Loading the Dishwasher:

- Scrape off large food particles before loading.
- Place larger items in the lower rack and smaller, delicate items in the upper rack.
- Ensure spray arms can rotate freely.
- Load cutlery into the designated basket with handles down for safety and better cleaning.

5.3. Washing Programs:

Select the appropriate program based on the soil level and type of dishes.

Program	Temperature	Description
Intense	60°C	For heavily soiled dishes, pots, and pans. Includes triple rinse for deep cleaning.
Eco	Variable	Energy and water-efficient program for normally soiled dishes.
Light	45°C	Gentle wash for delicate items and lightly soiled dishes, avoiding high temperatures.
60min	Variable	For daily use dishes with normal or light soil.
Quick	Variable	Fast cycle for lightly soiled dishes that do not require drying.
Pre-Rinse	Cold	To remove odors and heavy soil from dishes that will be washed later.
Crystal	Variable	Suitable for lightly soiled items such as plates, glasses, bowls, and light pans.

5.4. Special Functions:

- **Timer Function:** Allows you to delay the start of a wash cycle by up to 9 hours. Press the Timer button to set the desired delay.
- **Child Lock:** This option provides protection, preventing unintended operation by children. Refer to the control panel for activation instructions.



15 serviços



LIMPEZA MAIS EFICIENTE

Três borrifadores de água para uma melhor lavagem



7 PROGRAMAS DE LAVAGEM

Se adapta perfeitamente às suas necessidades



MAIS SEGURO

Opção de "Bloqueio para crianças"



FUNÇÃO TIMER

Permite programar o início do ciclo em até 9 horas

Image 5.1: Graphic highlighting key features: 15 place settings, efficient cleaning with three sprayers, 7 wash programs, child lock option, and timer function.



Image 5.2: Graphic illustrating additional features: clean inox design, quiet operation (49dB(A)), and water-saving economy compared to manual washing.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

6.1. Cleaning the Filters:

- The filter system prevents larger food particles from reaching the pump.
- Clean the filters regularly (e.g., weekly) by removing them, rinsing under running water, and brushing off any debris.
- Reassemble the filters correctly before operating the dishwasher.

6.2. Cleaning the Spray Arms:

- Periodically check the spray arm nozzles for blockages.
- Remove the spray arms and clear any clogged holes with a thin object like a toothpick.

6.3. Exterior and Interior Cleaning:

- Wipe the exterior with a soft, damp cloth. For stainless steel, use a specialized stainless steel cleaner.
- Clean the interior with a dishwasher cleaner or a mixture of vinegar and baking soda to remove mineral deposits and odors.

7. TROUBLESHOOTING

Before contacting customer service, consult the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press start.
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, dirty filters.	Reload dishes correctly, clean spray arms and filters, use adequate detergent.
Water not draining	Clogged drain hose or filter, drain pump malfunction.	Clean filters, check drain hose for kinks or blockages.
Excessive noise	Dishes interfering with spray arms, foreign object in pump, improper installation.	Rearrange dishes, inspect for foreign objects, verify level installation.
Water leaks	Improper door seal, loose hose connections, excessive suds.	Check door seal, tighten hose connections, use correct detergent amount.

8. SPECIFICATIONS

Technical details for the EOS ELL15I Dishwasher.

Specification	Detail
Model	ELL15I
Brand	EOS
Color	Inox
Material	Stainless Steel
Finish Type	Inox
Form Factor	Built-in
Product Weight	46 Kilograms
Voltage	220 Volts
Number of Programs	7

Specification	Detail
Product Dimensions (DxWxH)	56 x 59.6 x 82 cm
Installation Type	Built-in
Capacity (Place Settings)	15

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact EOS customer support. Keep your proof of purchase for warranty claims.

Customer Support:

If you encounter issues not covered in the troubleshooting section or require technical assistance, please contact EOS customer support through their official website or the contact details provided in your product documentation.