

[Manuals.plus](#) /

> [Balay](#) /

> Balay 3VF304NP Integrated Dishwasher User Manual

Balay 3VF304NP

Balay 3VF304NP Integrated Dishwasher User Manual

Model: 3VF304NP

1. INTRODUCTION

Thank you for choosing the Balay 3VF304NP Integrated Dishwasher. This appliance is designed for efficient and quiet dishwashing, offering convenience with its 12 place settings capacity and specialized programs. Please read this manual carefully to ensure proper installation, operation, and maintenance, maximizing the lifespan and performance of your dishwasher.



This image shows the Balay 3VF304NP integrated dishwasher, designed to blend perfectly with your kitchen cabinetry when closed.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent accidents and ensure safe operation of the appliance:

- Read all instructions before using the dishwasher.
- Ensure the appliance is properly grounded.
- Do not allow children to operate or play with the dishwasher.
- Use only detergents and rinse aids specifically designed for dishwashers.
- The AquaStop system provides protection against water leaks by incorporating a double water inlet hose. In case of a fault, water remains within the hose, preventing damage to your home.
- Never open the dishwasher door during operation, especially during the hot wash cycle.

3. SETUP AND INSTALLATION

Proper installation is crucial for the dishwasher's performance and safety. It is recommended that installation be performed by a qualified technician.

3.1 Unpacking

- Remove all packaging materials.
- Inspect the dishwasher for any transport damage.

3.2 Placement and Leveling

- Place the dishwasher on a stable, level surface.
- Adjust the feet to ensure the appliance is perfectly level.

3.3 Water Connection

- Connect the water inlet hose to a cold water supply with a minimum pressure of 0.05 MPa (0.5 bar) and a maximum of 1 MPa (10 bar).
- Ensure the drain hose is properly connected to a suitable drain, preventing kinks or blockages. The inlet hose length is 165 cm, and the outlet hose length is 190 cm.


3.4 Electrical Connection

- Connect the dishwasher to a properly grounded electrical outlet (230 Volts).
- Do not use extension cords or multiple adapters.

3.5 Cabinet Integration

The dishwasher is designed for full integration into a standard 60 cm wide cabinet. The dimensions of the appliance are 81.5 cm (height) x 59.8 cm (width) x 55 cm (depth). The furniture door is not included.

dimensiones en mm

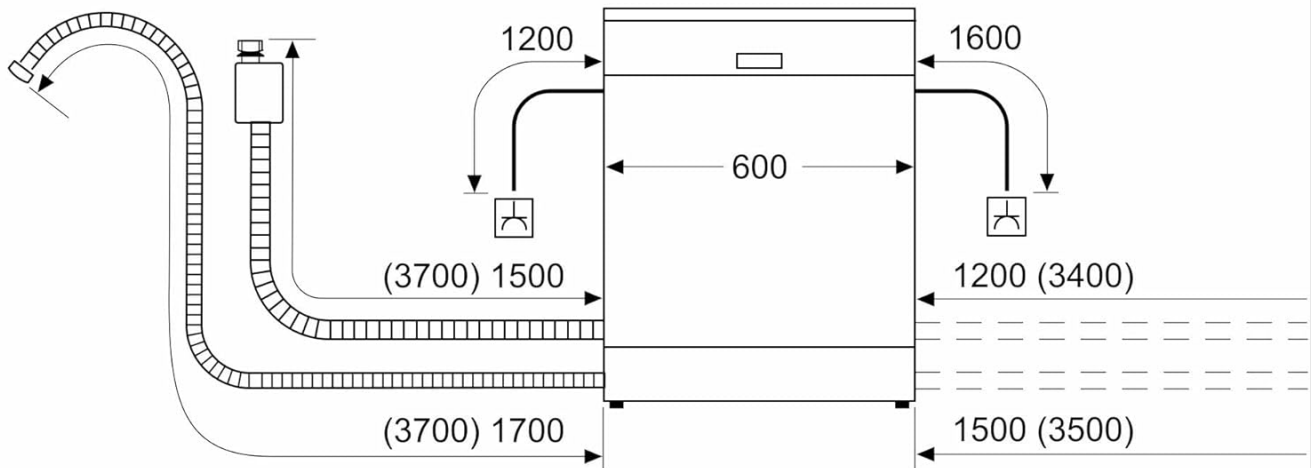

⚡ enchufe

() valores con juego de prolongación


This diagram illustrates the precise measurements and connection points required for proper installation of the dishwasher, including water inlet, outlet, and electrical connections.

4. OPERATING INSTRUCTIONS

Follow these steps for effective and efficient dishwashing.

4.1 Control Panel Overview

 The control panel allows you to select programs and monitor the wash cycle.

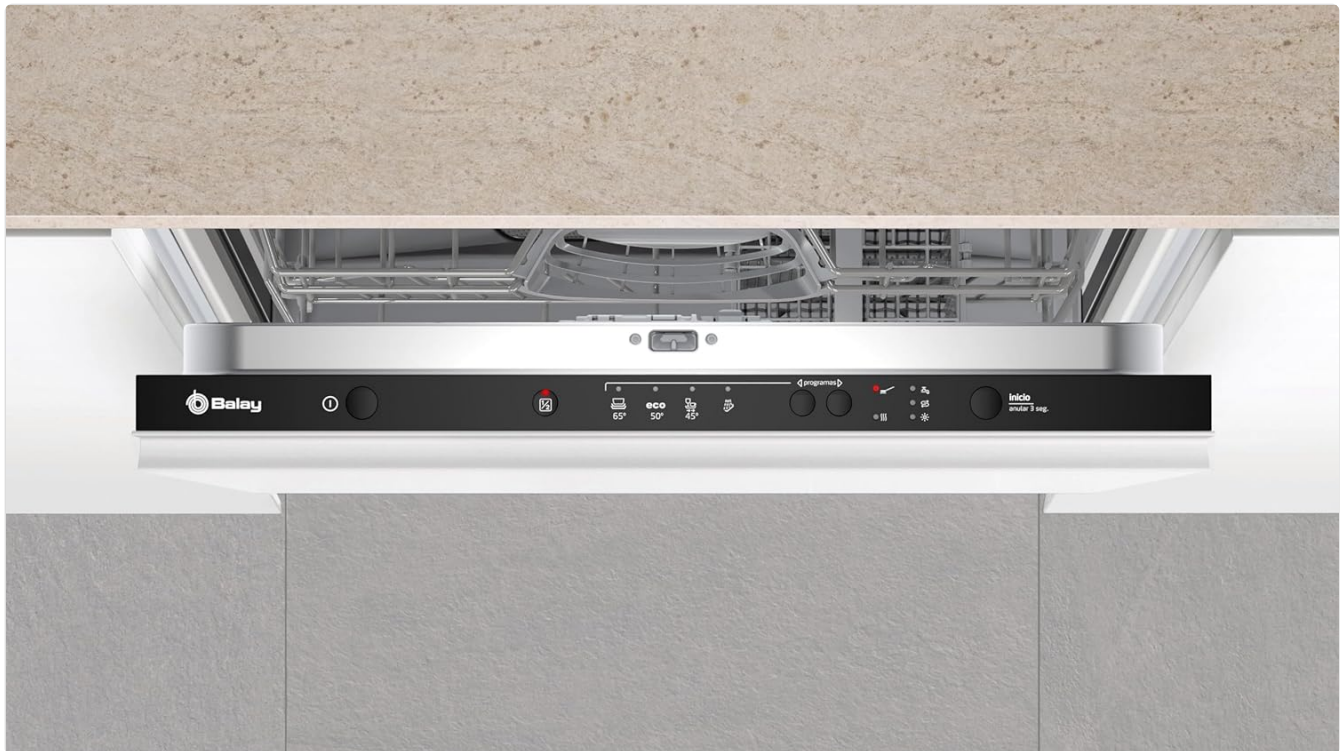


The control panel provides access to various wash programs and settings, including quick wash and half load options.


4.2 Loading the Dishwasher

- Scrape off large food particles from dishes before loading.

- Place glasses, cups, and smaller items in the upper rack.
- Arrange plates, bowls, and larger items in the lower rack.
- Place cutlery in the designated cutlery basket, ensuring items are separated to allow water to reach all surfaces.

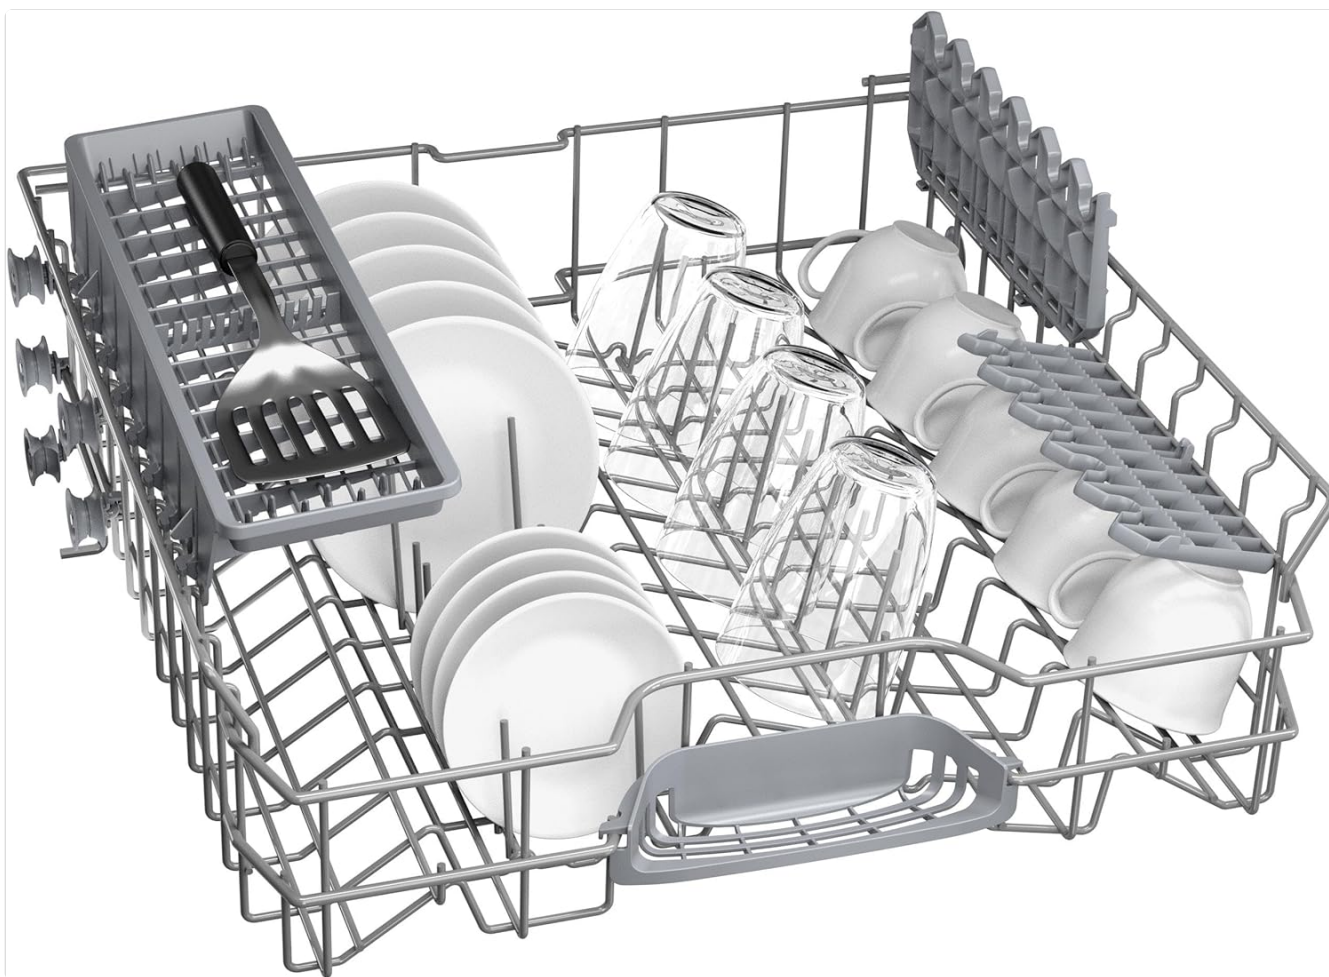

The adjustable upper rack is designed to accommodate various sizes of glassware, cups, and small dishes, ensuring thorough cleaning.

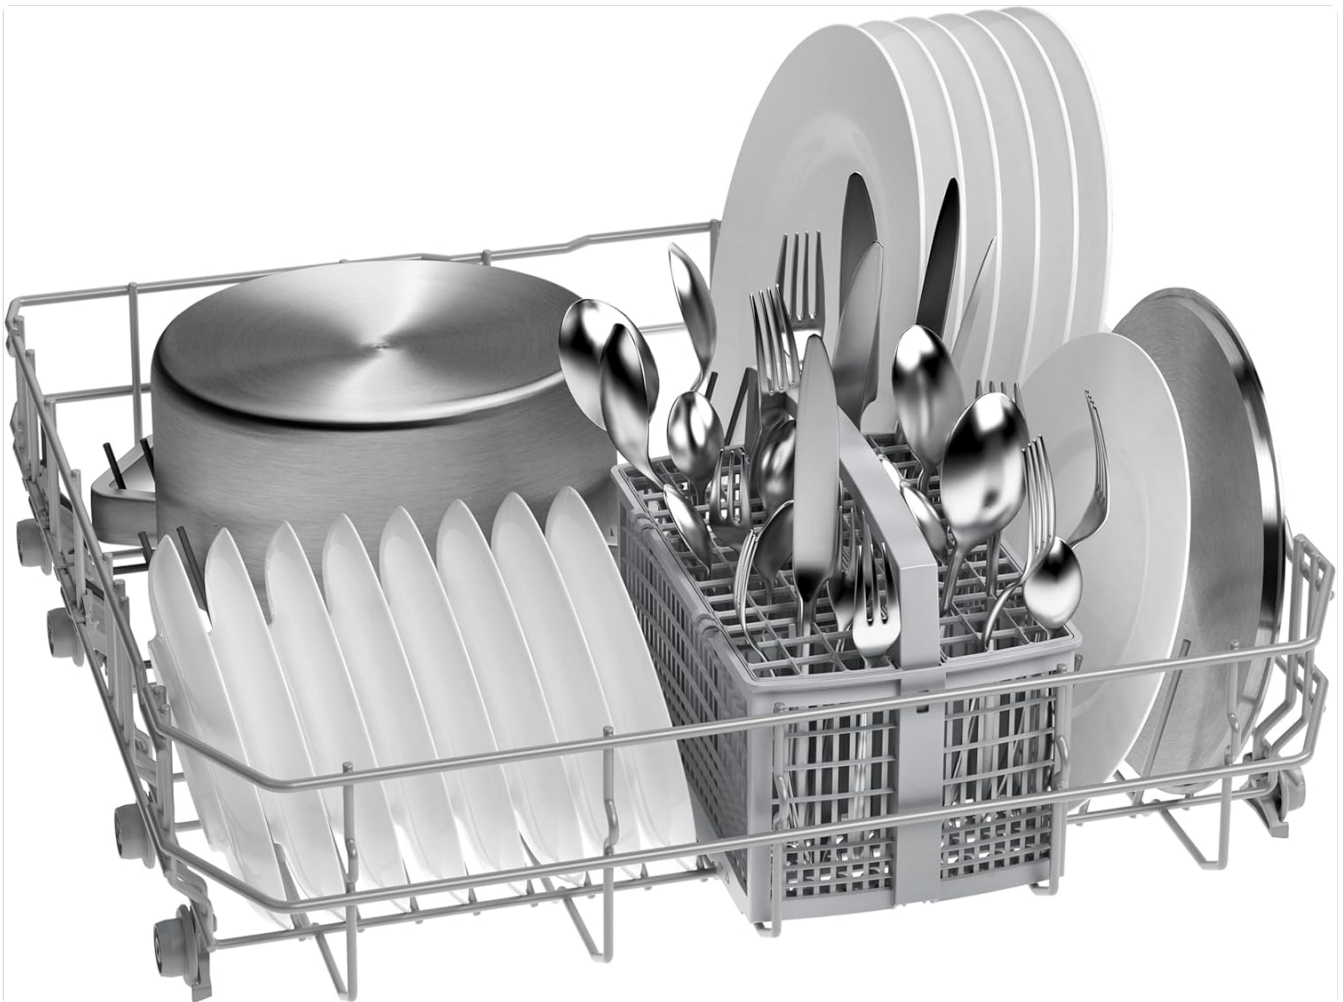

The lower rack provides ample space for larger items like dinner plates, pots, and pans, with a dedicated basket for cutlery.

4.3 Adding Detergent and Rinse Aid

- Open the detergent dispenser and add the recommended amount of dishwasher detergent (powder, liquid, or tablet).
- Fill the rinse aid dispenser when the indicator light signals it is low.



This image displays the detergent dispenser, where you can place detergent tablets or powder, and the separate compartment for rinse aid.

4.4 Selecting a Program

The Balay 3VF304NP offers 6 cycle options, including:

- **ECO 50°C:** The most efficient program for normally soiled dishes, optimizing water and energy consumption.
- **Auto:** Automatically adjusts wash settings based on the level of soiling.
- **Quick Program:** Ideal for lightly soiled dishes when time is limited.
- **Silent Program:** Operates at a reduced noise level (48 dB), suitable for nighttime use with optimized consumption.
- **Half Load:** For smaller loads, reducing water and energy consumption.

4.5 Starting a Program

- Close the dishwasher door firmly.
- Press the desired program button.
- The acoustic end-of-program alarm will sound when the cycle is complete.

5. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and longevity of your dishwasher.

5.1 Cleaning Filters

- Regularly check and clean the coarse and fine filters at the bottom of the dishwasher.
- Remove food debris and rinse under running water.

5.2 Cleaning Spray Arms

- Ensure the spray arm nozzles are not blocked by food particles.
- Remove and clean if necessary.

5.3 Adding Salt

- The dishwasher features a salt level indicator. Refill the salt dispenser with dishwasher salt when the indicator lights up.
- This helps to soften hard water and prevent limescale buildup.

5.4 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

If you encounter any issues with your dishwasher, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Dishes not clean	Improper loading, insufficient detergent, blocked spray arms, clogged filters.	Reload dishes correctly, add more detergent, clean spray arms, clean filters.
Water not draining	Clogged drain hose or filter, drain pump malfunction.	Check and clear drain hose/filter, contact service if pump is faulty.
Dishwasher not starting	Door not closed properly, power supply issue, program not selected.	Ensure door is latched, check power connection, select a program.
Excessive noise	Improper loading, foreign object in pump, leveling issues.	Rearrange dishes, check for foreign objects, ensure dishwasher is level.

7. SPECIFICATIONS

Key technical specifications for the Balay 3VF304NP Integrated Dishwasher.

Parameter	Value
Brand	Balay
Model Number	3VF304NP
Installation Type	Integrated
Capacity	12 Place Settings
Dimensions (H x W x D)	81.5 x 59.8 x 55 cm

Parameter	Value
Product Weight	33.1 kg
Noise Level	48 Decibels
Energy Efficiency Class	E
Water Consumption (ECO program)	9.5 Liters
Energy Consumption (ECO program)	92 kWh / 100 cycles
Voltage	230 Volts
Control Type	Push Button
Special Features	Adjustable Height, Salt Level Indicator, Leak Sensor (AquaStop)
Interior Material	Stainless Steel
Inlet Hose Length	165 cm
Outlet Hose Length	190 cm
Included Components	Power Cable, Inlet Hose, User Manual
Country of Origin	Poland

 


 

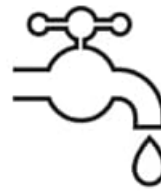 
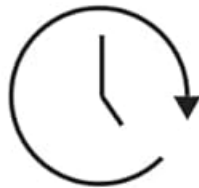 
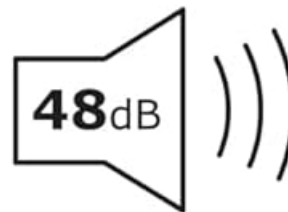 
ENERG



Balay

3VF304NP

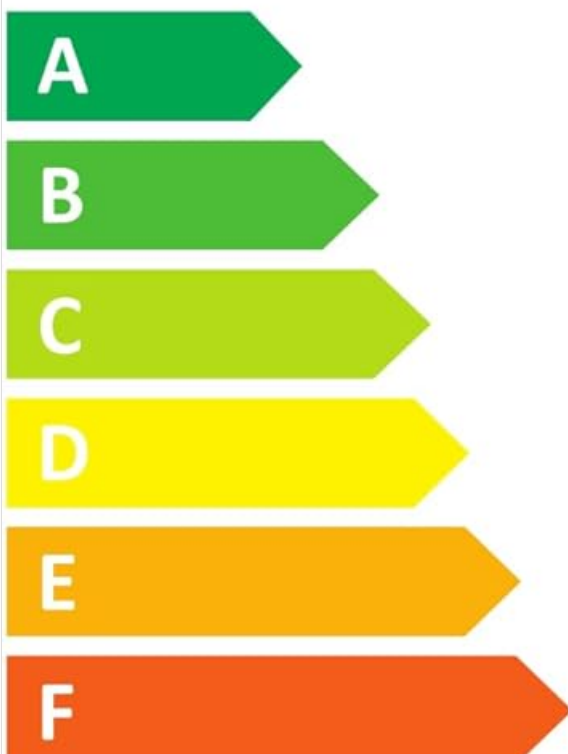

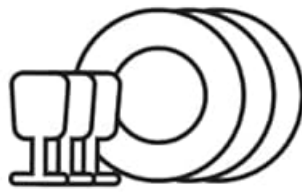G**92 kWh** / **12 x****9,5 L****3:30****ABCD**

2019/2017

The energy label provides key information about the dishwasher's efficiency, including its energy class, consumption, capacity, water usage, and noise level.

8. WARRANTY INFORMATION

The Balay 3VF304NP Integrated Dishwasher comes with a **three-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your appliance or contact Balay customer service.

9. SUPPORT AND SERVICE

For technical assistance, spare parts, or any questions regarding your Balay dishwasher, please contact our official technical service network. Balay is committed to providing comprehensive support with a guaranteed minimum repair price.

You can reach our customer support 24 hours a day, 7 days a week. Please visit the official Balay website for contact details and to locate your nearest service center.

Online Resources: www.balay.es