

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Moulinex](#) /
- › [Moulinex Optigrill+ XL Electric Indoor Grill Instruction Manual GI722D10](#)

Moulinex GI722D10

Moulinex Optigrill+ XL Electric Indoor Grill Instruction Manual

Model: GI722D10

INTRODUCTION

Welcome to the Moulinex Optigrill+ XL experience. This electric indoor grill is designed to provide perfect grilling results every time, from rare to well-done, for a variety of foods including meat, fish, and vegetables. Its patented technology automatically adjusts cooking time based on food thickness, ensuring consistent results. The XL cooking surface is ideal for families and entertaining. This manual provides essential information for the safe and efficient use of your Optigrill+ XL.



Image: The Moulinex Optigrill+ XL electric grill, ready for use.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

PRODUCT OVERVIEW

The Moulinex Optigrill+ XL features an extra-large cooking surface, making it suitable for preparing meals for up to 6 people. It incorporates patented technology to automatically adjust cooking cycles.

- **XL Cooking Surface:** Generous grilling area for larger quantities.
- **Automatic Sensor Cooking:** Measures food thickness and adapts cooking time.
- **9 Automatic Programs:** Dedicated settings for various food types.
- **Manual Mode:** For custom temperature control.
- **Cooking Level Indicator:** Color-coded light to show cooking progress.
- **Non-Stick Plates:** Easy food release and cleaning.
- **Large Drip Tray:** Collects fats and juices for healthier cooking and easy disposal.

FORMATO XL

FINO A 6 PERSONE



Image: The XL cooking surface of the Optigrill+ XL, suitable for up to 6 servings.

SETUP

1. **Unpack:** Carefully remove the grill and all accessories from the packaging.
2. **Initial Cleaning:** Before first use, wipe the grill plates and drip tray with a damp cloth. Ensure they are completely dry. The plates and drip tray are dishwasher safe.
3. **Placement:** Place the grill on a stable, flat, heat-resistant surface. Ensure there is adequate space around the grill for ventilation.
4. **Install Drip Tray:** Slide the drip tray into its designated slot at the front of the grill.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. The grill will emit a beep, and the indicator light will illuminate.

OPERATING INSTRUCTIONS

Pre-heating

Always pre-heat the grill before placing food on the plates.

1. Ensure the grill is plugged in and the drip tray is in place.
2. Select your desired cooking program (e.g., Beef, Chicken, Fish) or Manual Mode.
3. Press the "OK" button to start pre-heating. The indicator light will flash purple, and the grill will beep.
4. Wait for the pre-heating cycle to complete. The indicator light will turn solid purple and emit a beep, indicating it's ready to use.

Automatic Programs

The Optigrill+ XL features 9 automatic programs that adapt cooking time based on the thickness of your food.



Image: The control panel displaying the 9 automatic cooking programs.

- **Frozen Food:** For cooking food directly from frozen.
- **Bacon:** For crispy bacon.
- **Chicken:** For poultry pieces.
- **Hamburger:** For ground meat patties.

- **Sausage:** For various types of sausages.
- **Red Meat:** For steaks and other cuts of beef.
- **Fish:** For fillets and whole fish.
- **Seafood:** For shrimp, scallops, etc.
- **Vegetables:** For grilling various vegetables.

To use an automatic program:

1. Select the appropriate program using the mode button.
2. Press "OK" to start pre-heating.
3. Once pre-heating is complete (solid purple light), place your food on the grill plates.
4. Close the lid. The grill will automatically detect the thickness and begin cooking.



Image: The automatic sensor measuring food thickness for precise cooking.

Manual Mode

For foods not covered by automatic programs or for custom cooking, use the Manual Mode. This mode allows you to set a specific

temperature. Refer to the user manual for detailed temperature settings.

Cooking Level Indicator

The color-coded indicator light on the control panel shows the cooking progress:

- **Purple:** Pre-heating
- **Blue then Green:** Start of cooking
- **Yellow:** Rare
- **Orange:** Medium
- **Red:** Well-done

The grill will beep at each stage of cooking, allowing you to remove food at your preferred doneness.



Image: The color-coded cooking level indicator for precise doneness.

UNA COTTURA PERFETTA

AL SANGUE, MEDIA O BEN COTTA



Image: Steaks grilling on the Optigrill+ XL, demonstrating perfect cooking results.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance ensure the longevity and optimal performance of your Optigrill+ XL.

1. **Unplug and Cool:** Always unplug the grill from the power outlet and allow it to cool completely before cleaning.
2. **Remove Plates and Drip Tray:** Press the plate release buttons to detach the grill plates. Carefully remove the drip tray.
3. **Dishwasher Safe:** The grill plates and drip tray are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
4. **Clean Grill Body:** Wipe the exterior of the grill body with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the grill body in water or any other liquid.
5. **Storage:** Once clean and dry, store the grill in a clean, dry place.

TROUBLESHOOTING

If you encounter issues with your Optigrill+ XL, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|--------------------------------------|--|---|
| Grill does not turn on. | Not plugged in, power outlet issue, or damaged cord. | Ensure the grill is properly plugged into a working outlet. Check the power cord for damage. |
| Food is not cooking evenly. | Grill not pre-heated, plates not properly installed, or food placed incorrectly. | Always pre-heat the grill until the indicator light is solid purple. Ensure plates are securely clicked into place. Distribute food evenly on the plates. |
| Indicator light not changing colors. | Sensor obstruction or incorrect program selection. | Ensure food is placed directly on the plates and the lid is fully closed. Verify the correct automatic program is selected. |
| Excessive smoke. | Accumulated grease or food residue. | Clean the grill plates and drip tray thoroughly after each use. Ensure no food debris is left on the heating elements. |

SPECIFICATIONS

| Feature | Detail |
|-------------------------------|--|
| Brand | Moulinex |
| Model Number | GI722D10 |
| Color | Stainless Steel |
| Dimensions (L x W x H) | 44.5 x 44.5 x 17.5 cm (17.5 x 17.5 x 6.9 inches) |
| Weight | 6.87 Kilograms (15.15 lbs) |
| Power | 3680 Watts |
| Material | Stainless Steel |
| Special Features | Patented OPTIGRILL+ XL Technology, 9 Automatic Programs, Manual Mode, Non-stick Plates |
| Number of Settings | 9 (Automatic Programs) |



Image: Dimensions of the Moulinex Optigrill+ XL.

WARRANTY INFORMATION

For detailed warranty information, please refer to the warranty card included with your product or visit the official Moulinex website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you require assistance, have questions, or need to report a problem with your Moulinex Optigrill+ XL, please contact Moulinex customer support. Contact details can typically be found on the official Moulinex website or in the documentation provided with your product.

[Visit the Moulinex Store on Amazon](#)