

[Manuals.plus](#) /

› [TFA](#) /

› TFA Dostmann 60.1041.02 Analogue Alarm Clock Instruction Manual

TFA 60.1041.02

TFA Dostmann 60.1041.02 Analogue Alarm Clock Instruction Manual

Model: 60.1041.02 | Brand: TFA Dostmann

1. INTRODUCTION

Thank you for choosing the TFA Dostmann 60.1041.02 Analogue Alarm Clock. This manual provides detailed instructions for setting up, operating, and maintaining your new alarm clock. Please read these instructions carefully to ensure proper use and to fully benefit from its features.

This analogue alarm clock features a quiet sweep movement, backlight, light sensor for automatic night illumination, and a snooze function, making it suitable for both travel and home use.

2. PRODUCT FEATURES

- **Analogue Quartz Clock:** Provides accurate timekeeping.
- **Quiet Sweep Movement:** The second hand moves continuously, ensuring no disruptive ticking sound.
- **Backlight Function:** Full-surface illumination of the dial for easy reading in low light.
- **Automatic Night Lighting:** Integrated light sensor automatically activates a gentle backlight in dark environments (can be switched off).
- **Alarm with Snooze Function:** Gradually increasing alarm sound with a 4-minute snooze option.
- **Compact Design:** Ideal for use as a table clock or travel alarm clock.

3. PACKAGE CONTENTS

Upon unpacking, please ensure all items are present:

- TFA Dostmann 60.1041.02 Analogue Alarm Clock
- Instruction Manual

Note: 2 x 1.5V AA batteries are required and not included in the package.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment cover on the back of the alarm clock.
2. Open the cover by sliding it down or lifting it.
3. Insert two (2) 1.5V AA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.



Image 1: Rear view of the alarm clock, illustrating the battery compartment and control knobs for time and alarm settings.

4.2 Setting the Current Time

1. Locate the time setting knob on the back of the clock (usually the rightmost knob).
2. Rotate this knob in either direction until the hour and minute hands display the correct current time.

4.3 Setting the Alarm Time

1. Locate the alarm setting knob on the back of the clock (usually the leftmost knob).
2. Rotate this knob (typically counter-clockwise only) until the alarm hand points to your desired wake-up time.

5. OPERATING INSTRUCTIONS

5.1 Activating and Deactivating the Alarm

- To activate the alarm, slide the alarm ON/OFF switch (located on the side of the clock) upwards. A small green indicator may appear on the front dial.
- To deactivate the alarm, slide the alarm ON/OFF switch downwards. The green indicator will disappear.



Image 2: Front view of the alarm clock, displaying the analogue dial with hour, minute, and second hands. Note the small green indicator for alarm status.

5.2 Snooze Function

- When the alarm sounds, press the large "Snooze/Light" button located on the top of the clock.
- The alarm will pause for approximately 4 minutes and then sound again.
- To completely stop the alarm, slide the alarm ON/OFF switch on the side of the clock downwards.

5.3 Backlight and Light Sensor

- **Manual Backlight:** Press the "Snooze/Light" button on top of the clock to briefly illuminate the dial. This is useful for checking the time in the dark without activating the automatic night light.
- **Automatic Night Lighting:** On the back of the clock, locate the "backlight" switch (ON/OFF).
- Set the switch to "ON" to activate the light sensor. In dark environments, a gentle, continuous backlight will automatically illuminate the dial.
- Set the switch to "OFF" to disable the automatic night lighting.



Image 3: The alarm clock with its backlight illuminated, providing visibility in low-light conditions.

6. MAINTENANCE

6.1 Cleaning

- Wipe the clock with a soft, dry cloth.
- Do not use abrasive cleaners or solvents, as these may damage the surface.

6.2 Battery Replacement

- When the clock's display dims, the alarm weakens, or the clock stops functioning, it is time to replace the batteries.
- Follow the battery installation steps in Section 4.1.

- Dispose of used batteries responsibly according to local regulations.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not working / Hands not moving	Batteries are dead or incorrectly inserted.	Replace batteries with new 1.5V AA batteries, ensuring correct polarity.
Alarm does not sound	Alarm is not activated or batteries are low.	Ensure the alarm ON/OFF switch is in the "ON" position. Replace batteries if necessary.
Backlight not working (manual or automatic)	Batteries are low or automatic backlight is switched off.	Replace batteries. For automatic backlight, ensure the "backlight" switch on the rear is set to "ON".
Clock is ticking loudly (contrary to sweep movement feature)	This model features a quiet sweep movement. If ticking is audible, it might be an unusual unit or perceived differently by individuals.	Ensure the environment is quiet. If the ticking is genuinely loud and disruptive, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	60.1041.02
Brand	TFA Dostmann
Display Type	Analog
Movement Type	Quartz, Sweep Movement
Power Source	Battery Powered
Batteries Required	2 x 1.5V AA (not included)
Product Dimensions (L x W x H)	9.1 x 3.81 x 10.1 cm
Item Weight	130 Grams
Special Features	Illuminated, Light Sensor, Silent Clock, Snooze
Color	White
Room Type	Bedroom
Indoor/Outdoor Use	Indoor

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CZXLK2NM>

More documents and user manuals: <https://manuals.plus/>